


ComNav[®]

marine ltd

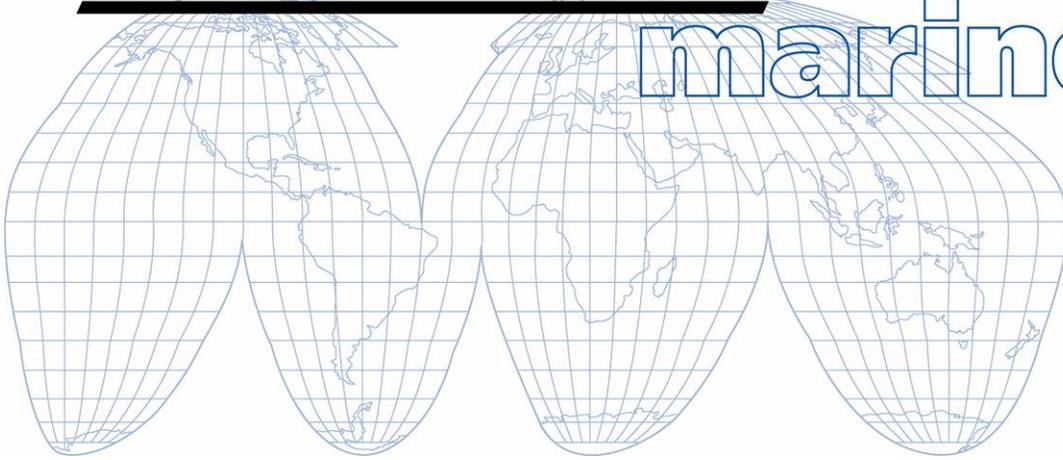

⌘ **Commander P2 & P2VS** ⌘ *Advanced Autopilot Systems*

Installation & Operation Manual



ISO 9001

PN 29010074 V4.1

Welcome

Congratulations on your purchase of a ComNav Marine P Series Commander Advanced Autopilot System!

Developed using ComNav's many years of experience in autopilot design, the Commander P2 & P2VS autopilots provide superior performance and advanced features, when compared to other products in their class.

At ComNav, we are proud of our prominence as a leader in the design and manufacture of marine autopilot systems. Our dedication to performance and reliability will ensure your satisfaction with your new autopilot.

ComNav Marine Ltd.

#15 – 13511 Crestwood Place
Richmond, B.C. V6V 2G1
Canada

Tel: 604-207-1600 • Fax: 604-207-8008

Web: www.ComNav.com • E-mail: Sales@ComNav.com • Service@ComNav.com

Warranty Notice

Prior to the installation and/or operation of the equipment, please take a moment to read and accept the conditions of the warranties as detailed in the **Warranty Information** section of this manual.

WARNING

This Autopilot is only an aid to navigation. Whenever underway, your vessel must always be under the control of a qualified and alert person who regularly and consistently ensures that the course and position of the vessel is correct and that the operating area is safe. You must always be in a position to resume manual control if the need to do so arises.

The performance of the Autopilot can be affected by many factors, including equipment failure, environmental conditions, and improper handling or use.

The Autopilot does not reduce your responsibility for the control of the boat when underway. Additionally, the Autopilot should never be used in areas where it is considered unsafe due to obstacles, other marine traffic, poor weather or sea conditions, or any other condition that could create a dangerous situation or where it may be unlawful.

Never place Magnetic material or equipment near magnetic or fluxgate compasses connected to the autopilot system.

Do not use WIND mode when wind conditions are strong or gusting over 25 knots. This may cause the vessel rudder to become overpowered and the vessel could broach or create other dangerous situations. Prior to commencing the gybe manoeuvre, you must ensure that the boom is properly centered and controlled. Take all necessary precautions to ensure that the boom does not strike any persons or objects since it may result in serious injury or damage.

General Notice

This document, ComNav part number 29010074 Version 4 Revision 1, is the approved Installation and Operation Manual for use with the ComNav Commander P2 and Commander P2VS Advanced Autopilot Systems.

Where versions of this manual exist in other languages, the English language version shall be considered authoritative.

Special Note

This manual applies ONLY to Commander P2 systems running firmware version numbers 4.0 and later, and Commander P2VS systems with version 1.0 or later.

For Commander P2 systems with earlier firmware versions (which have numerous differences from firmware version 4.0), please refer to version 3.1 of this manual.

Document History

Revision	Date	By	Description
1R1	27 April 2005	DC	First Release
2R0	04 January 2006	DC	Updated for new software release
2R1	29 August 2006	DC & DTO	<ul style="list-style-type: none"> corrected SPU ↔ NEMA 0183 Connection Diagram to show correct order of NAV 1 & 2 input pins corrected SPU ↔ PC Connection Diagrams to show use of NAV #1 input pins instead of NAV #2 added Document History table (this table)
2R2	07 September 2006	DTO	<ul style="list-style-type: none"> revised Control Head Connection description text, and associated Wiring Connections Diagram, to include the new alternative colour-coding of the cable
3R0	27 September 2007	DTO	<ul style="list-style-type: none"> brand name change added info on Vector GPS compasses updated compass installation & setup procedures updated General Specifications revised external Jog Control connection information updated information on SPU connectors & wiring Head menu figures are now easier-to-read “screen shots” Firmware Upgrade info now in separate kit Warranty statement is now in a separate document
3R1	14 December 2007	DTO	<ul style="list-style-type: none"> added Compass Safe Distance information, Table 19 re-organized “modes & menus” information for easier use moved all “using the Head” information into one area added Wind Vane with NX2 Instrument/Server wiring info, Figure 45 & Figure 46 deleted one MPN for fuse F1, Table 10 updated Error Messages lists, Appendix 3 updated dimensions, Appendix 7
	08 January 2009	DTO	<ul style="list-style-type: none"> edited & re-organized numerous sections, to improve readability & clarity added information on new & changed features & functions in the P2 firmware version 4.00 added information on the P2VS version 1.00 restored the Standard Autopilot Warranty statement
4R0	26 January 2011	JLU	<ul style="list-style-type: none"> added information on new compass setup procedure added Large vessel configuration
4R1	28 July 2011	FW	<ul style="list-style-type: none"> Revised Figure 35, Figure 43, Figure 62, Figure 124 & Figure 125 to “J9 OUT-A” above “J9 OUT-B”

About this Manual

This manual provides essential information for the safe and reliable operation of the Commander P2 and Commander P2VS Autopilot Systems.

Note: *all references to “Commander P2”, “P2”, “P Series” or “autopilot” in this manual should be taken as applying to either model, unless specified otherwise.*

You are urged to read this manual in its entirety before you use your autopilot for the first time, and to keep it handy until you become thoroughly familiar with the operation of your autopilot.

Typefaces, Common Phrases & Terms

Throughout this manual, you will see a number of different typefaces used, and several commonly-used words & phrases with very specific meanings, to describe concepts & actions that are fundamental to the operation of the autopilot. Please take a moment to become familiar with the following:

- System Component
Specific system components are capitalized.
Example: the Control Head
- Modes of Operation
Specific “modes of operation” are placed in bold uppercase lettering.
Example: **POWER STEER** mode.
- LCD Display
Text that appears in the LCD display is in quotation marks.
Example: “Waypoint Arrival”
- Button
Control Head buttons & the knob are in bold small-caps lettering.
Example: the **TURN** button
- Press or momentary press
Press and release the indicated button
- Double-press
Press and release the indicated button twice in rapid succession.
Although this sounds a little complicated, it is actually very easy to do. If you use a personal computer, you will find that this is similar to a “double-click” of the mouse buttons.
- Press and hold
Press and hold the indicated button for approximately 1 second.
- Press and maintain
Press and hold the indicated button for as long as required to achieve a desired result.

Manual Format

This manual has been formatted to be printed on both sides of the pages of the manual, and on standard North American Letter-size paper (8.5" x 11").

If you have obtained this manual as a soft-copy, please note that it is in Adobe® Portable Document Format ("pdf"), and so may be viewed & printed with Adobe Reader®, or compatible pdf-format viewers.

When printing this manual with Reader, you should select "duplex printing" (or the equivalent term used by your printer's software driver), in order to print it double-sided on the paper. If your printer does not have built-in duplexing capability, you can still print this manual double-sided by following the instructions that came with your printer for doing "hand duplexing".

You should also select the Auto-Rotate and Centre option in the Print Dialog box, de-select the Choose Paper Source by PDF page size option, and set Page Scaling to None (Reader's default setting is Shrink to Printable Area, which is printer-dependant, and usually ~97% – but no such shrinking is needed for this manual).

Table of Contents

Welcome	1
Warranty Notice	1
Document History.....	3
About this Manual.....	4
Table of Contents	6
List of Figures.....	13
List of Tables.....	15
How Autopilots Work	18
Manual Steering	18
An Autopilot System	19
Autopilot Operation.....	20
<i>Maintaining a Heading: AUTO Mode</i>	20
Changing Heading.....	21
Wind and Current Effects	22
<i>Following a Track: NAV Mode</i>	22
<i>Following a Track: AUTO/ALC Mode</i>	23
<i>Power Steer: "Drive by Wire"</i>	23
<i>More Information (for the Technically Inquisitive)</i>	23
System Overview	26
Control Head.....	27
Signal Processor Unit.....	28
Compasses	29
<i>Vector G2 and G2B GPS Compasses</i>	29
<i>Navigator G2 GPS Compasses Display</i>	30
<i>Fluxgate Compasses</i>	31
<i>Heading Rate Stabilizer</i>	32
<i>Magnetic Compass Sensor</i>	33
<i>Magnetic Compasses</i>	33
<i>45° Compass Transducer</i>	34
<i>Tri-Axis Rate Gyro Compass</i>	34
<i>Other Compasses</i>	34
Rudder Follower Units & Wind Sensors	35
<i>Standard Rotary Rudder Follower Unit & Rudder Linkage</i>	35
<i>Heavy Duty Rotary Rudder Follower Unit</i>	35
<i>Linear Rudder Follower Unit</i>	36
<i>Twin-Fin Wind Transducer</i>	36
Auxiliary Controllers	36
<i>CR-203 Remote</i>	37
<i>TS-203 Remote</i>	38
Other Controls & Indicators	39
<i>NFU Jog Steering Control</i>	39
<i>Rudder Angle Indicator (RAI)</i>	39
Control Head Mounting & Cover Kits.....	40
Rudder Drives and Interfaces.....	41
<i>CT7 Thruster Interface</i>	41
<i>Other Drive Boxes</i>	42
<i>Pumps & Drives</i>	43

Other Equipment.....	43
Installation	46
Basic Requirements	46
<i>Steering System</i>	46
<i>Power Supply</i>	46
<i>Special Tools</i>	46
<i>Fasteners</i>	46
Control Head.....	47
Electrical Connection	47
Signal Processor Unit.....	47
Electrical Connection	47
Compasses	48
<i>Compass Deviation</i>	48
<i>Common Installation Considerations</i>	48
<i>Magnetic Compass and Sensor</i>	50
Electrical Connection	50
<i>Fluxgate Compass</i>	51
Electrical Connection	51
<i>Heading Rate Stabilizer</i>	52
Electrical Connection	52
<i>45° Compass Transducer</i>	52
Electrical Connection	52
<i>Tri-Axis Rate Gyro Compass</i>	52
Electrical Connection	53
Rudder Follower Unit	54
<i>Rotary Rudder Follower Unit</i>	54
Electrical Connection	55
<i>Heavy Duty Rotary Rudder Follower Unit</i>	55
<i>Linear Rudder Follower Unit</i>	56
Electrical Connection	58
Other Equipment.....	59
Wiring the System.....	60
<i>Signal Processor Unit</i>	60
Connectors on the SPU.....	60
Wire Sizes	61
<i>Power Supply</i>	62
Power Supply Extension	63
Drive Box Power Supply.....	63
<i>Input & Output Connections</i>	64
Control Head.....	64
Auxiliary Controller(s).....	64
NFU Jog Steering Controls	65
Compasses	66
Wind Transducer.....	68
Rudder Follower Unit.....	70
Rudder Angle Indicators.....	70
<i>Drive Outputs</i>	71
Reversing DC Motor Hydraulic Systems	71
Linear Actuators or Mechanical Rotary Drives	71
Shunt-Field Reversing Motors.....	71

Standard Four-Way Solenoid-Activated Hydraulic Valves.....	72
Two-Speed Solenoid Valves	73
A.C. Solenoids.....	74
Proportional Solenoid Valves	74
Azimuth Drives, Surface Piercing Drives and Jet Drives	75
<i>External Alarm Output</i>	76
<i>Speed Mode & Timing Outputs</i>	78
<i>Navigation Data</i>	79
Signal Names.....	80
RS-422 Electrical Interface.....	80
<i>Typical RS-422 Signals</i>	81
RS-232 Electrical Signals.....	82
Status LEDs	82
<i>Other Connections</i>	82
Thruster Interface.....	82
ComNav Network.....	82
Final Steps & Post-Installation Checks.....	83
<i>Electrical Checks</i>	83
<i>Completing the Wiring</i>	83
Setting Up	86
<i>Dockside Setup Menu</i>	86
Reset.....	87
Vessel Type.....	87
Compass Setup.....	88
Drive Setup.....	88
Exit	88
Alarm O/P (Alarm Output)	88
Thrust Type	88
Thrust MIN.....	88
Thrust MAX	88
Language	88
Configure Sys. (Configure System).....	89
Setup Procedures.....	90
<i>Vessel Type</i>	90
<i>Drive Setup</i>	91
<i>Compass Setup – Dockside</i>	93
Analog Compass	93
Digital Compass	94
NAV 1 Port	94
NAV1 or NAV2 Port for general NMEA Compass	94
<i>Bandwidth of an NMEA Compass Connection</i>	95
<i>Compass Setup – On the Water</i>	98
Compensation for Magnetic Deviation.....	98
<i>Magnetic Compass Sensor</i>	98
<i>Heading Rate Stabilizer</i>	99
<i>ComNav Fluxgate Compass and other fluxgate compasses</i>	100
<i>45 ° Compass</i>	100
<i>Tri-Axis Rate Gyro Compass</i>	100
<i>Other NMEA Compasses</i>	100
Calibrating for Compass Offset	101

<i>All Compass Types</i>	101
<i>Magnetic Sensor</i>	102
<i>Compass Setup – Final Steps</i>	102
Sea Trials	103
<i>Sea Trial Procedure</i>	103
Adjust Rudder Gain & Counter Rudder for Hi Speed	103
<i>Adjust Turn Rate for Hi Speed</i>	105
<i>Adjust Seastate for Hi Speed</i>	105
<i>Adjust Rudder Gain, Counter Rudder, Turn Rate and Seastate for Lo Speed</i>	105
<i>Adjust Speed Trip Point</i>	105
Adjusting for Rougher Sea Conditions	106
Basic Operations	110
The Control Head's LCD Screen & Buttons	110
Operating the System	112
<i>Operating Modes – Overview</i>	112
<i>Mode Menus</i>	112
<i>Rudder Angle Indicator (RAI)</i>	114
<i>Alarm Clear</i>	114
<i>Power On</i>	115
<i>Power Off</i>	115
STANDBY Mode	116
<i>Standby Menu</i>	117
Station Lock	117
Default Turn	117
Compass Source	117
Compass Cal (Compass Calibration)	118
NMEA Hdg Type (NMEA Heading Type)	118
Backlight Level	118
Contrast (monochrome Head only)	118
Graphics (monochrome Head) or Display (colour Head)	119
Watch Alarm	120
Fishzag Time	120
Battery	120
POWER STEER Mode	121
<i>Power Steer Menu</i>	122
P.Str Limits (Power Steer Rudder Limits)	122
Auto/Nav Limits	122
RAI Offset	122
AUTO Mode	123
Notes on AUTO Mode	123
<i>Auto Menu</i>	124
Rudder Gain	124
<i>Hi & Lo Speed Rudder Gain</i>	125
Counter Rudder	125
<i>Hi & Lo Speed Counter Rudder</i>	125
Seastate	126
Turn Rate	126
Parameter Set	126
Speed Trip Pt (Speed Trip Point)	127
Speed Source	127

ALC (Automatic Leeway Correction)	127
Thruster Assist	127
Thruster Gain	127
Helm Delay.....	128
NAV Mode.....	129
<i>NAV Highway Display</i>	130
<i>Notes on NAV Mode</i>	130
<i>Understanding NAV Mode</i>	131
Checking the Navigation Data.....	131
Correction Methods	132
<i>CTS – Steering a Direct Bearing</i>	133
<i>XTE – Steering Quickly Back to a Track</i>	134
<i>Both – Steering Smoothly Back to a Track</i>	136
<i>An example of NAV Mode in Operation</i>	137
<i>Nav Menu</i>	138
Nav Source.....	138
XTE Limit (Cross-Track Error Limit)	138
Waypoint Arrival	138
Correction.....	139
XTE Sense (Cross-Track Error Sense)	139
Max Correction	139
Dodge Turns	140
<i>Dodge Centre</i>	141
Jog Steering Turns.....	142
Commander P2VS Operations.....	143
<i>Cautions</i>	143
<i>P2-Equivalent Operation</i>	145
Advanced Operations	149
WORK Mode	149
<i>Automatic WORK Mode</i>	149
<i>Manual WORK Mode</i>	150
<i>Work Menu</i>	151
Rudder Bias.....	151
Autotrim.....	151
Work Trip Pt. (Work Trip Point)	151
Rudder Scale (Rudder Scale Factor)	151
Work Mode State.....	151
WIND Mode.....	152
Changing Wind Angle.....	153
Tack & Gybe Inhibit.....	153
Low Wind Speeds	153
<i>WIND-Points Mode</i>	154
Changing Point of Sail.....	154
Tack & Gybe Inhibit.....	154
Boundaries of the Points of Sail	156
<i>Tacking</i>	157
<i>Gybing</i>	159
<i>Wind Menu</i>	161
Wind Source.....	161
Wind Shift (Wind Shift Alarm).....	162

Wind Shift Delay.....	162
Preset Tack Angle.....	162
Close Haul Def (Close Haul Definition)	162
Close Reach Def (Close Reach Definition)	162
Beam Reach Def (Beam Reach Definition).....	162
Broad Reach Def (Broad Reach Definition).....	162
Gybe Hold Point (Gybe Hold Point Definition).....	162
Special Turns.....	163
<i>U-Turn</i>	164
<i>Circle Turn</i>	165
<i>M.O.B. – Man Over-Board</i>	166
<i>Fishzag</i>	167
<i>Pretack (Preset-Tack)</i>	168
Multiple Control Heads & Auxiliary Controllers.....	169
<i>Station Lock/Unlock</i>	169
Watch Alarm & External Alarm.....	170
<i>Configuring the Watch Alarm</i>	170
<i>Configuring the External Alarm</i>	170
<i>Using the Watch Alarm</i>	171
<i>Changing the Password</i>	172
<i>Entering the Password</i>	173
Care & Maintenance	177
Cleaning and Appearance.....	177
Periodic Checks	177
<i>Electrical & Mechanical Checks</i>	177
<i>Hydraulic Checks</i>	177
Manual Steering Operation	177
Air Trapped in the Hydraulic System.....	177
Fuse Replacement.....	178
Appendix 1	181
Interfacing to a PC	181
<i>PC COM Ports</i>	181
DE9 Connection.....	182
DB25 Connection	182
D Connector Pinouts.....	183
Appendix 2	185
NMEA 0183 Sentences Accepted and Transmitted by the Autopilot.....	185
<i>Sentences Accepted</i>	185
Sentence & Data Priority.....	186
<i>Sentences Transmitted</i>	188
Heading & Status	188
<i>Heading Output</i>	188
<i>Status Output</i>	189
<i>Configuration Save & Restore</i>	190
Appendix 3	195
Error Messages.....	195
<i>Critical Errors</i>	195
<i>Severe Errors</i>	196
<i>Warnings</i>	197

Appendix 4	199
Auxiliary Head / Remote Power On.....	199
Appendix 5	201
Diagnostic LEDs.....	201
Appendix 6	203
Upgrading Firmware.....	203
<i>Transferring the System Configuration & Parameters</i>	<i>203</i>
Appendix 7	205
General Specifications	205
Compass Safe Distances.....	206
Warranty Information	207
Index	213
Settings & Notes	219
Default & User Settings.....	219
Notes.....	222

List of Figures

Figure 1 – Basic Autopilot System	19
Figure 2 – Heading Change in AUTO Mode	21
Figure 3 – Commander P2 System Block Diagram.....	26
Figure 4 – Control Heads	27
Figure 5 – The Commander P2 SPU (with Wiring Cover Removed).....	28
Figure 6 – Vector G2 GPS Compass	29
Figure 7 – Navigator G2 Display Head.....	30
Figure 8 – Navigator G2 Distribution Unit.....	30
Figure 9 – Fluxgate Compass	31
Figure 10 – Heading Rate Stabilizer	32
Figure 11 – Magnetic Compass Sensor	33
Figure 12 – Externally Gimballed Magnetic Compass with Binnacle.....	33
Figure 13 – 45° Compass Transducer	34
Figure 14 – Tri-Axis Rate Gyro Compass	34
Figure 15 – Standard Rotary RFU.....	35
Figure 16 – Heavy Duty Rotary RFU.....	35
Figure 17 – Linear RFU.....	36
Figure 18 – Twin-Fin Wind Transducer.....	36
Figure 19 – CR-203 Handheld Remote.....	37
Figure 20 – TS-203 Fixed Remote.....	38
Figure 21 – NFU Jog Steering Control.....	39
Figure 22 – External Rudder Angle Indicator (76 mm Model)	39
Figure 23 – Control Head Mounts & Cover	40
Figure 24 – CT7 Interface	41
Figure 25 – Drive Boxes to meet all needs	42
Figure 26 – Hydraulic Pump & Solenoid Valve	43
Figure 27 – Cable Drives	43
Figure 28 – Fluxgate Compass Mounting	51
Figure 29 – RFU Linkage Geometry	55
Figure 30 – Typical Arrangement of Linear RFU on an Outboard's Steering Cylinder.....	56
Figure 31 – Band Clamp and Plastic Brackets.....	57
Figure 32 – Installed Arrangement of Brackets.....	57
Figure 33 – Fasteners, Stainless Bracket Arrangement.....	58
Figure 34 – Removal of the SPU Wiring Cover.....	60
Figure 35 – SPU Connector Wiring Label	60
Figure 36 – Typical Power Connection to SPU.....	62
Figure 37 – Reducing Supply Voltage Losses	63
Figure 38 – Typical Battery Connection to Drive Boxes.....	63
Figure 39 – Wiring Connections for Control Head, Handheld Remotes, and Fixed Remotes	64
Figure 40 – Wiring Connections for Jog Controls.....	65
Figure 41 – Wiring Connections for Magnetic Sensor, Fluxgate Compass or HRS.....	66
Figure 42 – Wiring Connections for 45° Compass Transducer	67
Figure 43 – Wiring Connections for Tri-Axis Rate Gyro Compass	67
Figure 44 – Wiring Connections for Twin-Fin Wind Transducer.....	68
Figure 45 – Wind Transducer with NX2 Wind Data Instrument.....	69
Figure 46 – Wind Transducer with Classic Nexus or NX2 Network Server	69
Figure 47 – Wiring Connections for RFUs.....	70
Figure 48 – Wiring Connections for Rudder Angle Indicators	70
Figure 49 – Wiring Connections for Reversing DC Motors.....	71
Figure 50 – Wiring Connections for Linear Actuators or Mechanical Rotary Drives.....	71
Figure 51 – Wiring Connections for Shunt Field Reversing Motors.....	72
Figure 52 – Wiring Connections for Standard Four-Way Solenoid Valves	72

Figure 53 – Wiring Connections for Constant Running Electric Pump	73
Figure 54 – Wiring Connections for Two-Speed Solenoid Valves	73
Figure 55 – Wiring Connections for A.C. Solenoids	74
Figure 56 – Wiring Connections for Proportional Solenoid Valves	74
Figure 57 – Wiring Connections for Isolation Amplifiers	75
Figure 58 – External Alarm, using SW'D B- Output	76
Figure 59 – External Alarm, using SW'D B+ Output	76
Figure 60 – External Alarm, SW'D B- Output with Power Fail Option	77
Figure 61 – External Alarm, SW'D B+ Output with Power Fail Option	77
Figure 62 – Typical NMEA 0183 Connections	79
Figure 63 – Typical RS-422 Signals	81
Figure 64 – Entering Dockside Setup	86
Figure 65 – Dockside Setup menu	87
Figure 66 – Set Vessel type	90
Figure 67 – Set Compass Type in Compass Configuration menu	93
Figure 68 – Using the Control Head	110
Figure 69 – A Typical Menu	113
Figure 70 – Power On Sequence	115
Figure 71 – Power Off Sequence	115
Figure 72 – Typical STANDBY Mode Screen	116
Figure 73 – Standby Menu	117
Figure 74 – Monochrome LCD: Normal & Reversed Display	119
Figure 75 – Colour LCD: B & C Colour Schemes	119
Figure 76 – Typical POWER STEER Mode Screen	121
Figure 77 – Power Steer Menu	122
Figure 78 – Typical AUTO Mode Screen	123
Figure 79 – Auto Menu	124
Figure 80 – Guidelines for setting Rudder Gain	125
Figure 81 – Guidelines for setting Counter Rudder	125
Figure 82 – Hi (AUTO) and Lo Speed Indicators (to left of the Rudder Angle Indicator)	126
Figure 83 – Typical AUTO Mode Screen	127
Figure 84 – Typical NAV Mode Screen (Normal Display)	129
Figure 85 – Typical NAV Mode Highway Screen	130
Figure 86 – Steering with Correction set to CTS	133
Figure 87 – Steering with Correction set to XTE	134
Figure 88 – Response of Boat to a Large Cross-Track Error	135
Figure 89 – Steering with Correction set to Both	136
Figure 90 – Nav Menu	138
Figure 91 – A Dodge in Progress (in AUTO Mode)	140
Figure 92 – Boat Track During a Dodge Manoeuvre in AUTO Mode	140
Figure 93 – Holding at a Heading Part-way Through a Dodge Turn	141
Figure 94 – Typical Jog Control Activated Screen	142
Figure 95 – Typical WORK Mode Screen (Engaged)	149
Figure 96 – WORK Mode Menu	151
Figure 97 – Typical WIND Mode Screen (Normal Display)	152
Figure 98 – Typical WIND-Points Mode Screen	154
Figure 99 – Commanded Wind Angle of 90°	155
Figure 100 – Outline Arrow shows the Commanded Point of Sail	155
Figure 101 – Points of Sail	156
Figure 102 – Starting a Tack in WIND (left) and WIND-Points (right) Modes	157
Figure 103 – Wind Angle Limits to Start a Tack	157
Figure 104 – Wind Angle Limits for Tacking	158
Figure 105 – Starting a Gybe in WIND (left) and WIND-Points (right) Modes	159
Figure 106 – Wind Angle Limits to Start a Gybe	159

Figure 107 – Wind Angle Limits for Gybing.....	160
Figure 108 – Wind Menu.....	161
Figure 109 – Typical Special Turn Query.....	163
Figure 110 – U-Turn Query.....	164
Figure 111 – U-Turn Boat Path.....	164
Figure 112 – Circle Turn Query.....	165
Figure 113 – Circle Turn Boat Path.....	165
Figure 114 – M.O.B. Turn Query.....	166
Figure 115 – M.O.B. Turn Boat Path.....	166
Figure 116 – Fishzag Turn Query.....	167
Figure 117 – Fishzag Turn.....	167
Figure 118 – PreTack Turn Query.....	168
Figure 119 – Station Lock Icon on In-Command (left) and Repeater Auxiliary Control Head (right).....	169
Figure 120 – External Alarm Configuration.....	170
Figure 121 – External Alarm Type Configuration.....	171
Figure 122 – New Password Pop-Up Window.....	172
Figure 123 – Password Query Pop-Up Window.....	173
Figure 124 – Connection to a PC with a DE9-S Connector.....	182
Figure 125 – Connection to a PC with a DB25-S Connector.....	182
Figure 126 – DE9 & DB25 Pin Numbering.....	183
Figure 127 – JP12 & JP13 in Factory Default Position (left) and After Moving Shunts (right).....	199

List of Tables

Table 1 – SPU Connector Ratings.....	61
Table 2 – Recommended Minimum Wire Gauges.....	61
Table 3 – Speed Mode & Timing Outputs.....	78
Table 4 – NMEA Signal Translation Guide.....	80
Table 5 – Vessel types.....	88
Table 6 – Compass types.....	97
Table 7 – NAV Mode Correction Methods.....	132
Table 8 – Boundaries Between Points of Sail.....	156
Table 9 – Wind Source Selection.....	161
Table 10 – Fuse Replacement Guide.....	178
Table 11 – NMEA 0183 Sentences Accepted by the Commander P2.....	185
Table 12 - NMEA Sentence Priority.....	187
Table 13 – Configuration Save & Restore Sentences.....	193
Table 14 – Critical Error Messages.....	195
Table 15 – Severe Error Messages.....	196
Table 16 – Warning Messages.....	197
Table 17 – Diagnostic LEDs.....	201
Table 18 – General Specifications.....	205
Table 19 – Compass Safe Distances.....	206
Table 20 – Default & User Settings.....	221

Introduction

How Autopilots Work

The purpose of this introductory section is to describe briefly what an autopilot does, and some of the things you should expect when using an autopilot with your boat.

Manual Steering

Every boat has unique design dynamics, which depend on its shape and dimensions, and on current speed, loading, and sea conditions. The net result is that every boat (or rather, every unique boat *design*) “steers” in a unique way.

To understand what an autopilot does when it is steering your boat, it is helpful to think for a moment about steering the boat by hand.

- When you are holding the boat on some Heading, you know, from instinct & experience, how much rudder to apply, and how fast to apply it, to keep the boat on-course. Corrections are usually just a small, quick movement of the helm to one side, then back to the dead-ahead position.
- You won't always try to correct when the boat rolls or accelerates off a wave, especially in heavy seas – because when the boat rolls back the other direction, it will usually come right back on-course.

Instead, your experience lets you allow the boat to yaw those necessary degrees on either side of the Heading, to reduce the fight.

- To turn the boat to a new Heading, instinct & experience again tell you how much rudder to use, and how fast, to get the boat turning at your normal rate of turn.

If the boat is not turning as rapidly as you want (for example, with a cross-wind or cross-current holding back the bow), you increase the amount of rudder a bit.

On the other hand, if the boat is turning too fast, you reduce the applied rudder a bit.

You then gradually reduce the applied rudder, as the boat approaches the desired Heading.

You might even put the helm over opposite for a moment, to stop the boat swing more quickly – in order to come to the desired Heading without overshoot.

The single most basic purpose of an autopilot is to do the same as you would ... let the boat “work with the seas”, yet still maintain as straight a Track as possible in the current sea conditions, on the desired Heading or Course.

The P Series Autopilot Systems use the latest generation of ComNav's carefully-designed, well-proven steering control algorithms¹, which are based on our many years of designing & manufacturing autopilots.

There are a number of parameters used in the steering algorithms, collectively referred to as “the Steering Parameters”. The Commander P2 & P2VS have been tested on a wide variety of boats, of different types and sizes. The default settings for the Steering Parameters are average values derived from that testing, and provide a good starting place for most boats.

During Sea Trials, and later on normal operation, you may want to adjust some of those values, so that they better match your boat's unique design dynamics.

¹ ... however, the information in this section can be applied in general to any ComNav autopilot, and is not necessarily specific to the P Series.

An Autopilot System

This is a block diagram of the major components of an autopilot system:

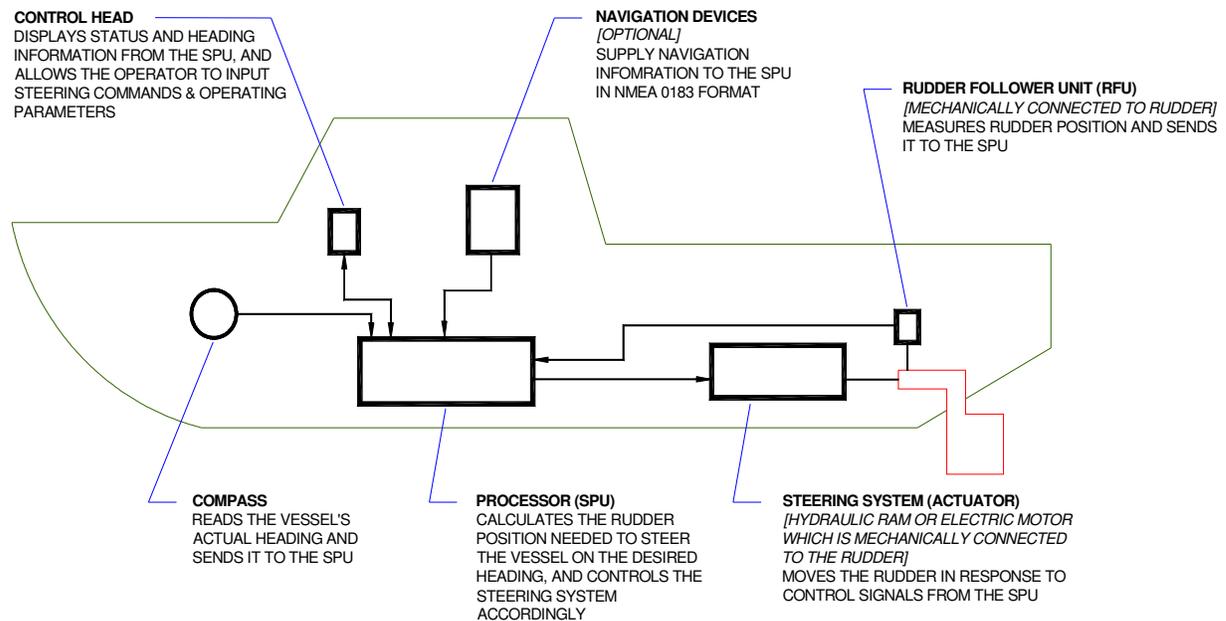


Figure 1 – Basic Autopilot System

The Compass indicates the direction in which the boat is pointed – often referred to as the “actual Heading”. Depending on the type of boat & installed equipment, the Compass may be a magnetic compass, an electronic fluxgate compass, a gyroscopic compass, or a GPS Compass.

ⓘ *A reliable Compass is **absolutely vital** to an autopilot – because, without it, the autopilot has no way of knowing which way the boat is headed.*

The actual Heading is fed electronically from the Compass to the Processor (SPU) – which is the “brains” of the autopilot. The SPU contains the microcontroller(s) & other electronic hardware, and the sophisticated control software necessary to steer the boat on any *desired Heading*.

The Control Head, normally located in the wheelhouse, is the interface between the boat’s operator (that’s you ...) and the autopilot. The Control Head displays information about what the autopilot is doing, and it has various controls (buttons &/or knobs) that allow you to give commands to the autopilot.

The final part of the picture is the Steering System. In order for the autopilot to steer the boat, there must be a steering system capable of moving the rudder independently of the ship’s helm. This might be a hydraulic ram that is connected to the rudder post or tiller quadrant, or an electric motor connected to the steering cables.

But no matter what type of steering system the boat uses, electronic signals from the SPU tell the system to move the rudder, when needed – how far and in which direction.

Your autopilot may also have a Rudder Follower Unit (also called a Rudder Feedback Unit, or just “RFU”), a device that tells the SPU what position the rudder is in at any given time.

Autopilot Operation

Maintaining a Heading: AUTO Mode

Following a Track or Course you want to be on is simple, with a ComNav Autopilot:

- Put the autopilot into **AUTO** mode.
- Tell the autopilot the Heading you want to follow², using the Control Head.
- The autopilot then moves the rudder from side to side as required, to put & keep the boat on that Heading ... just like you would if you were steering by hand.

But as you might expect, inside the autopilot it's a bit more complicated than that!

Here's how it works:

The steering control algorithms running in the firmware on the SPU's microcomputer are constantly comparing – many times per second – the boat's actual Heading (as indicated by the Compass) to the desired Heading you have given it.

If there is a difference, the algorithms then calculate how much to move the rudder, to bring the boat back onto the desired Heading. The amount of corrective rudder movement is based on:

- How much the Headings differ.
- How long there has been a difference, & by how much.
- How rapidly the difference is changing.

Here's an example which illustrates how the autopilot maintains a Heading in **AUTO** mode. Let's say the boat is a few degrees off-course to Port:

- The SPU will signal the steering system to move the rudder to Starboard, by a few degrees.

How many degrees the rudder moves depends on the type of boat, and its dynamics (which you have specified & tested when you set up the autopilot).

Note: *on a Commander P2, or P2VS with an RFU, the SPU verifies that the rudder has moved, by reading its position from the RFU. On a P2VS without an RFU, the SPU estimates the rudder position by computing it, based on various factors determined during setup.*

- The boat begins to turn to Starboard.
- As the boat turns, the difference between the desired and actual Heading gets smaller, and as it does, the SPU then starts to 'back off' the rudder – i.e., move it back to centre – so that the boat does not overshoot the desired Heading.
- If the boat isn't coming back on-course very quickly, the SPU's algorithms will not back the rudder off right away, and might even move the rudder a bit farther to Starboard for a while.
- On the other hand, if the boat is coming back too quickly, the rudder will be moved quickly back to dead-ahead – or maybe even a bit to Port for a few seconds.
- Eventually, the actual Heading will match the desired Heading.
- If (when!) the boat falls off-course again, the same sequence will be repeated.

In summary, if you look back at page 18, you can see that this is all very much like steering by hand. But it's all happening many times per second, much more precisely & rapidly than a human can manage – and without coffee breaks or naps, either!

² ComNav Autopilots have an important safety feature: when you first enter **AUTO** mode, the autopilot will use the boat's current Heading as the desired Heading, so there's not a turn right away ... until you order one, with the Control Head.

Changing Heading

That's easy, too!

Let's say, for example, that the autopilot is steering your boat Southwest, and you now wish to change direction to Southeast (see Figure 2, below).

To initiate the turn in **AUTO** mode, you would turn the knob on the Control Head to set the desired Heading (as shown on the Control Head's display screen) to 135° ... Southeast.

After that, the autopilot behaves much the same as when maintaining a Heading – but with an initially large "Heading error" (90° to Starboard, in this example) that must be dealt with:

- When the SPU moves the Rudder to Port, it will probably be by quite a bit, maybe even all the way to the stops – but not so much that the boat turns too rapidly.
- Eventually, the actual Heading will match the desired Heading ... and the boat will then be going Southeast.
- The SPU will keep steering the boat on the 135° "new" Heading – i.e., maintaining that Heading, as described previously – until you select some other Heading.

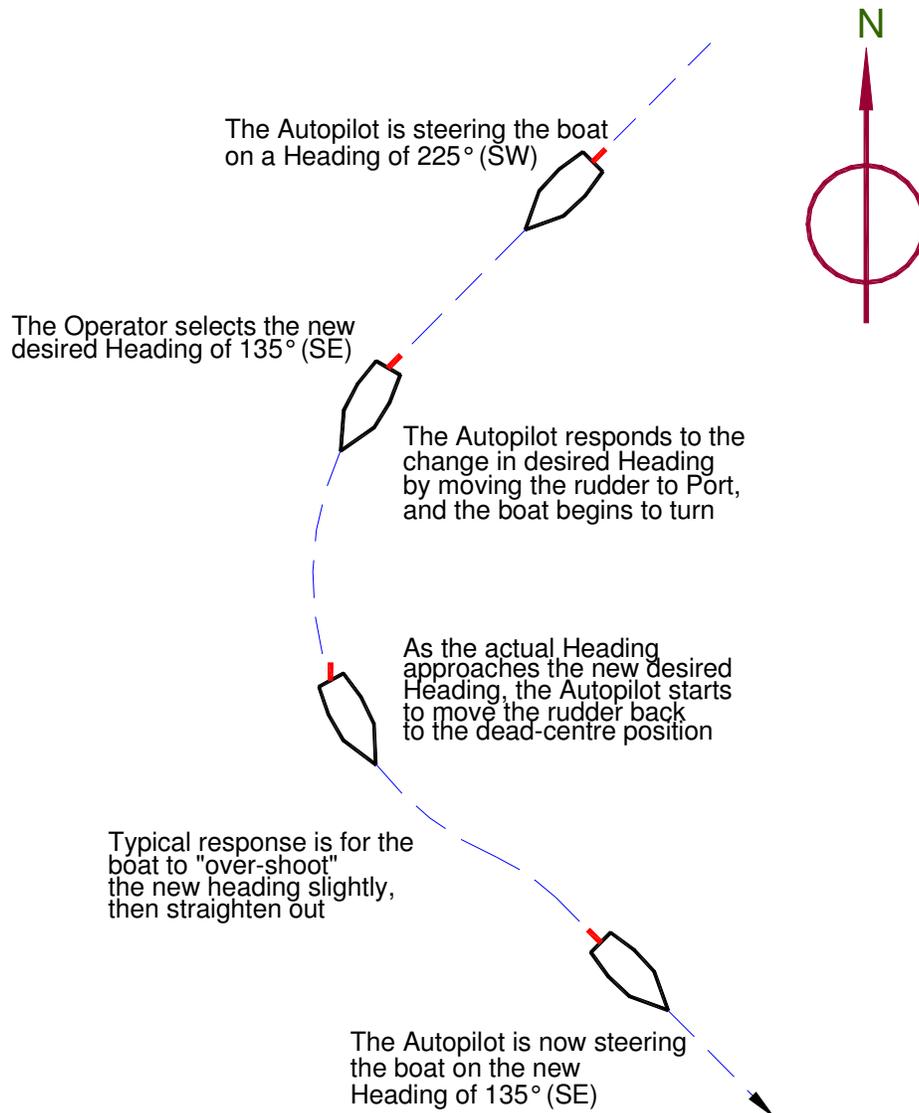


Figure 2 – Heading Change in AUTO Mode

Wind and Current Effects

If your boat encounters a crosswind, and/or a tidal current, at some angle to the desired Heading, it will be pushed away – in the direction of the wind or current. And so, the autopilot will be constantly making Heading corrections with the rudder, as it tries to maintain your desired Heading.

As that condition persists, the SPU will gradually begin to maintain the rudder a few degrees to Port or Starboard of the centred position, to counter the effect of wind and/or current. This feature, known as *Automatic Rudder Trim*, will keep your boat pointed in the right direction, despite the wind or current.

However, one side-effect of Auto-Trim is that your boat may not follow the *Track* you want – it will maintain your desired Heading, but the Track will “slip” sideways in the direction of the crosswind and/or current. This potential problem can be solved by using another mode that ComNav Autopilots provide: **NAV** mode, described next.

Following a Track: NAV Mode

So far, we have seen how an autopilot operates in **AUTO** mode: a new *desired Heading* must be selected on the Control Head each time you wish to change direction. This is handy for short trips or when you know the direct course to your objective.

But for longer trips, which often involve a number of “legs” at different headings, it would be useful to be able to have your autopilot steer your boat along all the legs, in sequence.

ComNav autopilots allow you to do just that, with **NAV** mode.

The autopilot must be connected to an external source of navigation information (commands & data) – such as a chart plotter, or a Navigation program running on a PC. A source of position data is required, too; it may be built into the external Navigation System, or it may be another device or system: a GPS receiver (such as a ComNav Vector GPS Compass), a LORAN C receiver, etc.³

ComNav Autopilots implement the industry-standard NMEA 0183 protocol for reception & transmission of navigation information. Almost all modern Navigation System equipment complies with NMEA 0183, so interfacing to a ComNav autopilot is relatively simple.

A long passage will consist of a series of *waypoints*, which are specific locations on the Earth’s surface (hopefully on the water!) defined by their Latitude & Longitude. These waypoints define the *route* which you want the boat to travel on, from your starting position to your destination. You enter them into the external Navigation System when creating the route.

That system determines the current location of the boat (from the source of position data), and then calculates the course that must be steered in order to reach the next waypoint.

When the Autopilot is switched into **NAV** mode, it begins to look for some specific navigation information from the Navigation System: the course to steer to the next waypoint, and the Cross-Track Error (which is the distance from the boat to the desired Track from the last waypoint to the next one). Using these two pieces of information, the autopilot steers the boat on the shortest possible Track to the next waypoint.

Crosswinds and/or currents are compensated for automatically each time the Navigation System updates the Cross-Track Error. This is why **NAV** mode is the answer to the “track slip” problem that can occur in **AUTO** mode, when a crosswind/current exists.

When a waypoint is reached, the Navigation System sends the SPU the next set of navigation information – for the next waypoint – and the SPU then turns the boat to head to that next waypoint.

³ ... all such external devices are in general referred to in this manual using the generic term *Navigation System*.

Following a Track: AUTO/ALC Mode

Some ComNav autopilots (including the P Series), provide another way to keep your boat on a specific *Track*: Automatic Leeway Correction.

This feature can be turned on in **AUTO** mode.

ALC is similar to **NAV** mode, in that it uses NMEA 0183 Latitude & Longitude data to sense if the boat is following the desired Track.

Unlike **NAV** mode, however, a ComNav autopilot with the **ALC** feature only needs Latitude & Longitude data in **AUTO/ALC** mode. It does not need Cross-Track Error data from the external Navigation System, nor to have any waypoints set in the system. The **ALC** feature calculates the Cross-Track Error on its own, using the *desired Heading* active at the point in time when **AUTO/ALC** mode is first engaged.

Power Steer: “Drive by Wire”

Most ComNav autopilots have a **POWER STEER** mode, which provides a way for the user to control the rudder directly. In effect, the autopilot acts as a sort of “electronic steering wheel”, allowing the operator to steer the boat manually, in a similar way as when using a standard manual steering wheel or tiller – but instead steering the boat with the autopilot’s Control Head, or any remote controls it is equipped with.

Steering, when using the autopilot in this mode, is done with two buttons and/or a knob on the Control Head. One button, and/or a clockwise turn of the knob, will move the rudder to Starboard, causing the boat to turn that way; the other button, and/or a counter-clockwise turn of the knob, will move the rudder to Port so that the boat turns that way.

Using the buttons/knob, the rudder can be placed in any desired position where it will remain. This feature is useful when docking or manoeuvring, because the person steering the boat can take their hands off the controls between rudder movements.

More Information (for the Technically Inquisitive)

Mathematically, the autopilot’s steering algorithms are based on a control method known as a “PID Loop” ... a mnemonic for a “Proportional, Integral, Derivative” error-correction technique.

The amount of rudder movement to correct for any Heading error (or to make a turn), is continuously re-computed, in a processing loop, as a value that is:

- Proportional to the error (or how much more of the turn is still to be done).
- An Integral of the error/turn ... how big for how long.
- A Derivative of the error/turn ... how fast it is changing.

Many references can be found on PID Loops, on the Internet & elsewhere, if you want to know more! And ComNav occasionally holds training seminars – check with your Dealer.

System Overview

System Overview

This chapter gives a brief description of the major elements of the Commander P2 Advanced Autopilot System, their functions, and their relationships to each other.

Below is a block diagram of a typical example of the Commander P2 system, showing the interconnections between the elements of the system:

- The Signal Processor Unit (SPU)
- The Main Control Head
- A Compass or other Heading Sensor
- Solenoid(s), Reversing Motor, or Cable Drive, which move the Rudder
- The Rudder Follower Unit (optional on a P2VS)
- Optional Auxiliary Control Head(s) & Remote Controls
- Various optional accessories & external equipment
- Other Navigation equipment

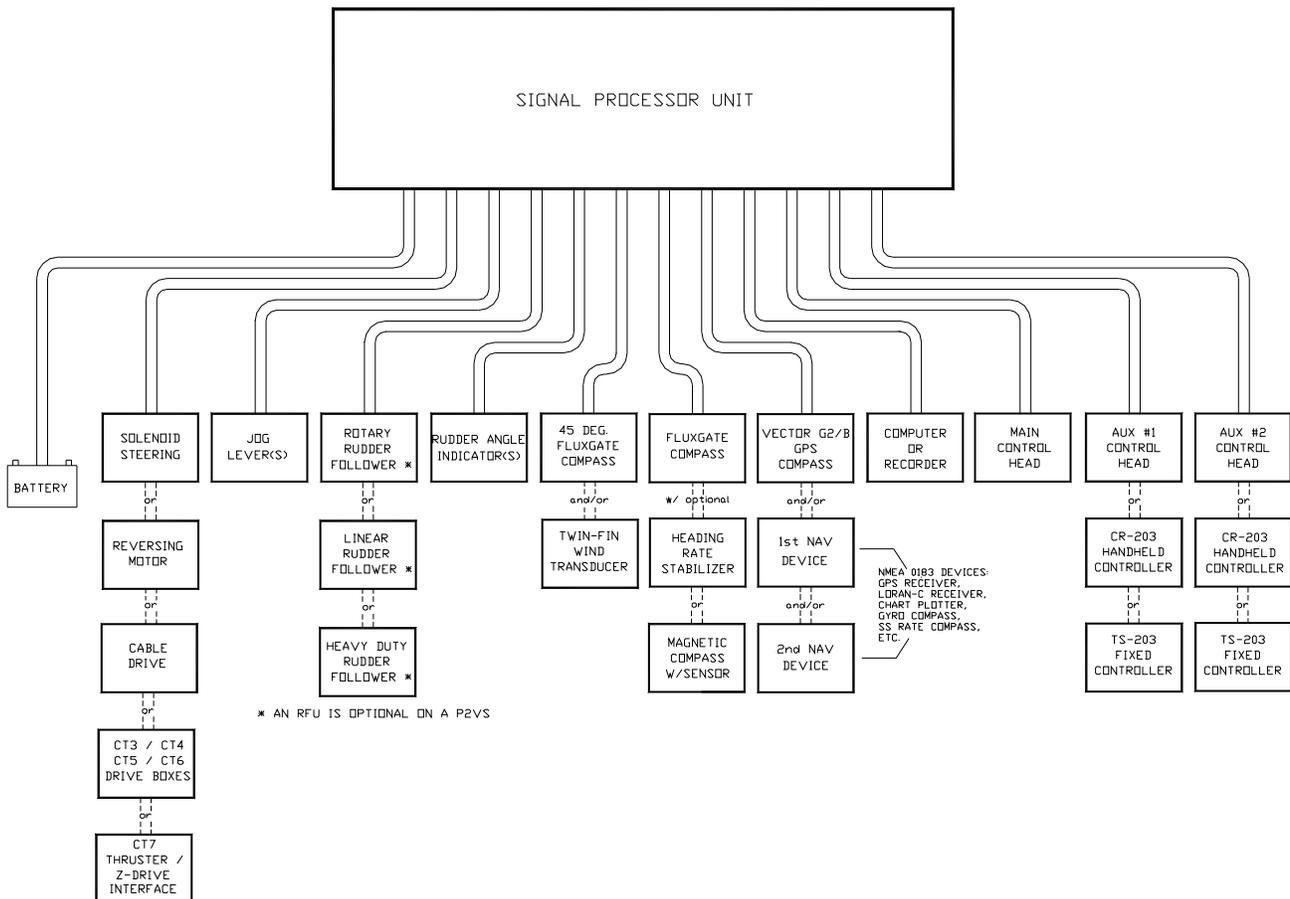


Figure 3 – Commander P2 System Block Diagram

Control Head

- PN 20110002** (P2 Second Station Kit, monochrome)
- PN 20110003** (P2 Second Station Kit, colour)
- PN 20110010** (P2VS Second Station Kit, monochrome)
- PN 20110011** (P2VS Second Station Kit, colour)

- PN 30110007** (P2 Head only, monochrome)
- PN 30110008** (P2 Head only, colour)
- PN 30110020** (P2VS Head only, monochrome)
- PN 30110021** (P2VS Head only, colour)

The P Series Control Head connects directly to the Signal Processor Unit (SPU), via a nine-conductor cable that plugs into a waterproof connector on the rear of the Head. This cable is wired onto a plug (supplied with the Kits), which in turn is plugged into the **CONTROL HEAD, AUX1** or **AUX2** receptacles on the SPU.

Two versions of the Control Heads are available. The monochrome versions have a silver-backed monochrome LCD display. The colour versions incorporate a state-of-the-art, sunlight-viewable QVGA TFT colour LCD display.

The Second Station Kits include the Head, cable & SPU connector, bezel & bracket mounting kits, and a cover.

The P2 & P2VS Heads are identical, except for firmware, the labels on the LCD window overlay and the case colour (grey or black, respectively).



Figure 4 – Control Heads

Signal Processor Unit

PN 20110006 (P2)
PN 20110009 (P2VS)

The Signal Processor Unit (SPU), as its name suggests, accepts a number of signals from the other components of the autopilot system, and processes them as necessary to control the movement of the boat's rudder so as to maintain a given Heading. As well as steering the boat, the sophisticated software within the SPU continually checks all aspects of the autopilot's performance, and will advise the user via the Control Head if any problems are encountered.

The SPU is the central hub for all wiring in the system, with 13 connectors for all power and input/output signals. A Wiring Cover protects the connectors when the system is in use – but is easily removable for installing cables & wiring.

It also contains a diagnostic section, containing several status & activity LEDs, some testpoints for service use, some adjustment controls and the system's two fuses. The diagnostic section has a clear cover, which allows easy viewing of the LEDs, and inspection of the status of the fuses.

The P2 & P2VS SPUs are identical, except for firmware (they can only be distinguished by the part number on the serial number label – and in operation).



Figure 5 – The Commander P2 SPU (with Wiring Cover Removed)

Compasses

The Compass is a critical component in the proper operation of the Commander P2 Autopilot System. *The autopilot system's ability to steer the boat to a given Heading desired by the Operator can **only** be as accurate as the Compass.*

The Commander P2 system is capable of using a variety of different compasses. These are discussed below. Various combinations of these compasses are often desirable.

Vector G2 and G2B GPS Compasses

PN 11210001 or **11210002** (G2, 15 or 30 metre cable)

PN 11210004 or **11210005** (G2B, 15 or 30 metre cable)

The ComNav Vector GPS Compasses are state-of-the-art devices which can provide accurate 2D Heading & Position data to autopilots, sonar, chartplotters, AIS transponders, and other NMEA 0183 devices.



Figure 6 – Vector G2 GPS Compass

Built-in DGPS processing capability provides sub-meter Position accuracy. DGPS source options in the G2 & G2B include standard SBAS systems (WAAS, EGNOS, MSAS, GAGAN, etc.), and external RTCM SC-104; the G2B can also use terrestrial DGPS Radiobeacon signals (IEC 61108-4), via an internal Beacon receiver module.

The Vector features fast start up times, Heading & Position updates at up to 20 Hz, and will work correctly at sustained turn rates up to 90° per second.

The Vector comes with a choice of mounting styles: a flat-surface base, or a pole-mount base. The entire unit is fully waterproof. The Vector provides dual, independently configurable, NMEA 0183 data outputs, each available at both the NMEA 0183 Standard's output voltages, and at PC-friendly "COM port" voltages.

One feature of the Vector is especially useful in marine applications: Heading is determined by mathematical computation, directly from the RF signals from the GPS satellites, rather than sensing the Earth's magnetic field – and thus there are no local magnetic deviation effects from metal objects, electrical devices & wiring, and so on. As well, Heading is available at high Latitudes.

The Vector contains a solid-state Gyro sensor, which is used to provide short-term Heading data in situations where GPS signal reception is subject to transient interference and/or blockage. The Vector also measures the boat's pitch (or roll, depending on which way the unit is mounted), and the data is available for use by other equipment on board.

The Vector is connected to the Commander P2 at one of the SPU's two NMEA Input ports. The standard cable lengths are 15 metres (50') or 30 metres (100'); custom lengths are also available.

Note: *no GPS Compass is suitable as the Heading sensor in a Commander P2VS system, when a Rudder Follower Unit is not used.*

Navigator G2 GPS Compasses Display

PN 20130003 (monochrome) or **20130004** (colour)

PN 10120001 or **10120003** (system with Vector G2 & 15 or 30 m cable, monochrome)

PN 10120002 or **10120004** (system with Vector G2 & 15 or 30 m cable, colour)

The ComNav Navigator G2 GPS Compass Display is an optional control & status display unit for Vector G2 & G2B GPS Compasses.

The Navigator G2 option consists of a Display Head that is identical in shape, size & overall appearance to the Commander P2's Control Head, and a Distribution Unit that provides a convenient way to connect the Vector G2/G2B to the P2 and to power. The Display Head is available with a monochrome or colour LCD display; it uses the same mounting methods, and cover, as the P2's Control Head.

The Display Head provides graphical and textual information about the boat's position, heading, speed and turn rate. The Head also can display several menus, which are used to control the configuration and operation of the Vector G2/G2B. Up to two Heads can be used at once.



Figure 7 – Navigator G2 Display Head

The Distribution Unit connects the Display Head(s) to a Vector G2/G2B, and has a convenient set of terminal strips for connecting power to the Vector, the signals to & from it, and the signals to the Commander P2's SPU. It also has a connector for the cable to a PC's COM port.



Figure 8 – Navigator G2 Distribution Unit

Fluxgate Compasses

PN 20320003 – standard version (with plug: **PN 20320007**)

PN 20320008 – with Heeling Coil (with plug: **PN 20320004**)

Specifically designed for use with ComNav 14xx, SP-xx, 5001 & P Series autopilots, these ComNav Fluxgate Compasses directly sense the Earth's magnetic field; they output the traditional "analog compass" signals ("Sine & Cosine" signals). These compasses are sealed, waterproof units, and may be mounted on a deck, shelf, or bulkhead.

They are supplied with an attached 12 metre (40') cable, which is wired directly into the Commander P2's SPU.

The heeling coil version provides better performance when the boat is either rolling or heeled.

- When the system has a Heading Rate Stabilizer (see next page)⁴, the "with plug" versions are used instead.



Figure 9 – Fluxgate Compass

⁴ If the "plug" versions are used without an HRS, an adapter cable (PN 31110024) is required, to allow direct connection to the SPU.

Heading Rate Stabilizer

PN 20320009

Perhaps the single greatest factor affecting Autopilot performance is the quality of the compass heading information it receives.

- Compass error due to pitch and roll, high turn rates and high-speed turns are common to both fluxgate and magnetic compasses.
- Northerly turning error is another phenomenon that affects both types of compasses, particularly at higher latitudes; it is caused by the increase in the vertical component of the Earth's magnetic field lines, as the boat gets closer to the North or South magnetic pole.
- The sideways acceleration of a boat in a high speed turn will also affect the accuracy of compasses.

ComNav's Heading Rate Stabilizer minimizes the effects of these factors.



Figure 10 – Heading Rate Stabilizer

The Heading Rate Stabilizer measures the horizontal component of the rate of change in the boat's heading, and adjusts the compass reading to minimize the effects of pitch and roll, fast turn rates and northerly turning error.

The heading output provided to the Autopilot is dramatically improved in terms of dynamic responsiveness and stability, enabling the Autopilot to perform more accurately and efficiently, in all Latitudes.

The ComNav Heading Rate Stabilizer is designed to be used in combination with ComNav's Fluxgate Compasses – either the Standard or the Heeling Coil model (PNs 20320003/8 connect directly to the HRS, PNs 20320004/7 require adapter PN 31110050).

It is supplied with an attached 12 metre (40') cable, which is wired directly into the Commander P2's SPU⁵.

Note: *a ComNav Fluxgate Compass with an HRS is the only recommended Heading sensor for use in a Commander P2VS system, when a Rudder Follower Unit is not used.*

⁵ There is also a "plug" model of the HRS, PN 20320005, which can be wired to the SPU with an adapter (PN 31110024).

Magnetic Compass Sensor

PN 20320002

The ComNav Magnetic Compass Sensor detects the position of the compass card of an externally gimballed magnetic compass. The sealed unit can be attached to the bottom of any of ComNav's Magnetic Compasses, or the bottom or top of many other brands of externally gimballed magnetic compasses. It is wired directly to the SPU, with the attached 7.6 metre (25') cable.



Figure 11 – Magnetic Compass Sensor

Magnetic Compasses

ComNav offers several high-quality externally gimballed Magnetic Compasses, of either 13 cm (5") or 15 cm (6") diameter, which are directly compatible with the ComNav Magnetic Compass Sensor. These compasses are available in either bracket mount or binnacle mount. Compensating spheres and arms are also available. Consult your ComNav Dealer for part numbers.



Figure 12 – Externally Gimballed Magnetic Compass with Binnacle

The advantage of using a Magnetic Compass with a Magnetic Compass Sensor attached to it is that the Autopilot is sensing the position of the magnets on the compass card rather than sensing the earth's magnetic field directly.

Since the card of the compass has physical inertia, it does not react immediately to the changes in the magnetic field it is immersed in, but only to those changes which persist long enough to overcome the resistance of the compass card to movement. This means that the compass is a more stable heading reference than a Fluxgate Compass. The Magnetic Compass will largely ignore changes in the magnetic field in the plane of the compass card caused by boat motion, whereas a Fluxgate Compass may react to such changes.

This is particularly important in high latitudes, (such as Alaska, Labrador or the North Sea), where the horizontal component of the earth's magnetic field (which is the portion that the compass is trying to detect) is very small relative to the magnetic field of the boat.

The disadvantage of the Magnetic Compass is that in very rough weather with the boat going to windward, it is possible for the boat motion to upset or "tumble" the compass card, disabling the Autopilot.

Because of the relative insensitivity of the Magnetic Compass to both the earth's and the boat's vertical magnetic fields, it is recommended for use at latitudes higher than 50° (North or South), and for use on steel boats when optional quadrantal spheres are included.

45° Compass Transducer

PN 20640006

The ComNav 45° Compass Transducer⁶ contains a fluid-damped fluxgate sensor and works at heeling angles up to 45°. This compass puts out a proprietary digital Sine/Cosine signal. It is wired directly to the SPU.



Figure 13 – 45° Compass Transducer

Tri-Axis Rate Gyro Compass

PN 11510001 (NMEA 0183 interface)

The ComNav Tri-Axis Rate Gyro Compass is a solid-state compass with NMEA 0183 or NMEA 2000 interface. Its integrated three-axis accelerometer and three-axis rate gyro ensure 2° of accuracy in rough sea conditions when the vessel is pitching and rolling up to 30°.



Figure 14 – Tri-Axis Rate Gyro Compass

Other Compasses

ComNav recommends the use of ComNav's own compasses for the best performance of the Commander P2 Advanced Autopilot System – but you certainly may decide to use either a

⁶ Note: the 45° Compass Transducer was discontinued early in 2008. There is no direct replacement available for it. However, the Commander P2 will continue to support it. A 35° Compass Transducer (PN 20640007) is still available; however, it does not always work properly with the P2 – depending on the vessel – and so such use is not recommended or supported. It is wired the same as the 45° Transducer.

fluxgate compass or a magnetic compass from another manufacturer. See your ComNav Dealer for information on interfacing these compasses with the Commander P2 system.

Rudder Follower Units & Wind Sensors

Standard Rotary Rudder Follower Unit & Rudder Linkage

PN 20330008 (Follower Unit) & **20330007** (Linkage)

ComNav Commander P2 system kits come with a ComNav Medium Duty Rotary Rudder Follower Unit.

Note: *P2VS kits do not include an RFU – although one may optionally be used.*

The Rudder Follower Unit is used to transmit (i.e., “feed back”) the position of the boat’s rudder to the SPU. It is mechanically coupled to whichever part of the steering system the autopilot controls. Normally, this is the boat’s rudder; however, it can be mounted to the servo ram rather than the rudder, if the boat has two-stage steering (where the autopilot drives a control or servo ram).



Figure 15 – Standard Rotary RFU

Heavy Duty Rotary Rudder Follower Unit

PN 20330012

A Heavy Duty Rotary Rudder Follower Unit is available for special applications. Check with your ComNav Dealer to determine whether this product is suitable for your boat. Separate installation instructions are provided with this RFU.



Figure 16 – Heavy Duty Rotary RFU

Linear Rudder Follower Unit

PN 20330002

Installations on boats with outboard motors may use a ComNav Linear RFU. It is mechanically coupled to the motor's steering cylinder.



Figure 17 – Linear RFU

Twin-Fin Wind Transducer

PN 20640020

For use with sailboats, ComNav's Twin-Fin Wind Transducer provides accurate wind speed and wind angle data to the Commander P2 SPU. This allows the boat to steer to a specific angle relative to the wind. An easy, snap-in attachment for mast mounting is included.

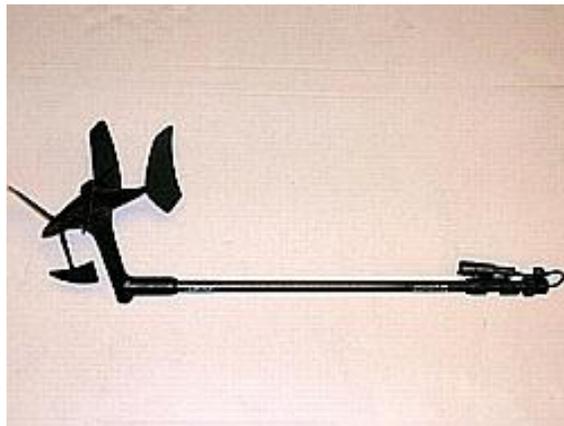


Figure 18 – Twin-Fin Wind Transducer

The Twin-Fin Transducer can be “shared”: it can be wired simultaneously to a Commander P2 SPU and either a ComNav NX2 Wind Data Instrument (PN 20620050), or a full Nexus Classic or NX2 Network System (various PNs); see page 68 for details.

Auxiliary Controllers

Up to two Auxiliary Controllers may be added to the standard Commander P2 system. These may be any combination of Commander Control Heads (colour and/or monochrome), CR-203 Handheld Remotes, and TS-203 Fixed Remotes.

CR-203 Remote

PN 20310026 – 12m (40') cable

PN 20310028 – 18m (60') cable

The CR-203 Handheld Remote is specifically designed to operate with P Series autopilots.

The CR-203 Remote is similar in operation to the P Series Control Head. It provides selection of **STANDBY**, **TILLER**, **AUTO**, and **NAV** modes, a Dodge/Turn switch & Port/Starboard buttons, a Tiller lever (for control of the rudder's position in **TILLER** mode), and a monochrome-graphics LCD showing the boat's heading & other information. The attached 12 (or 18) metre strain-relieved cable plugs directly into either of the SPU's **AUX** Head inputs.

The CR-203 is designed to be used while held in one hand, anywhere on the boat within the reach of the cable – even outside, since the enclosure is fully waterproof. When not in use, it may be hung up on the boat's dashboard or other convenient place, using "hook" slots on the back side.



Figure 19 – CR-203 Handheld Remote

TS-203 Remote

PN 20310025 – 12m (40') cable

PN 20310030 – 18m (60') cable

PN 30310011 – Ball Knob Kit

The TS-203 Fixed Remote is a heavy duty Full-Follow-Up (FFU) Lever control which allows the operator to control the tiller steering and autopilot functions from any work station, flying bridge or remote location on the boat.

The TS-203 is designed to be mounted anywhere convenient, inside or outside (it is fully waterproof), and positioned horizontally, vertically or at any angle desired. The attached 12 (or 18) metre strain-relieved cable plugs directly into either of the SPU's **Aux** Head inputs; the cable can be routed to exit the TS-203's case from the back side, or from the top edge.



Figure 20 – TS-203 Fixed Remote

The optional Ball Knob Kit is a replacement for the TS-203's standard tapered-handle Tiller lever. It is intended to be used where a "ball handle" is preferred, or in installations where there is limited space in which to mount the TS-203.

The kit's ball & shaft are the same as used on ComNav's NFU Jog Steering Control (see next page). The total ball-shaft length is 12 cm (5"), as compared to the TS-203's standard handle-shaft length of 18 cm (7").

Other Controls & Indicators

NFU Jog Steering Control

PN 20310002 (one set of switches)

PN 20310003 (two sets of switches)

ComNav's NFU (Non-Follow-Up) Jog Steering Control is a permanently mounted, watertight, electrical switch specifically designed for marine use. The spring-centered lever can be moved to Port or Starboard as desired to provide non-follow-up (time dependent) electrical control of the boat's steering system.



Figure 21 – NFU Jog Steering Control

Rudder Angle Indicator (RAI)

PN 20360023 (metal backshell)

The ComNav RAI is a backlit 76 mm (3") diameter gauge that displays the actual position of the boat's rudder. The RAI is flush mounted, with a corrosion-resistant metal backshell⁷, and a water-resistant front face; it accepts a lighting voltage supply of 12 or 24 VDC.

An optional Bezel Kit (PN 30360004), a Watertight Case (PN 20360016) and a Wheelhouse Case (PN 20360017) are available.



Figure 22 – External Rudder Angle Indicator (76 mm Model)

⁷ Note: the plastic-backshell model RAI (PN 20360014), which was discontinued in 2008, is otherwise identical to the metal-backshell model, and so can also be used with the Commander P2.

Control Head Mounting & Cover Kits

- PN 30110003** – Flush Mount Bezel, P2
- PN 30110004** – Surface Mount Bezel, P2
- PN 30110006** – Bracket
- PN 30110019** – Cover
- PN 30110022** – Flush Mount Bezel, P2VS
- PN 30110023** – Surface Mount Bezel, P2VS

The Control Head (when shipped as part of a complete Commander P2 system) is a “core” module, and comes with accessory kits for three methods of mounting it: a snap-on bezel for flush mounting, a snap-on bezel for surface mounting, and a two-piece bracket for bracket mounting. All required hardware is included with each kit (except for two fasteners needed to fasten the bracket to the desired mounting surface).

A cover for the Head is also supplied (for use with the surface & bracket mounts); it slips on easily, to provide protection against the elements, UV rays, and so on.

The bezel/bracket kits, the cover, and the Head ↔ SPU cable & connector, are also included with the Second Station Kits.



Figure 23 – Control Head Mounts & Cover

Other Drive Boxes

The Commander P2 system is capable of directly operating steering systems utilizing reversing DC motors or single speed solenoids.

ComNav also manufactures a complete line of Drive Boxes that will interface the steering outputs from the P2 system to almost any type of steering system.

Contact your ComNav Dealer for information and specific part numbers.



Figure 25 – Drive Boxes to meet all needs

Pumps & Drives

ComNav offers several types of electric-motor Hydraulic Pumps, matching Solenoid Valves & related equipment, as well as a number of high-quality Cable Drives and accessories.

Each drive comes with its own Installation Manual.

Please contact your ComNav Dealer for information and details.



Figure 26 – Hydraulic Pump & Solenoid Valve



Figure 27 – Cable Drives

Other Equipment

Besides the optional equipment described above, there is a wide choice of other equipment available for use with the P Series autopilot systems.

Contact your ComNav Dealer for information and details.

Installation

Installation

This chapter describes all the steps you must follow while doing the physical installation of the P Series Autopilot System on your boat.

Each of the standard components of a P Series system is described – both physical mounting & electrical wiring – and then some final checks are given. Commonly-used accessories are also described. Many components come with their own specific instructions, and you should pay attention to those, as well.

Basic Requirements

Please refer to the **Warranty Information** section of this manual before proceeding with installation.

Hazard warning!

CAUTION!

Extreme caution is advised when using tools powered by alternating current (AC) from main AC supply circuits, regardless of whether the supply circuits are “indoor”, “outdoor”, “marine” or “industrial” rated. Water, especially sea water, is an excellent conductor of electricity, and can complete a path to AC Ground through a person’s body, causing injury or death, if a tool malfunctions or short-circuits.

ⓘ Battery powered tools are STRONGLY recommended ⓘ

If AC tools are used, they must be plugged into a circuit that is adequately protected against Ground Faults & safety hazards, in accordance with local electrical codes.

Steering System

To obtain the best performance from your autopilot system, your boat’s steering system must be in good working order. The hydraulic system should be bled, and should be operating with minimal play.

When installing a Reversing Motor Pump, a Constant Running Pump, or an Engine Driven Pump, it is recommended that you install shutoff valves on all hydraulic lines between the Pump and the steering system.

Power Supply

For reliable operation of your Autopilot, your boat’s power supply system must have an adequately-breakered, or fused, DC (direct current) power supply at a nominal voltage of either 12 or 24 volts. If the circuits are fused, a power switch should also be provided. Ensure that adequate wire sizes are used to handle the expected maximum currents.

Special Tools

A slot screwdriver with a tip size of ~2.5 mm (0.1”) is required, for tightening the small screws of the wire clamps in the plugs which mate with the SPU’s pin-receptacle connectors.

Fasteners

In general, fasteners are not supplied with the system – since different surfaces need various types of fasteners.

But, no matter which types are best suited to your boat, ComNav strongly recommends that you use non-corroding hardware to secure all equipment in the system.

Control Head

The P Series Control Head is normally mounted in the boat's wheelhouse. It can also be mounted in more exposed locations, such as on a flying bridge, since it is fully splash-proof (but note that it is not submersible).

Each Head is supplied (when ordered as part of P Series System Kits) with three mounting kits: one for bracket mounting, one for surface mounting, and one for flush-mounting. The flush-mount is meant to be used when the Head is installed inside the boat; the bracket & surface mounts can be used inside or outside.

Each kit is packaged in a separate bag. Complete instructions, including drilling/cutting templates for each type of mounting, are contained within the bag for each kit.

There is a fourth bag (PN 30110005) containing a number of screws, washers, and nuts. The fasteners in this bag are to be used with either the surface mount kit or the flush-mount kit. They are not used for bracket-mount installations.

A slide-on, friction-fit cover is also supplied, for use with either the bracket or surface mounts. Despite that, the Control Head should not be located where it is exposed to prolonged direct sunlight.

The Control Head comes with a 7.6 metre (25') detachable cable. The cable has a 9-pin circular connector on one end, flying leads on the other end, and a loose plug that the leads will be wired into after the cable is routed; the plug mates with a matching connector on the SPU. The cable and Head-end connector are fully waterproof.

Electrical Connection

Route the Control Head Cable to where the SPU will be located. Avoid running the cable parallel to antenna cables, AC power, or DC wires/cables carrying heavy current. Excess Control head Cable can be coiled up, or the cable can be trimmed to a suitable length.

See **Control Head** on page 64 for details on connecting the cable to the SPU.

Signal Processor Unit

The SPU should be mounted in a clean and dry location inside the boat, and away from heat, moisture, and water of any kind. It should be somewhere central: between the Control Head, the main electrical panel, and the rudder drive system. It need not be visible during normal operation, but it should be located so that there is easy access to it during wiring & maintenance operations. Typical locations are right next to the electrical panel, at (or under or above) the Navigation station, or in a dry storage locker in or near the wheelhouse.

The SPU should be mounted far enough away from your boat's magnetic compass(es) so as to minimize any electrical/magnetic interference to it (them); a good rule-of-thumb is at least 1 metre (3') – but see **Compass Safe Distances** on page 206 for specific values, if you do not have that much space.

The SPU can be mounted vertically on a bulkhead or horizontally on a deck or shelf.

- If mounted vertically, it should be positioned so that all wires and cables will exit from the bottom of the SPU (after running sideways, left &/or right as appropriate, from the SPU connectors under the SPU's wiring cover).
- If mounted horizontally, all wires and cables should have a drip loop formed in them.

Each SPU is shipped with a package of four mounting feet and an instruction sheet that includes dimensions for drilling holes to fasten the feet to the boat.

Electrical Connection

See **Wiring the System** on page 60 for SPU wiring details.

Compasses

P Series autopilot systems are usually supplied as a complete System Kit, with one of several types of available compasses; the compass type chosen typically depends on the type and intended use of the boat.

- a Fluxgate Compass (optionally with a Heading Rate Stabilizer)
- a Magnetic Compass Sensor, for use with the traditional type of externally-gimballed magnetic compass, such as the ComNav 5" & 6" Binnacle Compasses
- a Tri-Axis Rate Gyro Compass
- a Vector G2 (or G2B) GPS Compass or other NMEA compass

Refer to the appropriate section below for specific installation instructions for your Fluxgate/HRS or Magnetic Compass.

Note: *if you have a Rate Gyro compass, a Vector G2/G2B or other NMEA compass, please also refer to the Installation & Operation Manual that came with it.*

Compass Deviation

When first installed, most Fluxgate & Magnetic Compasses will exhibit Deviation effects⁹.

Magnetic Deviation is the error between the compass reading and the boat's actual Magnetic heading. Deviation is a result of magnetic fields induced in the boat's hull (especially on steel boats) by various factors. It can also be caused by electromagnetic fields from objects such as engines, davits, galley equipment and the like, from the boat's electrical/electronic systems & wiring, and even from ordinary electronic items such as PCs, cell phones, CD/MP3 players & AM/FM radios.

If you have a ComNav Fluxgate Compass (with or without an HRS), or a 45° Compass Transducer¹⁰, the Commander P2 can electronically compensate for the Hard-Iron portion of the Deviation¹¹. The compensation procedure is done during the Sea Trials.

If you have a magnetic compass, it will have to be manually compensated for Deviation. A professional compass adjuster can (& should) do this job.

If you have a Tri-Axis Rate Gyro Compass, you can calibrate the compass during the Sea Trials.

If you are using a fluxgate compass other than a ComNav Fluxgate Compass, or a magnetic compass not supplied by ComNav, you should contact the dealer or manufacturer you purchased it from, for instructions on how to install it, set it up, and compensate it.

Common Installation Considerations

Caution! *Do not permanently install any compasses until Sea Trials are complete. You may have to relocate the compasses, during the trials.*

Avoid running the cable from any Fluxgate Compass, Heading Rate Stabilizer, Magnetic Sensor or 45° Compass, parallel to antenna cables, AC power, or DC wires/cables carrying heavy current.

Any excess cable or cables should be individually coiled up, in a suitable location near the destination. ComNav recommends that compass/HRS/sensor cables NOT be shortened (unless specifically stated otherwise, in the next sections).

⁹ The ComNav Heading Rate Stabilizer (by itself), and the Vector G2 & G2B GPS Compasses, are not affected by Deviation.

¹⁰ System packages with the 45° Compass (PN 20640006) were discontinued early in 2008.

¹¹ Soft-Iron effects must be dealt with by installing the compass far enough away from sources of Deviation.

If a cable is too short, suitable lengths of compatible cable (PN 60110012) to extend it – using normal marine-grade splicing techniques – can be ordered from your ComNav Dealer; or, you may special-order the compass/HRS/sensor with the length of cable that you need.

Magnetic Compass and Sensor

The ComNav Magnetic Sensor can be mounted to ComNav's standard Magnetic Compasses, and also to a wide variety of other brands of externally-gimballed compasses.

ⓘ Caution! *The Magnetic Sensor MUST NOT be attached to an internally gimballed compass (that is, where the compass card is gimballed and the bowl of the compass is not).*

Doing so will result in large errors between the compass and the autopilot. This is because the compass card does not remain parallel to the sensor when the boat rolls or pitches.

Locate and mount the compass in a position that minimizes magnetic interference. The compass should be at least 1 metre [about 3'] away from such equipment as radios, radars, depth sounders, and engine instruments.

To reduce the possibility of the card 'tumbling' in rough weather, mount the compass as close as practical to the center of pitch and roll. Mounting the compass far forward under a bunk or similar location is a poor choice for rough weather performance.

Important! *Always keep in mind that the compass is the single most vital part of an autopilot system. Locating a Magnetic Compass properly, particularly on steel-hulled boats, is essential to ensure proper operation of the autopilot.*

ComNav strongly recommends that the services of a qualified compass adjuster be used to select the best installation location, and to compensate the compass properly for deviation, including that caused by heeling error.

Care must be taken not to place compensating magnets too close to the compass, as this will cause the Compass Sensor, mounted underneath the compass, to read incorrectly. To correct compass deviation on steel boats, or on other boats with magnetic compensation problems (typically caused by interference from adjacent ferrous masses such as an engine block or winches), the use of a pair of compensating quadrantal spheres is recommended.

The Sensor can be mounted to the bottom of the compass using the brass screw supplied, or it may be bonded directly to the compass bowl using a suitable adhesive. The Nylon Washer should be placed between the Compass Sensor and the bottom of the compass bowl.

Check to see that the Sensor's brass screw does not touch anything when the compass bowl gimbals – e.g., a reservoir for the compass' damping fluid

With the Sensor mounted to the bottom of the bowl, the magnetic compass may be used as a steering compass, if desired.

It is also possible to mount the Sensor above the compass. This reduces the possibility of interference from the compensating magnets, but also reduces the visibility of the compass.

Optimum positioning of the sensor can only be accomplished once the Autopilot system has been installed and powered up, during the Compass setup procedures (see page 93 in the **Setup Procedures** section of the manual).

Electrical Connection

Route the Magnetic Compass Sensor cable from the Compass to the location where the SPU will be.

Ensure that there is sufficient slack in the cable to allow the compass bowl to tilt and rotate freely in all directions.

See **Compasses** on page 66 for further details on connecting the cable to the SPU.

Fluxgate Compass

Important! Always keep in mind that the compass is the single most vital part of an autopilot system. Locating a Fluxgate Compass properly, particularly on steel-hulled boats, is essential to ensure proper operation of the autopilot.

For best performance, the Fluxgate Compass must be mounted parallel to, and as close as possible to, the boat's fore-aft centreline, and also as close as possible to the boat's centre of pitch and roll. This is typically low in the boat, at or about the waterline, and slightly aft of the centre of the boat.

You must keep the compass as far away as possible – at least 2 metres (about 6') – from engines, electric motors, and other magnetic objects.

The compass must be mounted with the correct side up (that is, with the cable coming out of the top of the unit). The arrow labelled **BOW** should point forward.

Holes are provided in the case to attach the Fluxgate Compass either to a bulkhead, or to a horizontal shelf or deck.

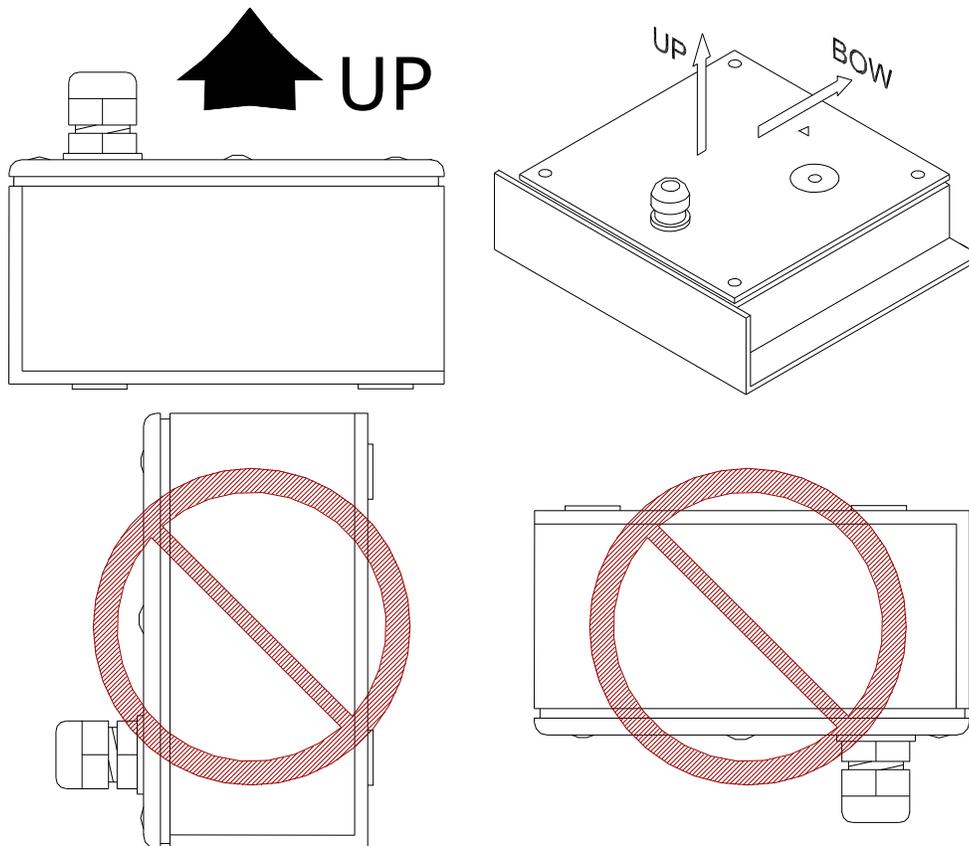


Figure 28 – Fluxgate Compass Mounting

Electrical Connection

Route the Fluxgate Compass cable to the location where the SPU will be.

See **Compasses** on page 66 for further details on connecting the cable to the SPU.

Heading Rate Stabilizer

Once a suitable location has been selected for the Fluxgate Compass, the optional HRS should be mounted in close proximity. For best results, it should be located no closer than 40 cm (16") to, and no farther than 2 m (6') away from, the compass. And, similar to the compass, it should be mounted as close as possible to the boat's centre of pitch and roll.

The Heading Rate Stabilizer **must** be mounted horizontally – i.e., sitting flat in both the fore-aft & athwartships dimensions, when the boat is sitting level in the water. There is no need to orient it in any specific direction, however.

The Rate Stabilizer is not adversely affected by proximity to ferrous metal, so there is no minimum distance to the hull or superstructure, engine, radios, and so on.

The HRS case has mounting holes identical to those of the Fluxgate Compass.

Electrical Connection

In Commander P2 systems ordered with a ComNav Fluxgate Compass & the Heading Rate Stabilizer option, the compass will be one of the plug-style versions (PN 20320007 for the standard compass, or 20320004 with a heeling coil). Route that cable to the HRS.

Route the cable from the HRS to the location where the SPU will be.

See **Compasses** on page 66 for further details on connecting the Fluxgate Compass to the HRS, and the HRS cable to the SPU.

45° Compass Transducer

Important! *Always keep in mind that the compass is the single most vital part of an autopilot system. Locating the 45° Compass Transducer properly, particularly on steel-hulled boats, is essential to ensure proper operation of the autopilot.*

Choose a location for the Compass Transducer¹². For best performance, it should be mounted parallel to, and as close as possible to, the boat's fore-aft centreline, and also as close as possible to the boat's centre of pitch and roll. This is typically low in the boat, at or about the waterline, and slightly aft of the centre of the boat.

You must keep the transducer as far away as possible – at least 2m (about 6') – away from engines, electric motors, and other magnetic objects.

Holes are provided in the case, to attach the transducer to a bulkhead. It must be mounted with the correct side up (the label that says "Compass" must be on top), and the arrow should point to the bow.

Electrical Connection

Route the Compass Transducer cable to the location where the SPU will be.

Excess cable should be coiled up. The cable may be shortened if desired, to avoid excess coils.

See **Compasses** on page 66 for further details on connecting the cable to the SPU.

Tri-Axis Rate Gyro Compass

Choose a location for the Rate Gyro Compass. For accurate readings, the word "forward" on the compass must be facing forward and parallel to the boat's fore-aft centreline. The compass should also close to level with the waterline for accurate pitch and roll readings.

You must keep the compass as far away as possible – at least 1 metre (about 3') – from engines, electric motors, and other magnetic objects.

¹² This product was discontinued early in 2008, but is still supported on the P Series.

Please check your compass manual (PN 29030051) for detailed instructions.

Electrical Connection

See Compasses on page 67 for further details on connecting the cable to the SPU.

Rudder Follower Unit

Note: *the Commander P2VS does not use a Rudder Follower Unit when operating using its Virtual Rudder Feedback feature, and so P2VS system kits do not include an RFU.*

However, an RFU (any of the types – rotary, linear, etc.) may optionally be used, if you wish to install the P2VS to operate in its “P2 Equivalent” mode (see page 145); if so, follow the instructions here to install the RFU.

The Rudder Follower Unit (RFU) is used to transmit (i.e., “feed back”) the position of the rudder to the autopilot.

The RFU should be connected to whatever part of the steering system that the autopilot controls. Normally, this will be the boat’s rudder. However, if the boat has a two-stage steering system where the autopilot drives a control or servo ram, the RFU should be mounted to the servo ram rather than to the rudder.

Typically, the RFU is mounted in the stern of the boat, close to the rudder post. A mounting base may have to be fabricated to position the RFU properly. Mount the RFU in a location where the possibility of damage from any equipment stowed in the area is minimized.

Note: *if you are connecting the Commander P2 to a mechanical Cable Drive (for boats that use cable steering instead of hydraulic steering), the RFU is built into the Cable Drive. See the Cable Drive Installation Manual for details.*

Rotary Rudder Follower Unit

Mount the Rudder Post Arm on the rudder post using a stainless steel band clamp (not supplied). Bolt the ball joint to the hole in the Rudder Post Arm corresponding to the diameter of the post in inches, making sure the ball is facing upwards.

Mount the RFU so that the RFU Arm is the same height as the Rudder Post Arm. The RFU is centered when the arm is directly above the cable gland (see Figure 29).

The distance between the centerline of the Rudder Post and the RFU must not exceed 24 inches. Make sure that the ball joints on the Rudder Arm and RFU arm are facing upwards as shown in Figure 3.

Snap the rod assembly onto the ball joints. Be sure to close the release clamps on each socket. Refer to Figure 29, and adjust the length of the rod to get the correct geometry with the rudder dead-ahead.

If the locking screw in the RFU arm has been loosened, or the arm has been removed from the RFU, re-attach the arm and check the potentiometer center position.

When the rudder is dead-ahead, the electrical resistance between the wires of the black & green wire pair, and the wires of the white & green wire pair, should be equal (approx. 600 ohms each).

Be careful to check the installation for any mechanical obstructions or binding of the linkage, and correct it now, before it becomes a problem.

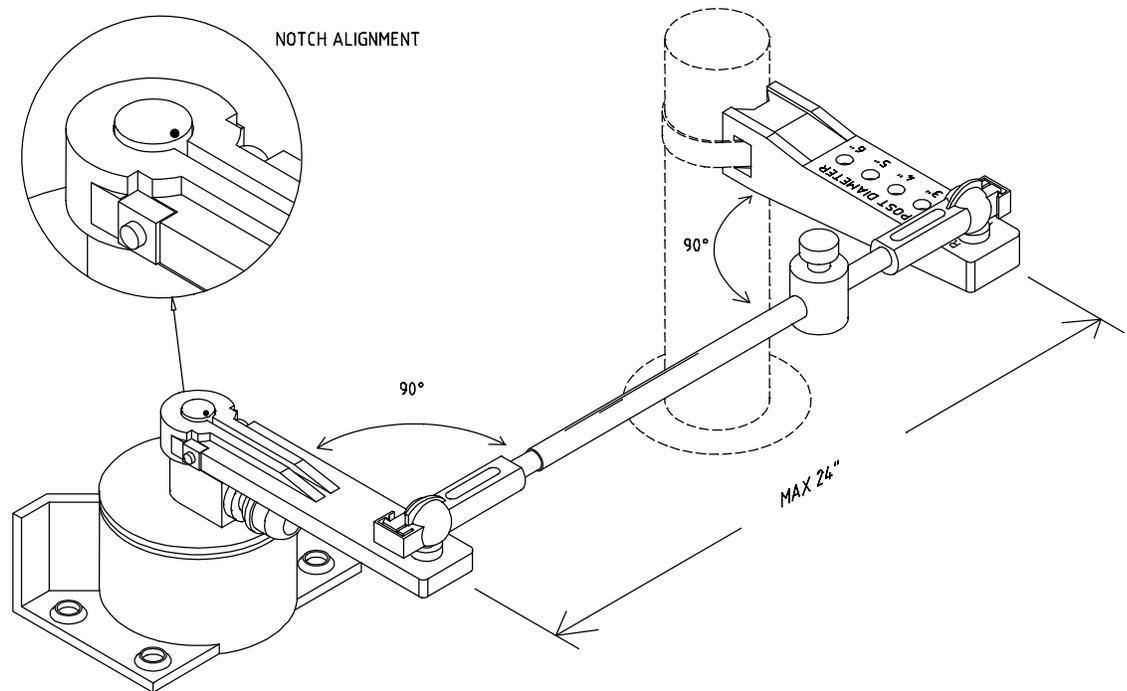


Figure 29 – RFU Linkage Geometry

Electrical Connection

The Rudder Follower Unit is normally supplied with approximately 15.5 metres (50') of cable. Run the cable from the RFU towards the SPU, ensuring that a hose or conduit protects it wherever it passes through bulkheads, holds, or any other area where it could be damaged.

If the length of cable supplied is too short to reach all the way to the SPU, obtain a terminal strip and sufficient additional cable from your ComNav Dealer. Mount the terminal strip in a convenient DRY location where it will not be subjected to moisture of any kind.

See **Rudder Follower Unit** on page 70 for further details on connecting the cable to the SPU.

Heavy Duty Rotary Rudder Follower Unit

The Heavy Duty Rotary RFU is also compatible with P Series systems. If you have purchased one of these devices, follow the installation instructions supplied with the unit.

See **Rudder Follower Unit** on page 70 for further details on connecting the cable to the SPU.

Linear Rudder Follower Unit

Installations on boats with outboard motors will typically use a Linear RFU.

- 1) If the Linear Rudder Follower is to be mounted with the sliding rod facing towards the port side of the boat, turn the steering wheel so the motor is hard over to starboard.

If the Linear RFU is to be mounted with the sliding rod facing towards the starboard side of the boat, turn the steering wheel so the motor is hard over to port.

- 2) Carefully measure the travel of the outboard motor's steering cylinder. It must not exceed 25.4 cm (10"). If it is more than that, corrosion resistant spacers will need to be fabricated to go over the rod of the hydraulic cylinder to limit its travel (see Figure 30).

Caution! If the travel of the steering cylinder is more than 25.4 cm (10"), the Linear RFU will be over-extended, causing it to be damaged or destroyed.

ⓘ There is no warranty on the Linear RFU for damage due to over-extension.

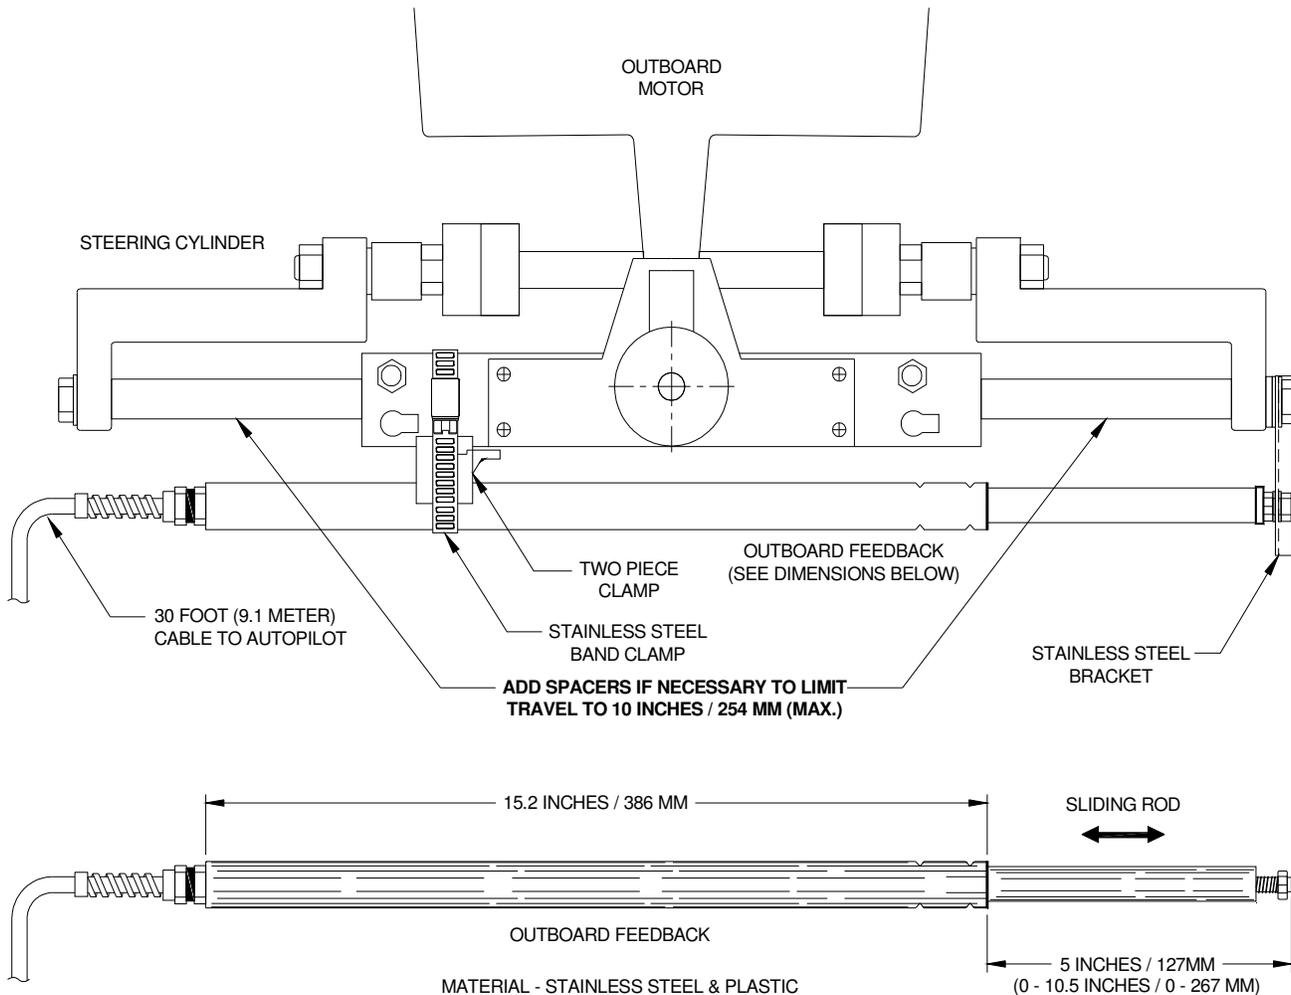


Figure 30 – Typical Arrangement of Linear RFU on an Outboard's Steering Cylinder

- 3) The clamps and band should be positioned as far as possible towards the end of the Linear RFU which has the cable that goes to the autopilot (see Figure 30). Loosely place the stainless steel band clamp around the Linear RFU and the outboard's steering cylinder.

Place the larger plastic mount bracket on the RFU, curved face on the Follower. Place the smaller plastic mount bracket on the steering cylinder, curved face on the cylinder body. Loosely tighten the band clamp around the RFU, the cylinder and the brackets (see Figure 31 and Figure 32).

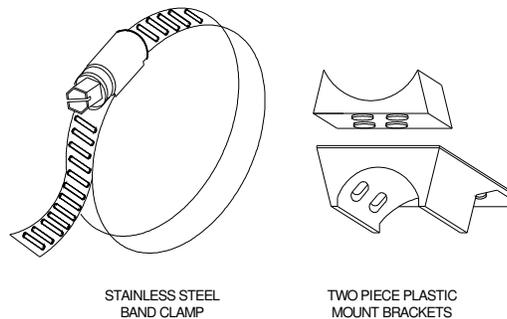


Figure 31 – Band Clamp and Plastic Brackets

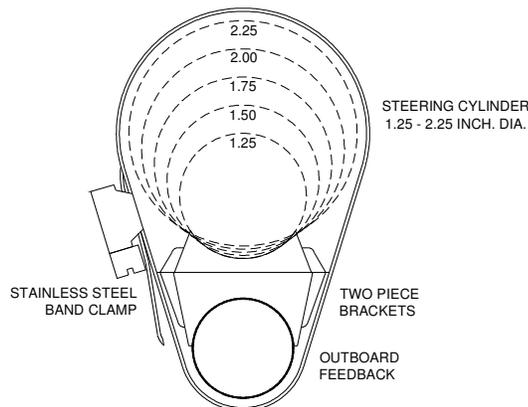


Figure 32 – Installed Arrangement of Brackets

- 4) Remove the nut from the steering cylinder rod's end (see Figure 33). Place the thick nylon flat washer (1.57 mm / 0.062" thick), then the thinner nylon flat washer (0.81 mm / 0.032" thick) and lastly the stainless steel bracket, over the threaded end of the rod. Place the stainless steel flat washer on the other side of bracket, and then replace the cylinder rod's nut. Do not tighten it yet – just thread it part-way, far enough to stay on.
- 5) Extend the sliding rod completely out of the Linear RFU. Push it back in slightly (about 3mm / 1/8"). Adjust the position of the Follower so that the end of the sliding rod is flush with the stainless bracket. Place the nylon washer between the nut and the stainless steel bracket. Place the stainless steel washer on the other side of bracket, and screw the Nylock nut part-way onto the threaded rod at the end of the Linear RFU.

- 6) Carefully adjust the position of the Linear RFU so that it is parallel with the hydraulic cylinder, in both horizontal and vertical planes.
- 7) Finally, tighten both nuts and the stainless steel band clamp securely.

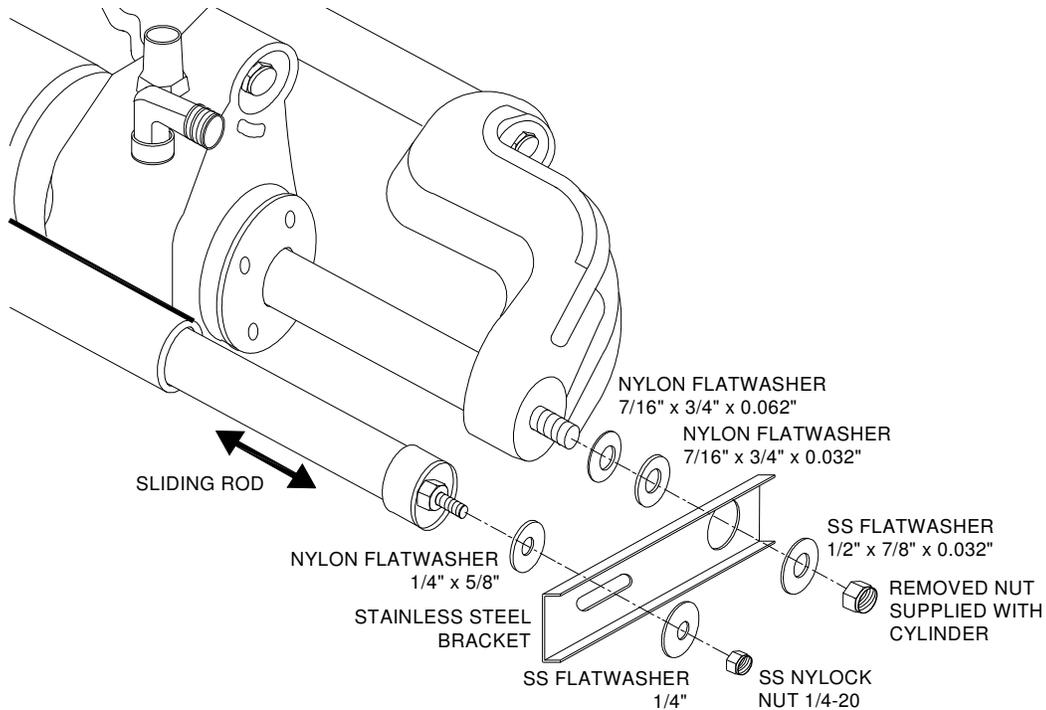


Figure 33 – Fasteners, Stainless Bracket Arrangement

Caution! To avoid the possibility of contaminants entering the Linear RFU, it is advisable to do an occasional wipe-down of the sliding rod, while it is fully extended, with a clean rag.

If you trailer your boat, it is especially important to do this on a regular basis. A good time to clean the rod is during the on-shore preparation for every launch, since that will take care of any "road grime" picked up during the trip to the launching ramp.

Electrical Connection

The Linear RFU is normally supplied with approximately 9.5 metres (30') of cable. Run the cable from the Linear RFU towards the SPU, ensuring that a hose or conduit protects it wherever it passes through bulkheads, holds, or any other area where it could be damaged.

If the length of cable supplied is too short to reach all the way to the SPU, obtain a terminal strip and sufficient additional cable from your ComNav Dealer. Mount the terminal strip in a convenient DRY location where it will not be subjected to moisture of any kind.

See **Rudder Follower Unit** on page 70 for further details on connecting the cable to the SPU.

Other Equipment

You should install the remaining components of your P Series system according to the installation instructions that come with that equipment:

- Auxiliary Controllers
- Jog Steering Controls
- Rudder Angle Indicators
- Wind Transducers
- CT7 Thruster Interface or a Drive Box
- Pumps & Drives
- ... and etcetera ...

Electrical wiring instructions for all these are a combination of the information in the manual supplied with each piece of equipment, and specific information for the P Series Autopilot which is given in the following sections of this chapter.

Wiring the System

Once everything is securely mounted, you can begin wiring the various components of the system, one at a time.

❗ *ComNav strongly recommends that ABYC wiring standards, or the equivalent for your locale, be followed.*

Signal Processor Unit

Start by removing the Wiring Cover from the SPU. It is held in place by two knurled plastic nuts (see Figure 34).

Set the cover & nuts aside – they will be re-installed once all the wiring of the SPU is complete.

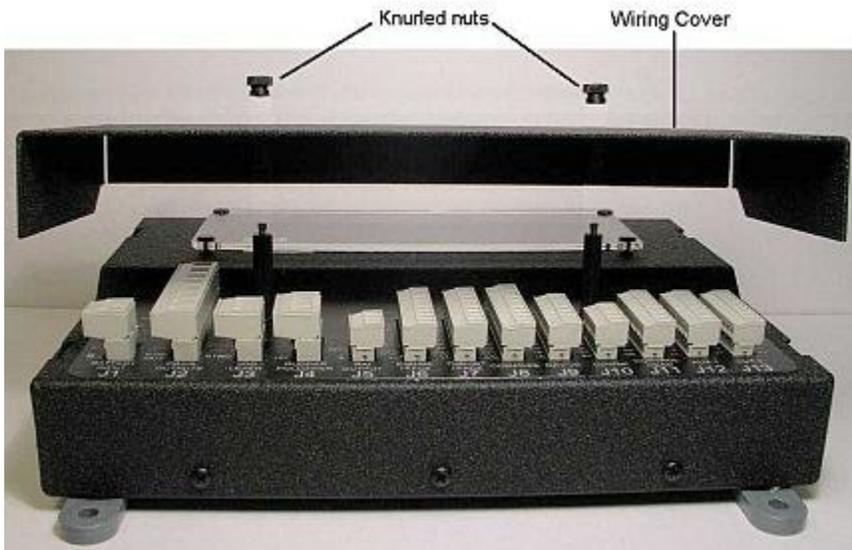


Figure 34 – Removal of the SPU Wiring Cover

Connectors on the SPU

With the wiring cover off, all the SPU's connectors are visible & accessible.

Each connector is a pin receptacle, with the pins sized according to how much current will be carried – bigger pins for higher current. Each pin has a signal name, rather than a number, to make it easier to match wires with pins (see connector label, below).

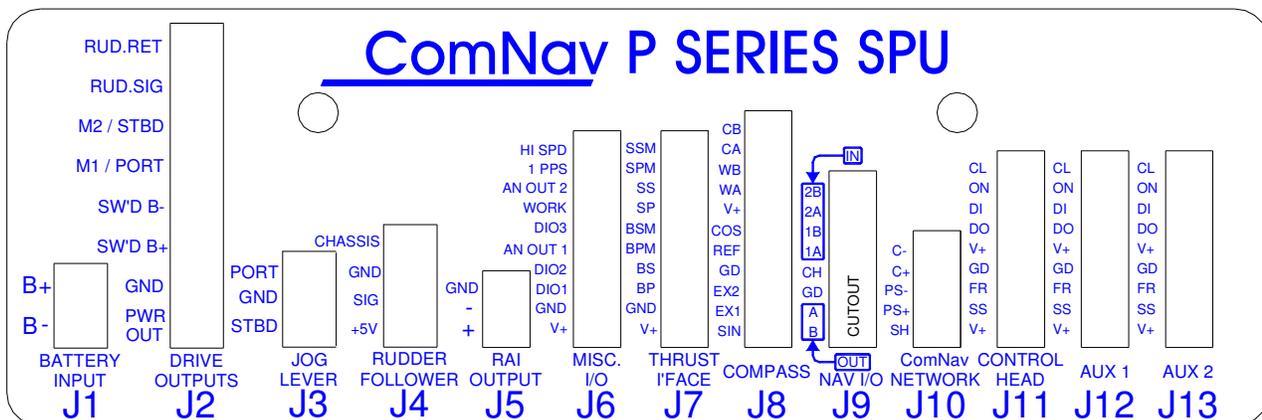


Figure 35 – SPU Connector Wiring Label

Each pin receptacle mates with a matching plug; the wires from external equipment & devices (battery, drive system, compasses, etc.) are inserted into those plugs. The plugs allow quick installation & removal of system wiring, yet are fully secure, once the various cables are strain-relieved.

The SPU is shipped with all the plugs normally required, pre-installed on the matching receptacles (except the Control Head's plug, which is supplied with it).

The plugs are "Euro style"; they have an internal U-shaped rising-cage wire clamp, driven by a slot-head screw. To attach a wire, the clamp's screw must be turned counter-clockwise several turns (using the small slotted screwdriver mentioned on page 46 – **Special Tools**), which drives the clamp downwards to open it up; then the wire can be fully inserted into that clamp. The screw must then be turned clockwise until the wire is tightly held in the clamp.

Wire Sizes

It is important to use the correct size wires in each connector, in both the mechanical & electrical sense!

Mechanically, due to the amount of vibration & impact shocks that can occur on a boat (from propeller & engine vibration, hitting waves, etc.), the stripped end of wires must be securely clamped in the plugs; using a too-small or too-large wire can cause poor clamping.

Electrically, due to the relatively high current requirements of an autopilot compared to many other types of electronic equipment, it is vital to use the largest possible size of wire to connect the various components. Undersized wiring will result in power losses which can affect overall efficiency and performance.

At the same time, due to the corrosive affects of the marine environment on bare wire, stripping too much or too little insulation from the ends of wires is poor practice. All the connectors used on the SPU are marine grade, and use corrosion-resistant materials.

The acceptable wire size range, DC current rating, stripped wire depth and pin spacing for all the SPU's connectors are as follows:

Connector Name	Wire Gauge	Rated Current	Wire Depth	Pin Spacing
J1, J2	12 – 22 AWG	12 A	6 mm	7.62 mm
J3, J4	12 – 22 AWG	12 A	6 mm	5.08 mm
J5 – J13	14 – 22 AWG	8 A	6.5 mm	3.81 mm

Table 1 – SPU Connector Ratings

Below are the recommended minimum gauges for the connections to the various elements of the system. All cables should use stranded wire, and have marine-grade insulation; only the ones so indicated must be shielded. If in doubt, contact your ComNav Dealer for help.

Function / Use	Wire Gauge
SPU Power Supply	2 x 12 AWG
12/24 VDC Solenoid Valve Steering System	3 x 18 AWG
Reversing Motor Steering System	2 x 14 AWG
Rudder Follower Unit	3 x 18 AWG (shielded)
GPS, Chartplotter, Navigation Computer	2 x 22 AWG (shielded)
Rudder Angle Indicator	2 x 22 AWG

Table 2 – Recommended Minimum Wire Gauges

Power Supply

The ComNav Commander P2 will operate on any voltage between about 11 VDC and 30 VDC. This allows operation with boat battery systems with nominal voltages of 12 to 24 VDC.

Caution! *Do not power up the SPU until you have completed the installation, and performed the steps outlined in “Post-Installation Checks”.*

If you are following the ABYC wiring standard, the positive leg of a DC system will use Red wires, while wiring for the negative leg (usually referred to as Ground) will be Yellow or Black.

Power to supply the autopilot should be taken directly from a breaker or distribution panel. The autopilot should be wired into its own individual breaker or fuse. Using appropriately sized wire or cable (see Table 2 on the previous page), wire the battery connections to the connector plug and receptacle labelled **J1 - BATTERY INPUT**. Double-check the wiring polarity before inserting the plug into the receptacle.

Caution! *The P Series SPU is NOT reverse-polarity protected.*

If you connect the wrong voltage polarity at J1, you WILL damage the SPU and Head!

This will void the Warranty!

The following diagram shows a typical power supply circuit:

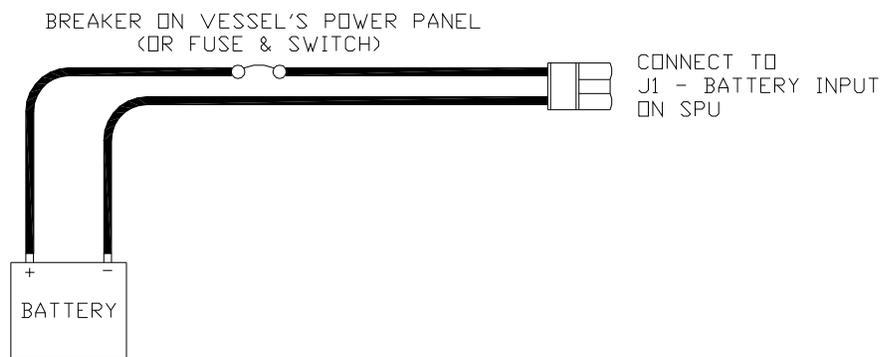


Figure 36 – Typical Power Connection to SPU

Caution! *Do not plug the power plug into the J1 receptacle on the SPU until all the electrical checks listed in **Final Steps & Post-Installation Checks** on page 83 have been passed.*

Power Supply Extension

If the SPU is mounted a long distance from the ship's breaker panel, it is recommended that heavy gauge wire (#8 AWG or larger) be routed between the breaker panel and a suitable terminal block, which is mounted in close proximity to the SPU. A short length of #12 AWG wire can then be used between the terminal block and the SPU. This minimizes voltage drop between the breaker panel and the SPU. The terminal block is needed, in this situation, because the wire openings in the plug for J1 can accept a maximum wire size of 12 AWG, so wire larger than that can not be directly connected to J1.

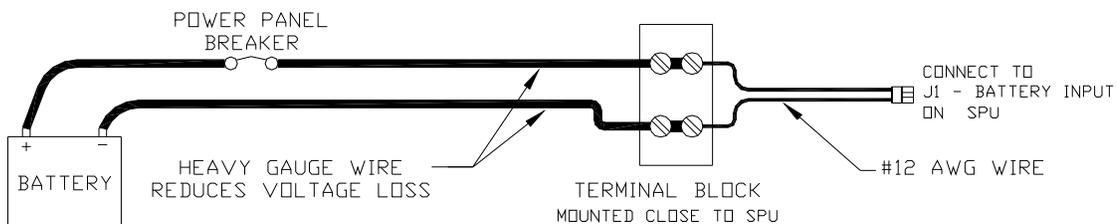


Figure 37 – Reducing Supply Voltage Losses

You may also want to use the same heavy-gauge extension wire technique for the Rudder Drive output wiring, if the SPU is located a long ways from the Rudder solenoids, valves, actuator, motor, etc. (see **Drive Outputs** on page 71).

Drive Box Power Supply

If your autopilot system utilizes one of ComNav's CT Drive Boxes, it should be wired back to the breaker or fuse separately from the rest of the autopilot system.

Do **NOT** ever “daisy-chain” power wiring!

The following diagram shows the proper method when using a CT Drive Box:

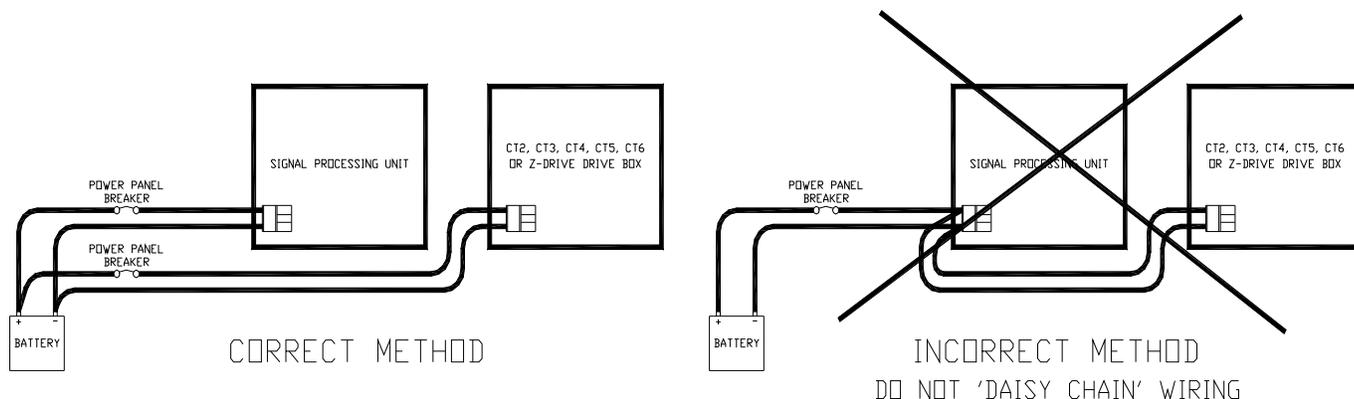


Figure 38 – Typical Battery Connection to Drive Boxes

Input & Output Connections

Control Head

Two types of control cable are used in manufacturing Commander P2 systems. The only difference between them is the colour-coding of the wires. Wire the cable from the main Control Head onto the nine-position plug-in connector according to the following diagram:

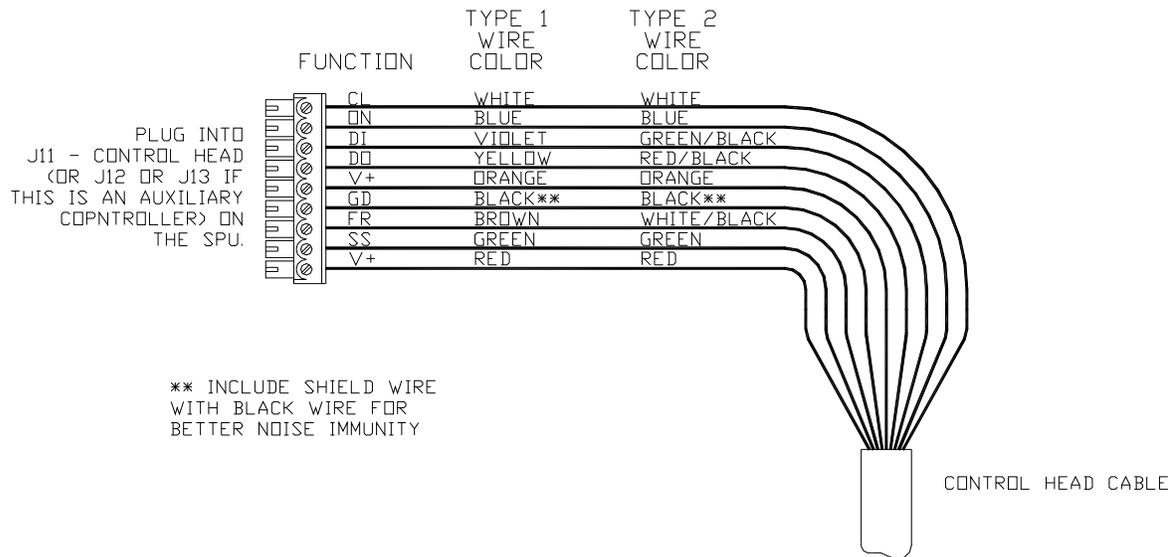


Figure 39 – Wiring Connections for Control Head, Handheld Remotes, and Fixed Remotes

Plug the nine-position plug connector into the SPU receptacle labelled **J11 - CONTROL HEAD**.

Auxiliary Controller(s)

All Control Heads, Handheld Remotes, and Fixed Remotes designed to work with the Commander P2 utilize the same wiring diagram as the Main Control Head (see Figure 39, above). The only difference is that these devices are plugged into the receptacles **J12 - AUX 1** or **J13 - AUX 2** instead of **J11 - CONTROL HEAD**.

Note: *Auxiliary Head Power On/Off*

The Commander P2 SPU is shipped from the factory configured so that power can only be turned on or off from the Main Control Head. The Main Control Head is designated as the Head which is plugged into the SPU receptacle labelled J11 - Control Head.

However, the system can also be configured so that it can be turned on or off by any Control Head plugged into the receptacles J12 - Aux 1 or J13 - Aux 2 (note: power cannot be turned on from CR-203 or TS-203 Remotes). If reconfiguration is desired, follow the instructions for enabling Auxiliary Head / Remote Power On (see page 199).

NFU Jog Steering Controls

Any number of Non-Follow-Up (NFU) Jog Steering Controls can be connected to the Commander P2 SPU. They are simply wired in parallel to each other. Connect them to the terminal labelled **J3 - JOG LEVER** as per the following diagram¹³:

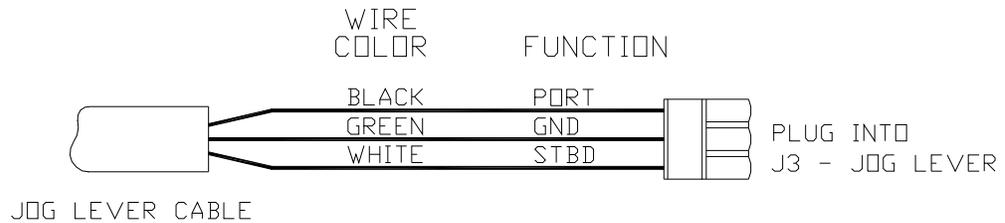


Figure 40 – Wiring Connections for Jog Controls

In order to use the Jog Controls connected in the above manner, the autopilot must be turned on. While the Control's lever is held activated, the autopilot will move the rudder either to Port or Starboard. However, the autopilot will stop the rudder when it gets to the (user-adjustable) rudder limits programmed into the autopilot; this is done to reduce stress on the steering system.

¹³ This diagram assumes the Jog Control is mounted with the lever pointing up, and you want the boat to turn to Port when you move the Control's lever leftward. See the Control's Instructions for how to wire other orientations.

Compasses

All the types of compasses, excepting NMEA 0183 compasses, are connected to the SPU receptacle labelled **J8 – COMPASS**

Note: see page 79 for how to connect NMEA compasses.

If you ordered your system with the Magnetic Sensor, and mounted it on the bottom of your magnetic compass, wire the flying-lead end of the sensor cable as per the following diagram. If you mounted the sensor on top of the compass, exchange the blue & yellow wires.

If you have a Standard or Heeling-coil ComNav Fluxgate Compass (PN 20320003 or 20320008), wire the flying-lead end of the compass's cable into the eleven-position plug which mates with the **J8** receptacle, as per the following diagram.

If you ordered your Commander P2 system with the optional Heading Rate Stabilizer (PN 20320009), the compass will be one with a plug-end cable: either PN 20320007 (Standard), or 20320004 (Heeling coil). Connect the compass cable's plug into the "To Compass" receptacle on the HRS.

Then wire the flying leads of the cable from the HRS as per the following diagram.

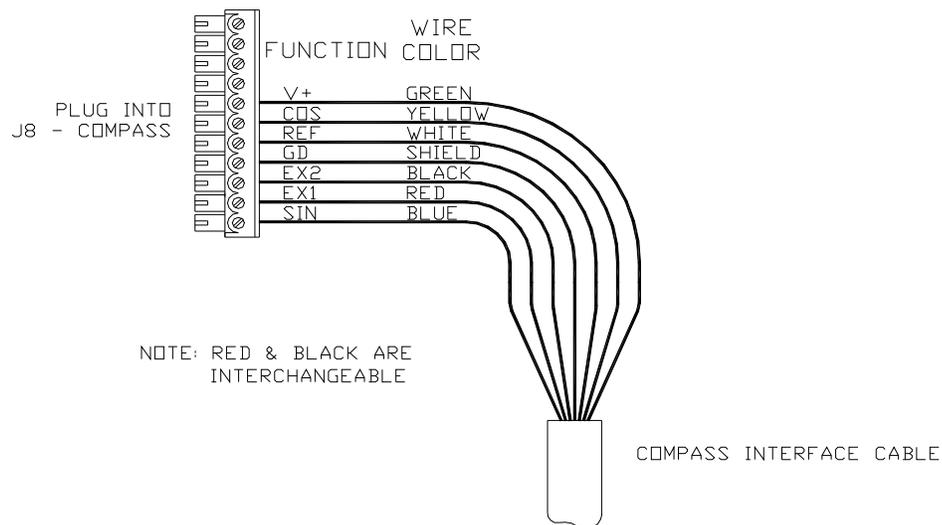


Figure 41 – Wiring Connections for Magnetic Sensor, Fluxgate Compass or HRS

If you have a 45° Compass Transducer, it is also connected to **J8**, as per the following diagram.

Note: more than one wire (in the standard cables) will fit into the V+ and GD (Ground) connections, so you can connect a 45° Compass and a Fluxgate Compass (or HRS) at the same time. You may then select either as the “Compass Source” (see page 117) at any time during operation.

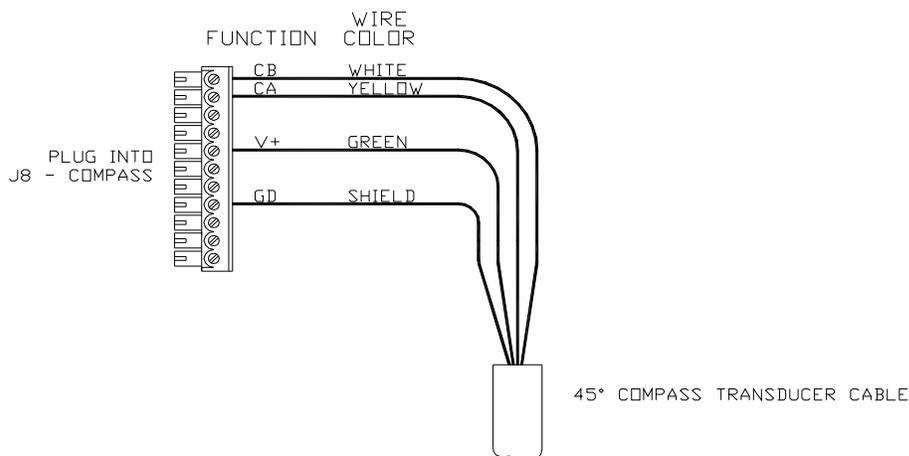


Figure 42 – Wiring Connections for 45° Compass Transducer

If you have a Tri-Axis Rate Gyro Compass, it is connected through the J9 and J6 (for power supply), as per the following diagram.

Note: you only need to connect signal wires to NMEA A and NMEA B during the compass setup for calibration purposes. When the calibration is done, the signal wires to NMEA A and NMEA B can be disconnected so that the NMEA port may be used for other serial data connections. (Ensure that disconnected signal wires must be properly isolated and taped to prevent electrical damage)

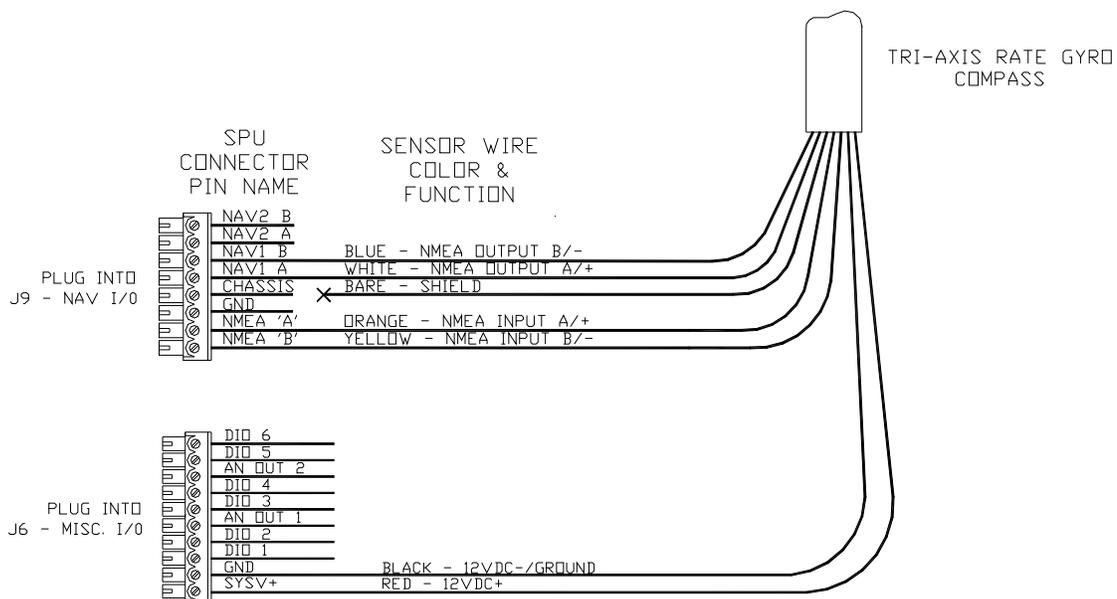


Figure 43 – Wiring Connections for Tri-Axis Rate Gyro Compass

Wind Transducer

If you are connecting a ComNav Twin-Fin Wind Transducer to the Commander P2 SPU, it must also be connected to the eleven-position plug that fits into the **J8 – COMPASS** receptacle. Wire as per the following diagram.

Note: more than one wire (in the standard cables) will fit into the V+ and GD connections, so you can connect a Wind Transducer and a Fluxgate (or Magnetic Compass) and/or a 45° Compass Transducer, all at the same time.

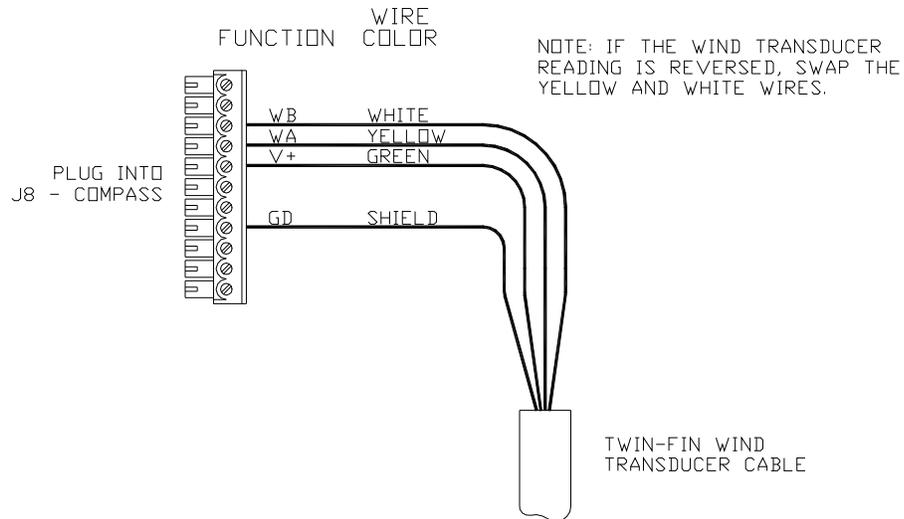


Figure 44 – Wiring Connections for Twin-Fin Wind Transducer

If your boat is equipped with a ComNav NX2 Wind Data Instrument (PN 20620050) or an Classic Nexus or NX2 Network System (various PNs), you can use the Wind transducer with both the Commander P2 and the Instrument or System, either individually or at the same time, by wiring it up as shown in one of the following diagrams.

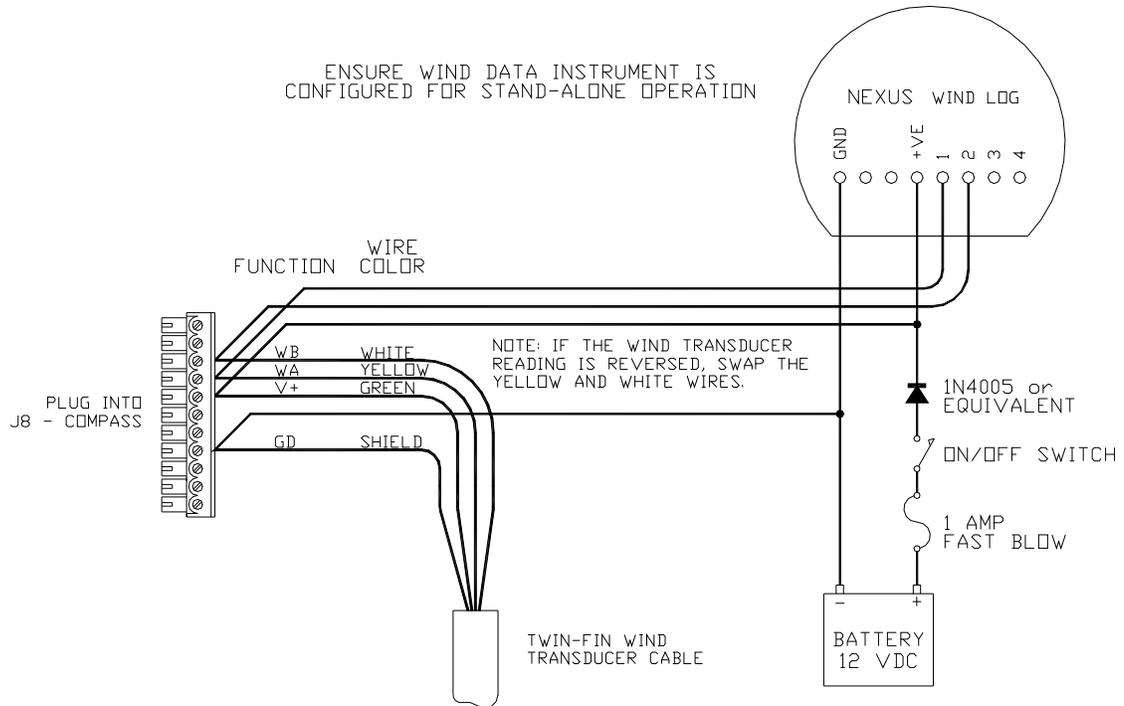


Figure 45 – Wind Transducer with NX2 Wind Data Instrument

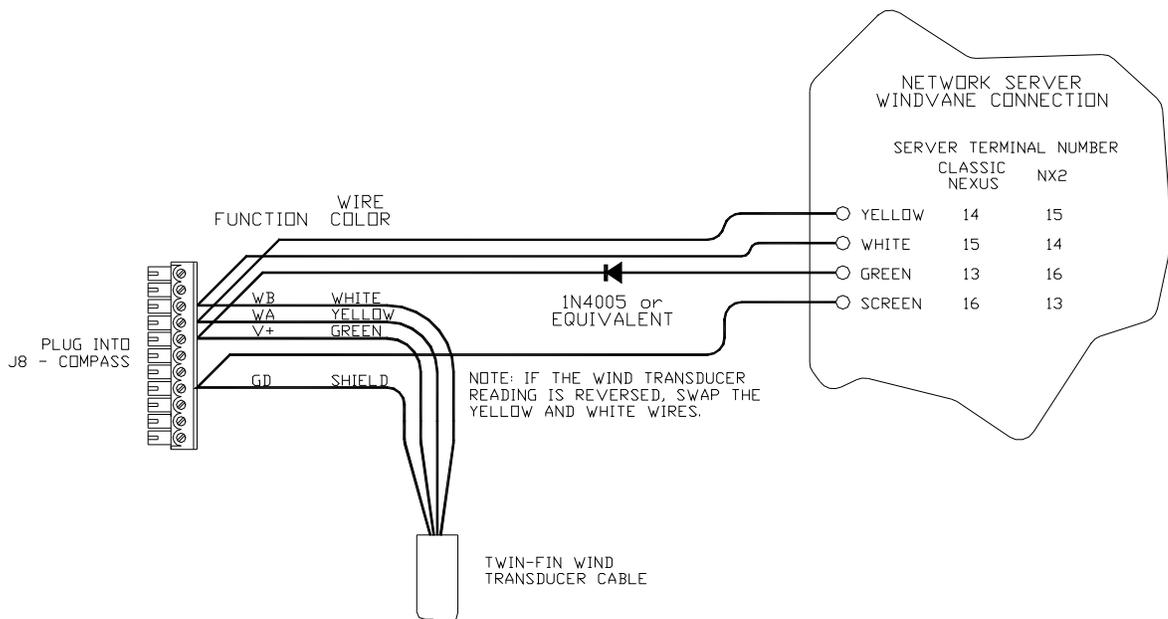


Figure 46 – Wind Transducer with Classic Nexus or NX2 Network Server

Rudder Follower Unit

The RFU is connected to the four-position receptacle on the SPU labelled **J4 – RUDDER FOLLOWER**. Wire the RFU to the plug-in connector as per the following diagram.

Note: an RFU is optional on P2VS systems.

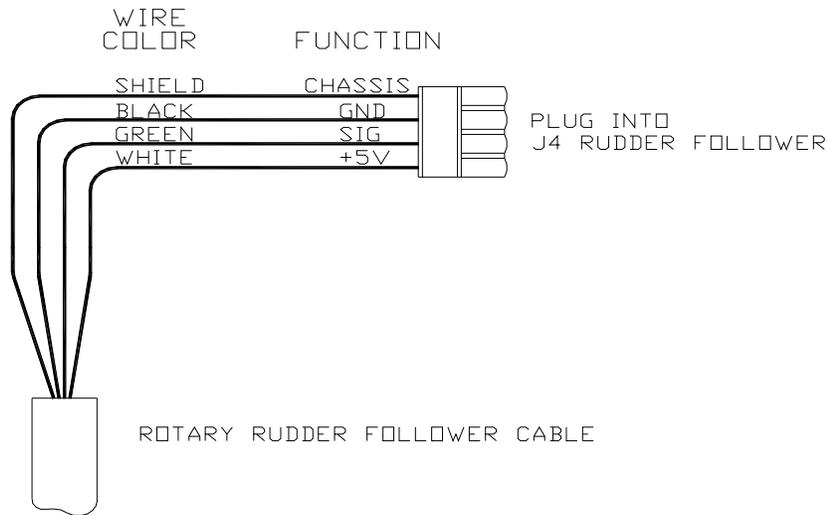


Figure 47 – Wiring Connections for RFUs

Rudder Angle Indicators

The Commander P2 system will drive Rudder Angle Indicator (RAI) meters – such as those supplied by ComNav (PN 20360014 or 20360023). Mounting instructions are included with the meter. Wire the meter to the plug for the SPU receptacle labelled **J5 – RAI OUTPUT**. If you have more than one RAI, they should all be wired in series, as shown below (up to five, 500 μ A RAI meters may be used):

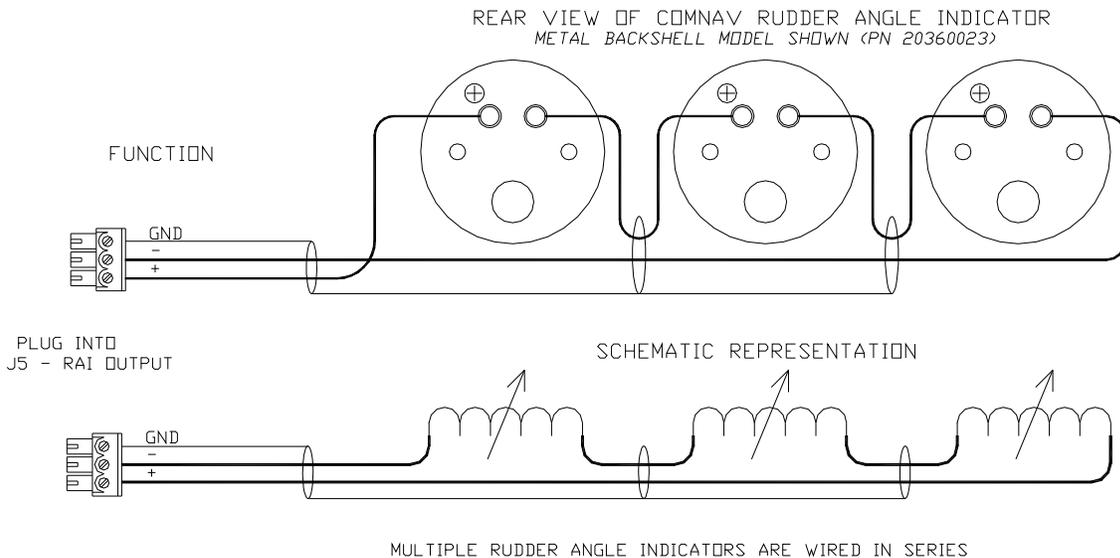


Figure 48 – Wiring Connections for Rudder Angle Indicators

Drive Outputs

The Commander P2's SPU is capable of directly driving a variety of steering systems. Optional Drive Boxes are available for those systems not handled directly by the SPU. Contact your ComNav Dealer for more information.

Almost all connections to the steering system are done at the **J2 – DRIVE OUTPUTS** connector.

Reversing DC Motor Hydraulic Systems

The Commander P2 SPU can directly handle reversing DC motor hydraulic¹⁴ pumps drawing up to approximately 20 amps. For larger current requirements, the ComNav CT2 Drive Box should be used. To connect the pump motor directly to the SPU, use the following diagram. Note that wire polarity is not important, since the SPU will automatically make the necessary adjustments internally when the system is set up.

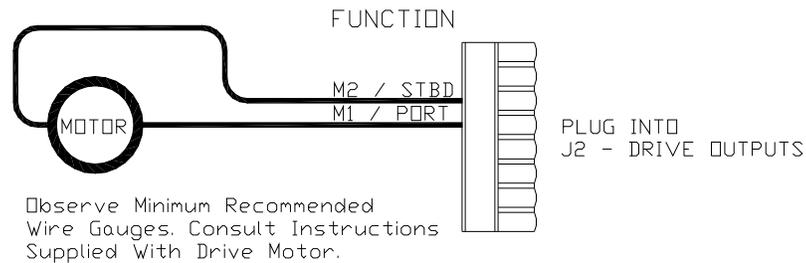


Figure 49 – Wiring Connections for Reversing DC Motors

Linear Actuators or Mechanical Rotary Drives

Some Linear Actuators incorporate a Bypass Valve. To operate properly, the Bypass Valve should be activated by the SPU's **SW'D B+** output. Similarly, most mechanical drives incorporate a solenoid-activated clutch. The clutch solenoid should also be activated by the **SW'D B+** output. Refer to the following diagram:

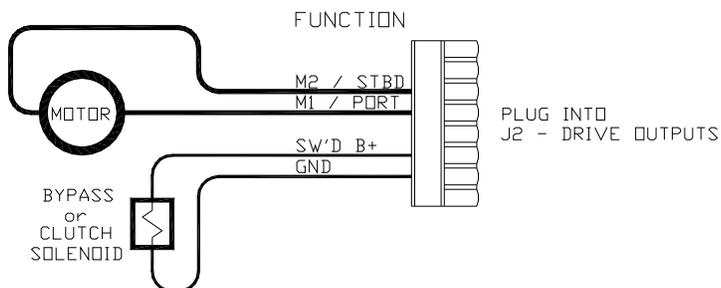


Figure 50 – Wiring Connections for Linear Actuators or Mechanical Rotary Drives

Shunt-Field Reversing Motors

For shunt-field reversing motors, connect the shunt field coil positive terminal to **SW'D B+** and the coil negative terminal to **SW'D GND** as per the following diagram:

¹⁴ Two very important steps when installing any hydraulic system are to bleed it of any air trapped in the fluid, and to check for fluid leaks. This will be done later, during the Drive Setup procedure.

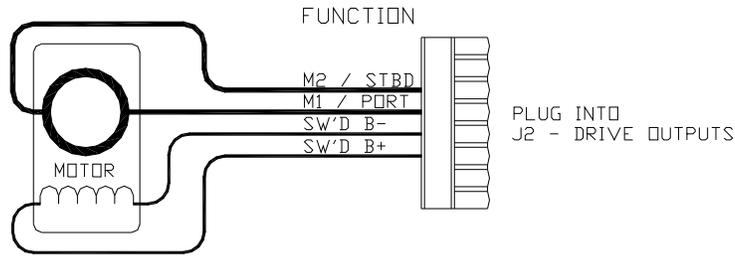


Figure 51 – Wiring Connections for Shunt Field Reversing Motors

Standard Four-Way Solenoid-Activated Hydraulic Valves

Connection to 12 VDC or 24 VDC solenoids should be made as per the following diagram.

In this configuration, the autopilot supplies the positive voltage (**SW'D B+**) whenever the autopilot is in **POWER STEER, AUTO, or NAV** modes. **SW'D B+** is turned off in **STANDBY** mode, thus providing an extra measure of safety.

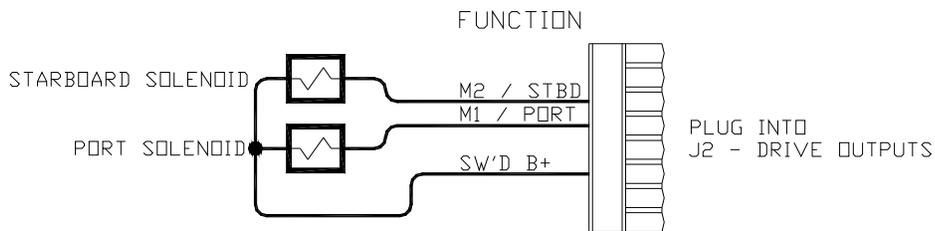


Figure 52 – Wiring Connections for Standard Four-Way Solenoid Valves

The diagram above assumes that an engine driven pump is used for the hydraulic system. In the case of an electrically powered constant running pump, use the following connection:

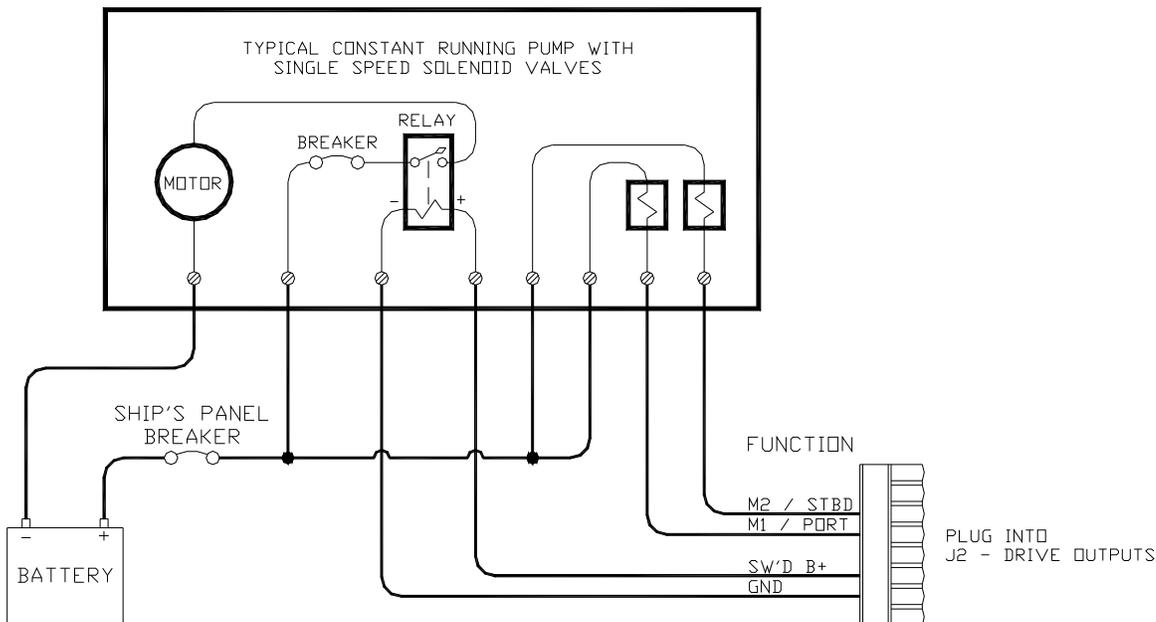


Figure 53 – Wiring Connections for Constant Running Electric Pump.

Two-Speed Solenoid Valves

ComNav’s CT5 Drive Box (PN 20350004) should be used to interface between the Commander P2 SPU and two-speed solenoid systems. Connect the CT5 to the SPU as per the instructions shipped with the CT5, and the following diagram:

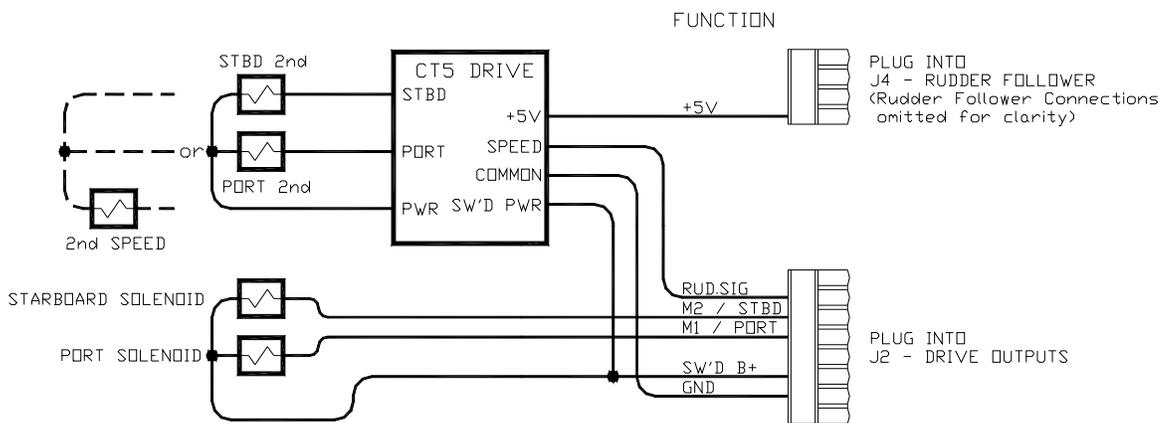


Figure 54 – Wiring Connections for Two-Speed Solenoid Valves

A.C. Solenoids

ComNav's CT4 Drive Box (PN 20350003) should be used to interface between the Commander P2 SPU and A.C. solenoid systems. Connect the CT4 to the SPU as per the instructions shipped with the CT4, and the following diagram:

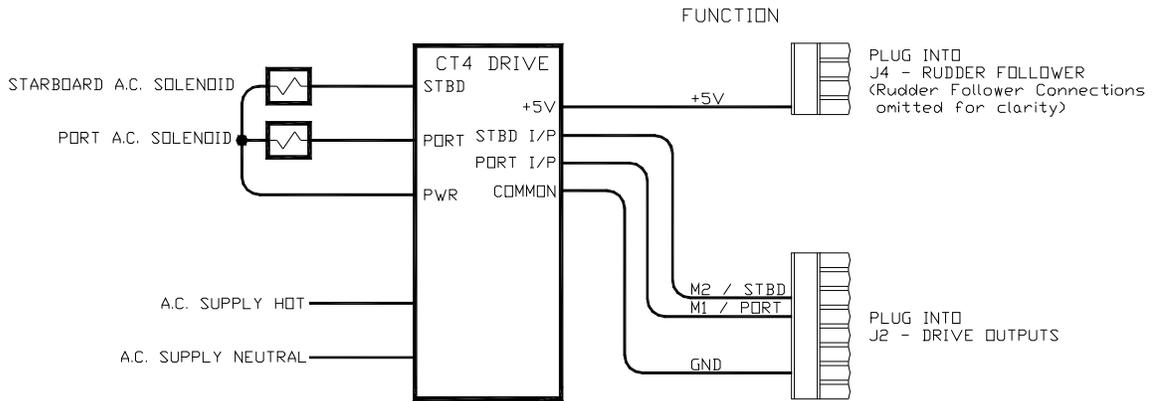


Figure 55 – Wiring Connections for A.C. Solenoids

Proportional Solenoid Valves

ComNav's CT6 Drive Box (PN 20350005) should be used to interface between the Commander P2 SPU and proportional valves. The CT6 is custom configured to match the requirements of the particular valve it is to be fitted to.

Note: ComNav's Production Department requires information about the make and model of the proportional valves, in order to configure the drive box correctly.

Instructions for connecting the CT6 to proportional valves are shipped with the CT6 unit.

Connect the CT6 and the SPU as per the following diagram:

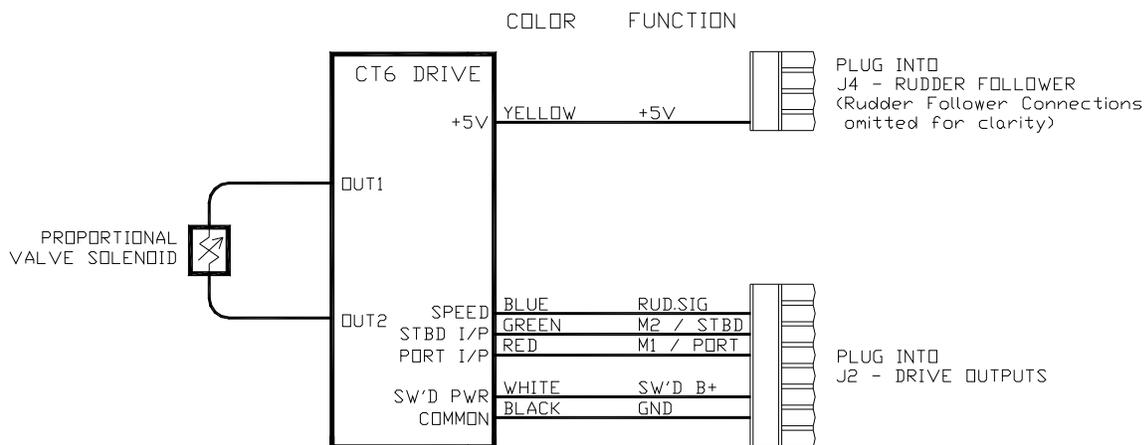


Figure 56 – Wiring Connections for Proportional Solenoid Valves

Azimuth Drives, Surface Piercing Drives and Jet Drives

Newer models of these types of drives are often supplied with an electronic Autopilot Interface, to which the Commander P2 SPU can be directly connected.

Older versions of these drives, however, may require the fitting of ComNav's one or two-channel Isolation Amplifier (PN 20350006 and 20350007, respectively). Instructions for connecting the Isolation Amplifier to the steering system are shipped with the Amplifier.

Connection between the Isolation Amplifier and the SPU should be made as per the following diagram.

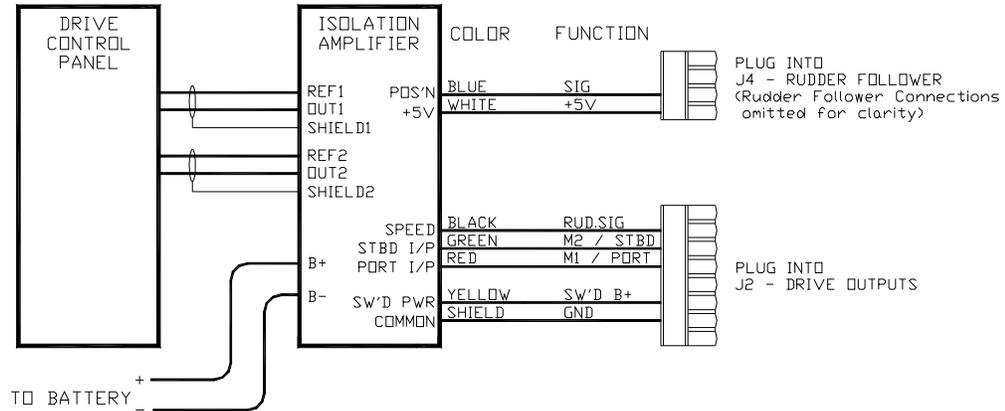


Figure 57 – Wiring Connections for Isolation Amplifiers

The ComNav CT7 Thruster Interface (see page 41) can also be used with some of these types of drives. See the CT7's Installation & Operation Manual for wiring instructions.

External Alarm Output

An external alarm can be connected to the P Series SPU.

The autopilot can be configured to activate the external alarm whenever any alarm or error message appears on the Control Head, or to activate the external alarm only if the Watch Alarm is not answered. See the description of the **Watch Alarm** & External Alarm on page 170 on how to choose those options.

One of two outputs can be used for the external alarm. Typically, you would choose to connect the external alarm between Battery Positive (**PWR OUT**) and the Switched B- (**SW'D B-**) outputs on **J2**, as in the following diagram:

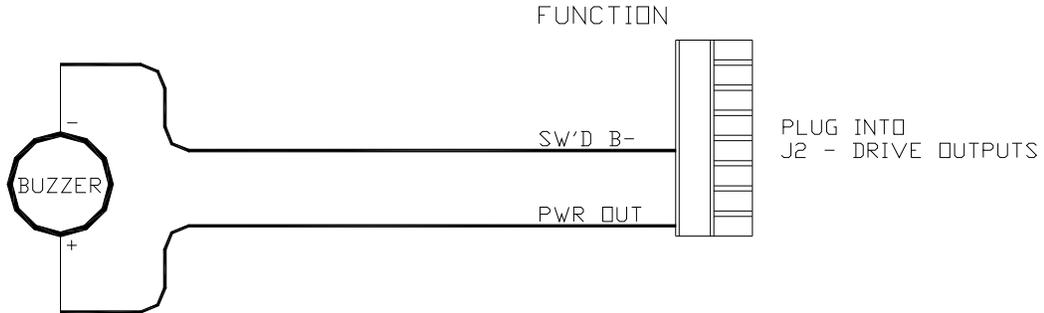


Figure 58 – External Alarm, using SW'D B- Output

Alternatively, you may choose to use the **SW'D B+** and **GND** outputs as shown here:

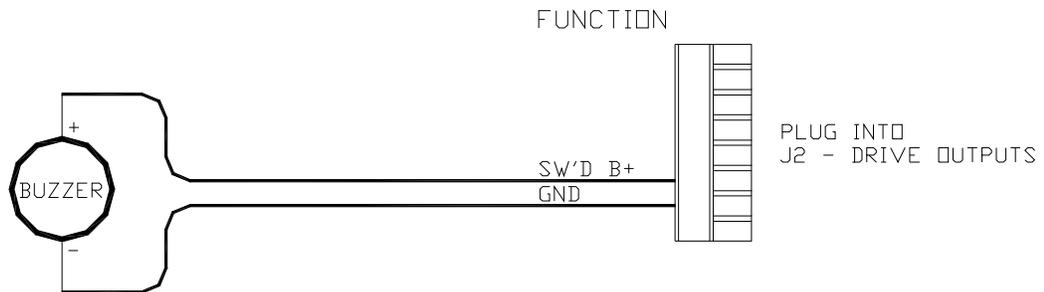


Figure 59 – External Alarm, using SW'D B+ Output

Note: when using the External Alarm configuration shown in Figure 58, there is a small current which will be flowing constantly between the pins, even when the alarm is OFF. This will not be a problem with many types of alarms; however, with certain types of sensitive Piezo-electric audible alarms, the leak current can cause a constant low-level tone from the Piezo device.

An Application Note is available which describes this potential problem in detail, with suggested remedies.

If you are experiencing this problem, please ask your ComNav Dealer (or go to ComNav's web site) for Application Note 2007-01.

Some installations require separate monitoring for power failures. This can be accomplished with the following circuit, which utilizes two relays. The coil voltage of the relays should match the supply voltage for the autopilot. The Alarm Supply, which must be a separate, dedicated supply from the autopilot supply, should match the voltage of the alarm.

This is the circuit for using Switched B- as the alarm output:

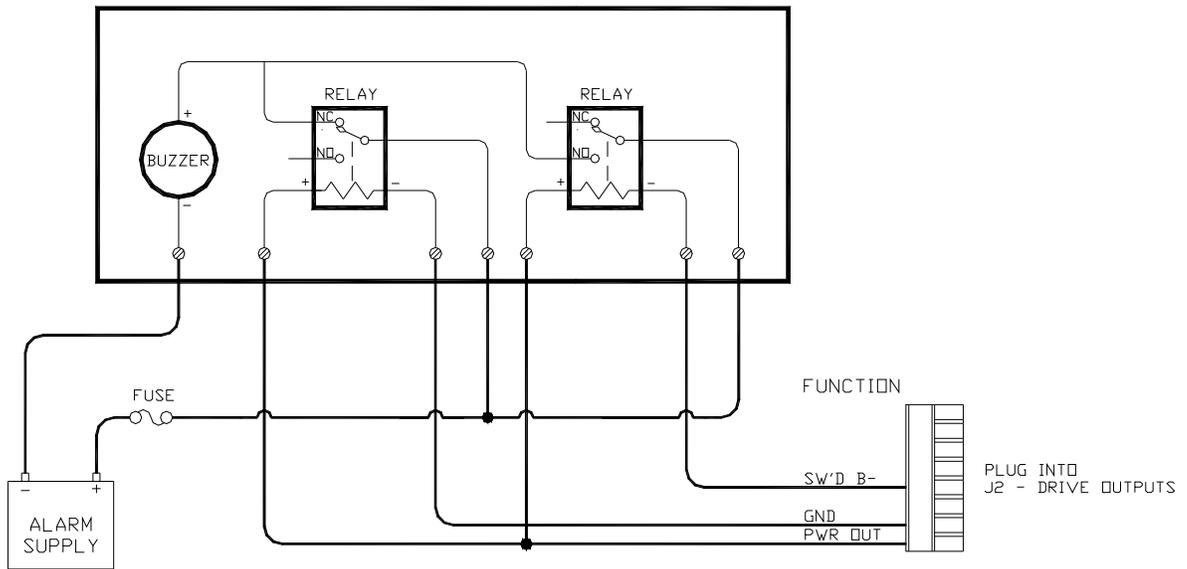


Figure 60 – External Alarm, SW'D B- Output with Power Fail Option

This is the alternative circuit, using Switched B+ as the alarm output:

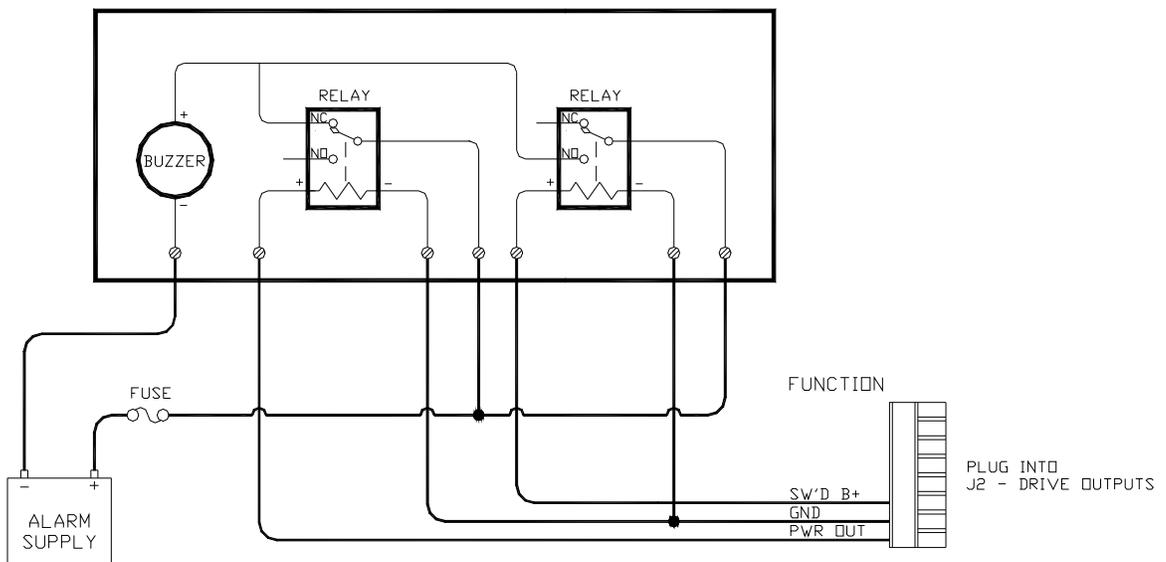


Figure 61 – External Alarm, SW'D B+ Output with Power Fail Option

Speed Mode & Timing Outputs

The P Series SPU outputs two status signals on the **J6 – MISCELLANEOUS**¹⁵ connector. The receptacle is supplied with a 10-pin mating plug.

In addition, a one pulse per second timing signal is output¹⁶ on J6. It is about 5% accurate, and is meant for general-purpose use – for example, some brands of Radar & other navigation equipment require a “1 PPS” timing signal for proper operation.

These two status signals indicate:

- If the system is operating with the Hi or Lo speed steering parameters in effect (see page 126), in **AUTO** or **NAV** modes.
- If the system is operating in **WORK** mode (see page 149).

The status signals are meant to be used to allow indication of those conditions on an external alarm or indicator. Both conditions are indicated on the Control Head’s LCD display (see Figure 82 & Figure 95) – but it is also sometimes useful to have them indicated with an external alarm or lamp at locations other than where the Control Head is located.

These two outputs can also be used to control automatic deployment (& retrieval) of external “stabilizer” equipment, to enhance the boat’s steering & stability when it is moving at a slow speed, or when **WORK** mode is in effect. In both these situations, the boat is moving slowly, and so there is not as much steerageway (i.e., less water flowing over the Rudder, so it does not generate as much sideways force).

All three outputs are logic-level open-drain outputs directly from the SPU’s microcontroller, and must be used only within the following voltage/current limits:

- Each output requires its own external pull-up resistor, which **must** be wired **only** to the SPU’s logic power supply (5 VDC, created by a linear regulator on the SPU, and available at the V+ pin of **J6**), and to the external alarm, lamp &/or control circuit. The resistor value plus the impedance of the load must total **no less** than 3K3 Ohms (to limit the current into the pin in the “0 V” state to **less than 1.6 mA**).
- If needed, the SPU’s Ground reference for these signals is on the GND pin of **J6**.

Signal	J6 Pin	When at 0 V	When Open-circuit
WORK MODE	WORK	Normal mode	WORK mode engaged
SPEED MODE	HI SPD	Lo Speed	Hi Speed
1PPS	1PPS	(1 pulse per second, ~50% duty cycle)	

Table 3 – Speed Mode & Timing Outputs

All outputs are ESD-protected – but you still must use them with care:

- Do not use more than about 0.5 m of cable to connect them to the external alarm/indicator or stabilizer-control circuit.
- If you must connect to something farther away than that, use a suitable buffer or isolator circuit – a transistor, a relay or (preferred) an opto-isolator block. With a relay, be sure to wire a flyback-suppressor diode across the coil.
- If shielded wire is used, connect the shield only at the SPU – to the GND pin of **J6**.

Note: *unused pins on J6 are reserved for possible future use.*

¹⁵ These status & timing signals are not provided on P2 firmware versions prior to v4r0. All the pins of **J6** are unused, on those prior versions (this connector was labelled **J6- ENGINE I’ FACE** on P Series SPUs manufactured before 2008).

¹⁶ The timing output is not provided on the P2VS, and the 1PPS pin on J6 is reserved.

Navigation Data

The Commander P2 has the ability to accept Navigation data & information formatted according to the NMEA 0183 standard (version 3.00).

Many marine electronics devices (such as digital compasses, GPS receivers, chartplotters, and electronic charting systems, to name a few) have outputs complying with NMEA 0183.

Two such devices can be connected directly to the Commander P2's SPU, by wiring them into the plug mated to the receptacle labelled **J9 – NAV I/O**.

The SPU also has an NMEA output; it transmits the autopilot's real-time Heading data and status information, for use by devices such as a radar display, a chart plotter or a navigation program on a PC.

Refer to **Appendix 2** for more information on the NMEA 0183 sentences accepted and sent by the system.

The diagram below shows typical wiring for the **J9** connector.

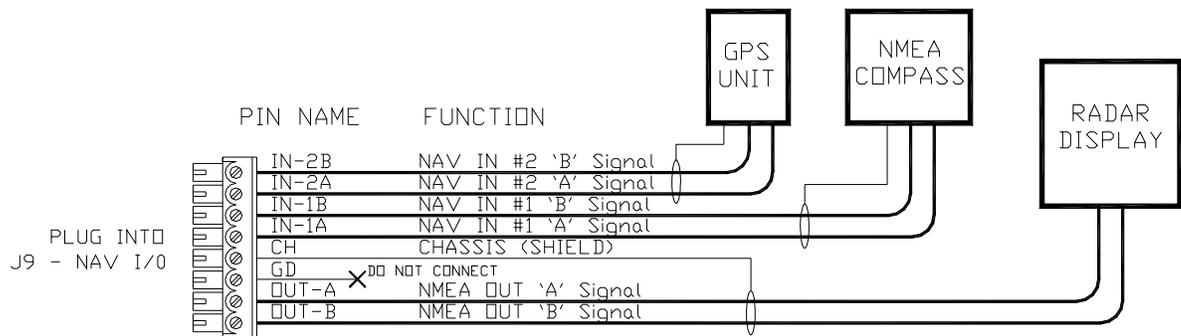


Figure 62 – Typical NMEA 0183 Connections

For proper operation, the connected device(s) must fully comply with NMEA 0183 Standard (version 3.00):

- RS-422 electrical levels
- Baud rate: 4800
- Serial data format: 8 data bits, no parity, 1 stop bit
- Correct NMEA sentence structure
- Checksums are optional, but must be valid if present

It may also be possible to use RS-232 electrical levels, in some cases – such as when using a PC (see page 181).

The **NAV2** port can optionally be run at 9600 Baud.

- To do so, you need only set the other device to transmit at that rate. The SPU automatically sets the rate for this port, by looking for “valid NMEA data” at all possible Baud rates.

Signal Names

The names of the NMEA data signals, and of the paired wires carrying them (see below), are specified in NMEA 0183: `A` & `B`.

The SPU's wiring label uses those names, on the **J9 – NAV I/O** connector (see Figure 35).

However, sometimes other equipment will use different names:

NMEA Name	J9 Connector Label	Function	Alternative Names
`A` signal	IN 1A or IN 2A OUT A	Positive voltage with respect to `B` is a logical 0 (aka Active or Space or ON ¹⁷)	+ or NMEA + SIG or SIGNAL POS or +VE
`B` signal	IN 1B or IN 2B OUT B	Positive voltage with respect to `A` is a logical 1 (aka Idle or Mark or OFF)	- or NMEA - RTN or RETURN NEG or -VE

Table 4 – NMEA Signal Translation Guide

RS-422 Electrical Interface

The RS-422 electrical interface specified in the NMEA 0183 Standard uses a pair of balanced signals (aka “differential signals”), in paired wires, with the ‘A’ signal on one wire & the complementary ‘B’ signal on the other.

It is necessary to maintain the correct signal polarity, when connecting one of the Commander P2 SPU's RS-422 input or output wire pairs to another NMEA 0183 device:

- The P2 input port's `A` signal pin must be connected to the `A` output terminal of the other device; similarly, the P2's `B` input pin must be connected to the `B` output terminal of the other device.
- Similarly, the P2 output port's `A` & `B` signal pins must be connected to the `A` & `B` input terminals of the other device.

Other points to be aware of:

- There is no Ground wire for the P2's **NAV1 - IN** ports. Both ports are NMEA Listeners (as defined in the Standard), and so are optically isolated from the rest of the SPU circuitry; they need only the `A` & `B` signal pair to function properly.
- The P2's **NAV - OUT** port (an NMEA Talker) is not optically isolated from the rest of the SPU circuitry. However, since the other device will have an optically-isolated input (if it is a fully-compliant NMEA Listener), no Ground wire for the **NAV - OUT** port is necessary¹⁸.
- The CH pin on **J9** is connected directly to the SPU chassis, and is also AC-connected to the SPU's Signal Ground, via a 100 nF capacitor. If the cable carrying the NAV signal wires from/to the other NMEA device is shielded, the shield should be wired to the CH pin.

i *The cable's shield must not be connected at the other end, or anywhere else but to **J9**'s CH pin!*

¹⁷ An NMEA 0183 serial data stream is inverted by the transmitter, and inverted again by the receiver, and so a logical ‘1’ in the data appears as a logical ‘0’ on the `A`/`B` wire pair.

¹⁸ The “ground reference” voltage for the output signals is available on the GD pin of **J9** – but note that this is *not* the SPU's signal Ground, rather it is a synthesized reference voltage, and so it must *not* be connected to *any* other Ground.

Typical RS-422 Signals

The only way to troubleshoot problems with the RS-422 NMEA signals to & from the Commander P2 is with an oscilloscope; that's because a multimeter is essentially useless for differential signals. The figure below is an example of a typical NMEA 0183 RS-422 transmission, captured on a dual-trace oscilloscope.

The data stream is from a P2 SPU's NAV - OUT port. Channel 1 is the RS-422 'A' signal, Channel 2 is the 'B' signal, and the Math trace is the differential voltage between 'A' and 'B'; the 'scope probes were manually set at 10x, so the voltages of the signals are 10 times larger than measured below. The Ground Reference for the 'scope's inputs was the GD pin of the J9 - NAV I/O connector. The Baud Rate was 4800 (or ~208.3 msec per bit).

The data being sent is the first two characters at the start of the NMEA sentence: \$A (the full sentence might have been \$APHDM,346.5,M*37 or something similar - see page 188).

In hexadecimal, \$A is: 0x24, 0x41; in binary: 0b00100100, 0b01000001.

Following the rules of NMEA 0183, that binary data was transmitted starting with the least significant bit of the first character, in 8-bit groups: 00100100, then 10000010 (as shown in the blue overlay in the figure below). The transmitter circuit demarked each group ("byte") by a leading '0' Start bit and a trailing '1' Stop bit. Finally, the train of bits was sent to the RS-422 differential driver output circuit, which put inverted bits on the 'A' signal line, and non-inverted bits on the 'B' line.

Before transmission from the RS-422 driver started, the signals were in the Idle state: 'A' was at a low voltage with respect to 'B' (the same state as a '1' bit). After all the bits of the full sentence had been transmitted, the signals would have returned to the Idle state.

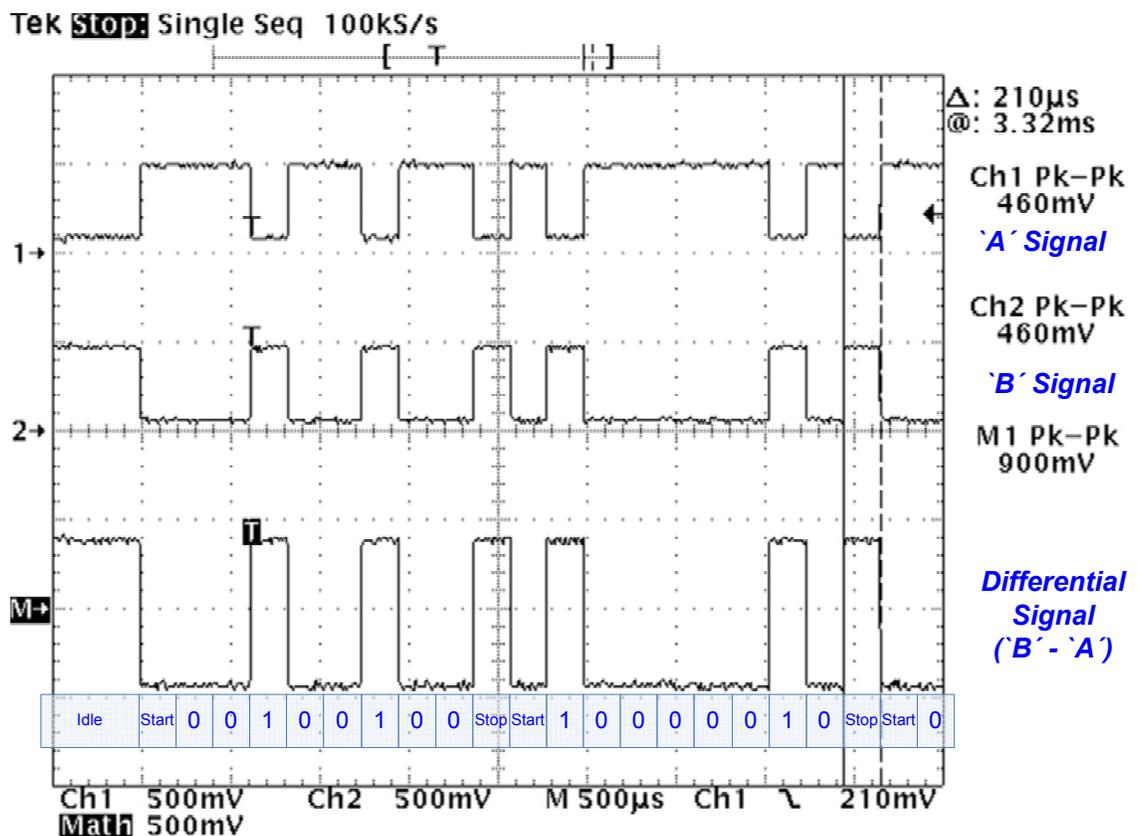


Figure 63 - Typical RS-422 Signals

RS-232 Electrical Signals

It is common for non-marine equipment (especially PCs) to be able to transmit & receive NMEA-formatted data – but not using the RS-422 electrical interface specified in the NMEA Standard, instead using another electrical interface, RS-232. A prime example is Personal Computers: the “COM port” on a PC is always at RS-232 levels.

An RS-232 interface, in contrast to RS-422, does not use differential-signal wiring. Instead, a single wire is used for each of the main signals¹⁹ – Receive (usually labelled “Rx”) & Transmit (“Tx”) – and for the Signal Ground (“Gnd”). The voltage levels are also different than RS-422.

Such equipment (often described as being “NMEA compatible”) can usually be connected directly to the Commander P2 – although there is some risk of reduced electrical noise immunity. See the section on **PC COM Ports** on page 181 in **Appendix 1** for more details.

Status LEDs

When the autopilot is turned on, the Status LED labelled **NMEA 0183 IN #1** in the SPU's Diagnostic section will be flashing whenever the autopilot is receiving data on **NAV1 - IN**. Similarly, the **NMEA 0183 #2** LED will be flashing whenever the autopilot is receiving data on **NAV2 - IN**.

Typically, an LED will flash at a rate of about once per second for regular data from a GPS or Chartplotter. It will typically flash at a rate of about ten times per second when connected to a Heading source, such as the Vector G2 GPS Compass.

ⓘ *The LEDs only show that data is being received on the associated Nav1 (or Nav2) port. They do not mean that the data received is valid!*

*If the LED for a port is flashing, but you are seeing INVALID or NO DATA Navigation (Heading, Speed, Course, NAV) error messages for that port on the Control Head, and yet you are sure the other device is in fact sending valid data, try reversing the wires connected to **NAV1 – IN**, or **NAV2 – IN**. It is possible that the other device's signal names are not NMEA's `A` & `B` (see Table 4, above), and so might have been connected the wrong way round; reversing the wire pair at **J9** often solves this situation.*

If you are still seeing error messages, something else is wrong. Contact your ComNav Dealer for assistance.

Other Connections

Thruster Interface

The **J7 – THRUSTER I' FACE** connector is used with the CT7 Thruster Interface. The receptacle is not supplied with a mating plug, since the required plug is supplied with the CT7.

ComNav Network

The **J10 – COMNAV NETWORK** connector is reserved for possible future use. The receptacle is not supplied with a mating plug.

¹⁹ There are also several RS-232 status signals, but these are not used in the P2.

Final Steps & Post-Installation Checks

Before using the Commander P2 or P2VS for the first time, please verify that the entire system & all its components are safely and securely mounted, and will not shake loose from the vibrations that can be expected in a marine boat.

Electrical Checks

ⓘ *Only after all these checks are passed should you plug the power plug into the **J1-BATTERY INPUT** receptacle on the SPU.*

- 1) Check the power supply wiring (from the battery/breaker).
 - Verify that the polarity and voltage are correct (use an accurate voltmeter for this).
 - Check for correct wire size, tightness of all connections, fusing, and proper operation of the battery power breaker or switch.
- 2) Check the connections from the Compass(es) to the SPU.
- 3) Check the connections from the Rudder Follower Unit to the SPU.
- 4) Check that when the rudder is manually moved from full Starboard to full Port, and vice-versa, the RFU moves completely freely, and is not being restricted in any way.
- 5) Check the connection(s) from the Control Head(s) to the SPU.
- 6) Check the connections to the drive equipment from the SPU.
- 7) Check that all cables are neatly placed and secured.
- 8) Ensure that extraneous materials (bits of insulation, wire pieces or strands, etc.) have been removed.

During the first few weeks of operation, repeat the checks above at least once.

Completing the Wiring

- 1) Route all the wires and cables sideways out from the SPU (to the left &/or right, as appropriate). Use external tie-downs or cable holders to keep the wires & cables secure, with no excess strain on them, or on the plugs that are mated to the SPU's receptacles.

Many potential problems can be avoided by ensuring that cabling and wiring do not cause strain on the connectors!

- 2) If the SPU is mounted on a vertical surface, route all wires & cables downwards, within a few centimetres of the edge of the SPU. If the SPU has been mounted on a horizontal surface, form drip loops in all wires & cables, close outside the edges of the SPU.
- 3) Finally, carefully re-install the Wiring cover on the SPU. Be sure not to pinch any of the wires or cables between the Wiring Cover and any other part of the SPU.
- 4) Secure the Wiring Cover with the two knurled thumb-nuts.
- 5) Ensure that the cabling and wiring to all system components, *especially Remote Controls*, are well secured with clamps or alternative fasteners.

Setting Up the System

Setting Up

This chapter describes all the steps needed to prepare your Commander P2 or P2VS, for use on your boat, after you have installed it.

Note: *to do the procedures described in this chapter, you will need to be familiar with the basic concepts of using the autopilot's Control Head – modes, menus, turning the system on & off, and so on.*

*If you have not already done so, please read the introductory parts of the **Basic Operations** chapter.*

Dockside Setup Menu

Almost all the steps involved in setting up your Commander P2 for use on your boat require using the Control Head's Dockside Setup menu – so it will be described here first.

Typically, the Dockside Setup menu is used only infrequently after initial setup.

A special combination of buttons must be used to access the Dockside Setup menu:

- 1) Start with the P2 system powered off.
- 2) Press and hold the **Fn** button and the **TURN** button.
- 3) Then press & hold the **STANDBY** button. Power will turn on.
- 4) Hold all three buttons activated until the software version numbers are displayed, then release the buttons.



Figure 64 – Entering Dockside Setup

- 5) After several seconds, the display will show the Dockside Setup menu (see Figure 65).

Note that a large 'D' (which is the indicator that the system is in Dockside Setup) appears in the upper left portion of the display.

Note: *on a P2VS without an RFU installed, an alarm may sound while the system is starting up. You can ignore this alarm; it will stop when the menu appears.*

The Dockside Setup menu is unlike other menus:

- There is no time-out feature associated with it.
- When you exit it, the system performs a full Power-On sequence, ending up in **STANDBY** mode.
- Many of the items listed in the Dockside Setup menu are not simple *parameters*, but instead are *automated scripts* (sequences of pre-defined steps) that perform a variety of functions and system tests.
 - ⇒ The letters "Fn" on the right hand side of the menu display identify the items that are scripts. To activate the associated script, press the **Fn** button.

D 		D 	
Reset	Fn	Alarm O/P	None
Vessel Type	Displ.	Thrust Type	Prop.
Compass Setup	Fn	Thrust MIN	0
Drive Setup	Fn	Thrust MAX	30
Exit	Fn	Language	English

Figure 65 – Dockside Setup menu

Reset

A full reset of all the P2's operating parameters is done when the **Fn** button is pressed; the word "Reset" changes to "RESET" to show that it has been done.

Caution! A "full reset" means that **ALL** parameters in the entire autopilot system are set back to the default settings installed at the factory.

*This means any configuration (Compass & Drive Setup) you have done, and all parameter adjustments you have made, **WILL BE LOST!***

You should use this full-reset function only on the advice of an authorized ComNav service representative!

Vessel Type

Set this to match as closely as possible to the type of boat that the autopilot is installed on. The system then automatically selects a specific set of equations & constants – for use in the P2's steering algorithms – which have been found to work reasonably well with typical boats of the chosen type. Also selected are the initial values of the Steering Parameters used in those equations (see **Sea Trials** on page 103 and **Auto Menu** on page 124 for more details).

Note: *during Sea Trials, and later in normal operation, you can adjust any or all of the Steering Parameters' values, to better suit your own boat, and/or the current sea conditions.*

Setting	Vessel Type	Comments
Stern	Stern Drive	Choose this for planing-hull boats with outboards or stern-drive legs.
Sail	Sailboat	For sailboat of all types.
Displ	Full Displacement	Choose this setting for full displacement boats that do not plane or rise out of the water at cruising speed.
Semi	Semi-Displacement	Choose this if your boat rises partially out of the water at cruising speed.
Plane	Planing Hull	Choose this for boats that are mostly out of the water at cruising speed.

Large	Large, with a slow Helm response	Vessels in this category are typically over 125' LOA &/or 100 GRT (e.g., freighters, tankers, dredgers, car/truck ferries, fish processors, etc.).
-------	----------------------------------	--

Table 5 – Vessel types

Compass Setup

Pressing the **Fn** button when this line is highlighted starts the configuration menu for various compasses the autopilot can work with.

You should make sure you have connected your compass to the right port. Wiring diagrams are given in System Overview for Compasses. You should also refer to your compass manual for special requirements. See the **Compass Setup – Dockside** procedure for full details.

Drive Setup

Pressing the **Fn** button when this line is highlighted starts a script in which the autopilot automatically determines the orientation of the RFU, measures the physical limits of the rudder's range of motion, figures out what kind of steering system (i.e. reversing motor, solenoid, etc.) is installed, and then tests all these to make sure everything is operating properly.

This is explained more fully under **Drive Setup** on page 91.

Exit

Press the **Fn** button to exit the Dockside Setup menu and restart the autopilot in **STANDBY** mode.

Alternately, you can press and hold the red **STANDBY** button to shut off the autopilot.

Alarm O/P (Alarm Output)

This parameter controls the functioning of the External Alarm Output. See **Watch Alarm & External Alarm** on page 170 in the **Advanced Operations** chapter for full details.

Thrust Type

Thrust MIN

Thrust MAX

If the optional CT7 Thruster Interface is installed with your Commander P2 system, you will need to make adjustments to these settings. Complete instructions are included with the CT7 Thruster Interface.

Language

This parameter allows you to set the language used for almost all menus & messages that appear on the Control Head.

Note that a few items remain in English at all times – typically where there is no simple translation for that item. Also, the word “Language” on the menu is always shown in English.

Choices are as follows:

- English
- Français
- Español
- Íslenska
- Italiano
- Norsk

Note: *other languages may be added in future Firmware Upgrades.*

Configure Sys. (*Configure System*)

This menu item allows you to save (or retrieve) the full set of operating parameters, from all menus & internal settings, of the P Series system to (or from) an external device (e.g., a PC).

See **Configuration Save & Restore** on page 190 for full details.

Setup Procedures

After your P Series autopilot system is installed, you must:

- First, tell the autopilot what type of boat you have, and then help it determine the characteristics of the Rudder Drive mechanism on the boat.
- Next, tell the autopilot what type of Compasses it will be using, and have it verify that it can use those compass(es).
- Next compensate & calibrate all your compasses.
- Next, do the initial settings of the various operating parameters (Rudder gain, etc.) at high & low speed.
- Finally, test how well the autopilot performs in various sea conditions, re-adjusting parameters as needed.

Vessel Type

- 1) Power the system up, in the Dockside Setup menu
- 2) Select the **Vessel Type** menu line, and set the type of your boat according to the table on page 87.

D	
Reset	Fn
Vessel Type	Displ.
Compass Setup	Fn
Drive Setup	Fn
Exit	Fn

Figure 66 – Set Vessel type

Note: at this step in the setup process, all the various Vessel Types (Displacement, Stern, Sail, etc.) can be selected, for both the Commander P2 and P2VS.

However, if there is no RFU detected on the P2VS during the **Drive Setup** procedure, the Vessel Type parameter will automatically change to “Stern”, since that is the only valid selection for Virtual Rudder Feedback operation.

When this happens, the vessel type displayed on the menu line will not change to “Stern” – but the change has taken effect internally. If you exit & re-enter Dockside Setup, the menu line will then show that change.

Drive Setup

The procedure for setting up the autopilot to work properly with your boat's steering system²⁰ varies, depending on whether or not you have fitted a Rudder Follower Unit.

- For a Commander P2, or a P2VS which has an RFU fitted, the Rudder's characteristics are automatically measured by the autopilot, during Drive Setup²¹.
- For a P2VS without an RFU – where you will be using its *Virtual Rudder Feedback* feature – you will need to “tell” the P2VS what the Rudder has done at various points in the Drive Setup process, and help it make a few measurements of the associated hydraulic/electrical drive system.

But in both cases, the purpose of the procedure is to find out:

- The type of drive system – solenoid(s) or a reversing motor – the boat has.
- The orientation of the RFU (if one is fitted).
- The direction the Rudder moves in relation to the voltage polarity of the drive outputs from the SPU.
- The Hard-Over to Hard-Over time of the Rudder.
- The physical limits of the Rudder's travel.

To begin the Drive Setup procedure, move the Dockside Setup menu highlight to “Drive Setup”, and press the **Fn** button. This will start the setup's automated script.

You will see a series of screens, prompting you to for various actions or information; for example: move the Rudder all the way to Port, or centre it, or enter the maximum deflection of the Rudder, and so on.

Some points to keep in mind, while doing this procedure:

- 1) Use the boat's manual steering system (wheel, tiller, etc.) to move the Rudder, when prompted.
- 2) When moving the Rudder to the maximum Port or Starboard position, be sure to move it all the way to the physical stops.

Note: *in normal operation, the autopilot always stops the Rudder a few degrees shy of that position, to avoid pounding it against the stops.*
- 3) Similarly, on a P2VS without an RFU, enter the angle (in degrees) at the maximum Port & Starboard deflections which you want the autopilot to use.

ⓘ *The values you enter should be no larger than the Rudder's mechanical limits! If you enter different values for Port & Starboard, the smaller of the two will be used for both.*
- 4) The speed at which you move the Rudder manually does not matter, nor does it matter if you move the Rudder back and forth a bit when it reaches the requested position.
- 5) Do not be concerned if the Rudder Angle Indicator shown on the screen initially goes in the wrong direction. The autopilot will sort that out during the procedure.
- 6) If for some reason, the autopilot was not able to detect the type of drive, you will see a “Drive Detection Failed” screen.
 - Go back to the Dockside Setup screen, re-check all the drive wiring, and then re-start the Drive Setup procedure.
 - If you continue to have problems, contact your ComNav Dealer for assistance.

²⁰ ... which could be a Rudder, an I/O leg, an outboard motor, and so on – but is referred to here as “Rudder”.

²¹ The word “Drive”, as used on the menus, sometimes refers to the hydraulic &/or electrical system that the boat uses to control the steering mechanism (Rudder, etc.), and other times to the mechanism itself.

- 7) After detecting the drive type, a P2, or a P2VS with an RFU, gives you the option to bleed your hydraulic steering system:

If you wish to do this, please refer to the hydraulic system's manual.

When all Bleeding is done, press the **Fn** button on the Control Head.

- If you do not have a hydraulic system, just press the **Fn** button on the Control Head.

Note: *on a P2VS without an RFU, the bleed option is not provided. You must have already done proper bleeding, before starting the drive setup procedure.*

- 8) When the P2 or a P2VS with an RFU is testing the drive system's performance, it will run the Rudder from hard-over to hard-over a number of times. It will also make a series of short movements – quick starts & stops – of the Rudder, in order to determine a base reference for how the steering system responds to the typical small movements the autopilot uses during normal operation.

Note: *a P2VS without an RFU does not do any "performance testing" of the rudder drive system.*

- 9) After the autopilot has determined the time span for a Hard Over to Hard Over movement of the Rudder, there are several possible results:

- If the HO-HO time is too fast (less than ~5 seconds), the setup may fail. That's because if the Rudder moves too quickly, it can not be safely controlled by the autopilot.

On the other hand, the setup may also fail if Rudder is too slow (more than ~22 seconds HO-HO), because the autopilot will not be able to control the Heading of the boat properly.

⇒ In either case, you will need to make some changes to the drive system, to slow it down or speed it up, as appropriate.

- If the drive system is a reversing motor (in a hydraulic or cable drive system), and it did not test as too slow, you will see an option to have the autopilot slow down the Rudder intentionally.

Slowdown is done by using Pulse Width Modulation of the SPU's drive output voltages. PWM in effect lowers the voltage "seen" by your drive system's motor(s), and thus slows down the Rudder's HO-HO time.

⇒ On most boats, it is probably not necessary to slow down the Rudder, unless the HO-HO time is less than ~10 seconds. However, every boat is different, and so the choice is left up to you.

If you choose to slow down, the Rudder movement will be re-tested (in the same sequence of test steps as you just did), but with it slowed down using a PWM signal that should run the motor(s) at about 65% of full speed (i.e., the HO-HO time should be ~50% longer than at full speed).

Note: *slow-down is automatically selected for Stern Drive boats when operating using the "Hi" Parameter Set (see page 126).*

- ⓘ **PWM may increase the electrical "noise" emitted from the drive system's wiring, potentially causing interference with other equipment.**

If this happens, but you still wish the autopilot to slow down the Rudder, you may have to re-route the wiring, and/or use better (possibly shielded) wiring, and/or take other typical "noise reduction" steps. Contact your ComNav Dealer for assistance.

When Drive Setup is all done, record the settings & choices you made, in the **Settings** chapter at the back of this manual.

Compass Setup – Dockside

Highlight Compass Setup in Figure 66 and press Fn. The list of all four supported compass heading sources will be displayed (see Table 6 on 97).

D	
Analog Compass	None
Digital Compass	None
NAV1 Port	NMEA
NAV2 Port	NMEA
Exit	Fn

Figure 67 – Set Compass Type in Compass Configuration menu

The first step in setting up your compass(es) is to verify that it is (or they are) properly wired to the SPU).

After the verification, depending on which compass or compasses you have, you must do calibration or configuration one at a time.

All calibration or configuration should be done while tied up to the dock, in case any re-wiring needs to be done, or if it turns out that some elements of the P2 system need to be moved.

Note: during these steps, the autopilot may issue an *INVALID HEADING* alarm (see page 196). These alarms can be ignored, or cancelled by hitting the **Fn** button.

Once a compass is “found” during this procedure, the alarms should cease.

Analog Compass

An analog compass may be in the type of Magnetic, (ComNav) Fluxgate with or without HRS, Fluxgate with fixed reference, or float reference. If you don't have an analog compass, leave Analog Compass to None and move to the next line.

- 1) If you are not already in the Compass Configuration menu as seen in Figure 67, start it by selecting **Compass Setup** with **Fn** button from the Dockside Setup menu (see the Dockside Setup menu as seen in Figure 66).
- 2) Highlight “Analog Compass”, and turn the knob to set the type according to what compass you have (see Table 6 on page 97).
 - If you have installed a **Heading Rate Stabilizer and a Fluxgate compass**, this parameter should be set to “**HRS**”.
- 3) Press **Fn** to verify that the selected compass type is properly connected and can be read.
 - A “Please Wait” screen will be displayed for a few seconds. Then, the results of the search will be displayed, along with an option to “Compensate Now?” or “Set North Now?”. The type of Analog compass that is shown, and the “Compensate ...” or “Set ...” option, will depend on what you selected for “Analog Compass”.
 - Skip the compass/HRS compensation process (press the **PORT** button), since this can not be done while still tied up at the dock.

- If the autopilot could not find a compass that matches with the type you have selected in step 2), it will display a “not found” error message at this point.

Note: *some types can masquerade as others, so be sure you have selected the correct type at step 2).*

Check your installation to be sure that the compass is wired correctly. Fix any problems, and re-start at step 2).

Contact your ComNav Dealer for help, if necessary.

- 4) Return to the Compass Configuration menu.

Digital Compass

The digital compass the P2/P2VS autopilot supports is the 45° Compass. If you don't have a 45° Compass, leave Digital Compass to None, and move to the next line.

- 1) If you are not already in the Compass Configuration menu as seen in Figure 67, start it by selecting “**Compass Setup**” with **Fn** button from the Dockside Setup menu (Dockside Setup menu is seen in Figure 66).
- 2) Highlight “Digital Compass” and turn the knob to set the value to **Fixed**.
- 3) Press **Fn** and the autopilot starts to search for the compass.
You will not be able to move away from this line without press the **Fn** button if you have changed the parameter from **None** to **Fixed**.
A “Please Wait” screen will be displayed briefly. Then, the results of the search will be displayed, along with an option to “Compensate Now?”
- 4) Skip the compass compensation process (press the **Port** button), since this cannot be done while still tied up at the dock.
- 5) Exit the Compass Configuration menu.

NAV 1 Port

NAV Ports are always available as a compass source and need not be installed. However, if you have a Tri-Axis Rate Gyro Compass connected to NAV1 port, you can calibrate the compass when your boat is on the water. See **Compass Setup – on the water** for setting up **Tri-Axis Rate Gyro Compass** on page 100.

NAV1 or NAV2 Port for general NMEA Compass

For other NMEA compasses – such as a Vector G2 or G2B GPS Compass – you should refer to the setup & configuration instructions that are supplied with it.

Some points to keep in mind:

- 1) For proper performance of the autopilot, the update rate of the Heading sentences from the NMEA compass must be ~10 Hz²².

Typically, you can set the sentence update rate in an NMEA compass using a generic “terminal” program, or a product-specific “control” program, on a PC (e.g., HyperTerminal, or Airmar's WeatherCaster™).

Be sure to make that 10 Hz rate the “power-on default” rate.

²² More than 10 Hz is not useful, but at much less than that the autopilot will not be able to maintain good control of the vessel's steering.

- 2) Whenever an NMEA compass is being used as the Heading source (see page 117), if valid Heading/Compass data sentences are not received for ~3 seconds, an INVALID HEADING alarm will occur.
- 3) If you are going to be using only Magnetic Heading values, or only True, then you only need to set the NMEA compass to output the corresponding sentence – HDG or HDM for Magnetic, HDT for True.
- 4) If you wish to be able to switch between True & Magnetic (via the **NMEA Heading Type** parameter in the Standby menu – see page 118), then HDT and either HDG or HDM should be enabled, with both HDT & HDG/HDM at 10 Hz (but see the section on “Bandwidth”, below).

To verify that an NMEA compass is connected, look at the **NMEA IN** LEDs in the Diagnostic section; the LED for the SPU’s NAV input which the compass is connected to should be flickering.

Note: *if the `A` & `B` wires are connected backwards, the LED will still flicker; but when NAV1 or 2 is later selected at the Compass Source in the Standby menu, no Heading will be displayed, and a NO HEADING alarm will occur. If this is the case, simply swap the `A` & `B` wires.*

It’s worth noting that some NMEA compasses, even if correctly wired, will sometimes be outputting Null Heading values. For example, the Vector G2/G2B, if it can not “see” enough GPS satellites well enough to be able to compute Heading, will output these sentences:

```
$GPHDM, ,M*1B
$GPHDT, ,T*1B
```

In this case, the Heading data fields (between the commas) are empty, meaning “null” or “nothing” (not “zero” – since that is a valid Heading value).

This will result in no Heading being displayed on the Control Head, and trigger a NO HEADING alarm.

To deal with this condition, please refer to the NMEA compass’ manual – and in the meantime, use one of your other on-board compasses!

Bandwidth of an NMEA Compass Connection

You must always be sure that maximum bytes/second capability (aka “data rate” or “bandwidth”) of the serial link between the NMEA compass & the autopilot is not exceeded by the enabled sentences.

The maximum data rate of an NMEA 0183 serial link is always 1/10th of the link’s Baud Rate.

An example calculation:

- The Baud Rate of the SPU’s NAV1 input is fixed at 4800, so if the NMEA compass is connected to NAV1, it must be configured to output at 4800 Baud, and the max data rate is then 480 bytes/sec.
- HDT & HDM sentences are each 20 bytes long, and HDG is 33.
- Thus, it is possible to have both HDT & HDM at 10 Hz each, connected into NAV1:
 - $20 \times 10 + 20 \times 10 = 400$ bytes/sec ... < 480 bytes/sec
- But it is *not* possible to have both HDT (or HDM) & HDG into NAV1:
 - $20 \times 10 + 33 \times 10 = 530$ bytes/sec ... > 480 bytes/sec

- However, since the Baud Rate of the SPU's NAV2 input can be either 4800 or 9600²³, the max data rate is 960 bytes/sec ... and so both HDT (or HDM) & HDG can be used into NAV2, at 10 Hz each.

This check must include any other NMEA sentences output from the NMEA compass.

As an example: the Vector G2/G2B can also output the boat's Speed Over Ground (in the VTG sentence – 45 bytes), which can then be used as the autopilot's Speed Source data input:

- The factory default setting of the G2/G2B is HDT & HDM at 10 Hz each, and VTG at 1 Hz (on Port B). That is indeed useable on NAV1, as well as on NAV2:

$$- \quad 20 \times 10 + 20 \times 10 + 1 \times 45 = 445 \text{ bytes/sec} \dots < 480 \text{ bytes/sec}$$

- ❗ *The total bytes/sec of all sentences must always be less than the link's max data rate!*

*Problems caused by exceeding the max data rate are usually **very** hard to troubleshoot.*

The excessive rate will cause data errors, mostly in the form of partial sentences (caused by buffer memory overflow in the sending device, and/or in the SPU). These are always invalid, so the SPU discards them.

But that causes subtle problems. For example, if the Heading sentences are being truncated, a few will usually still get through OK, and so the SPU will not raise a NO HEADING alarm (the SPU's error-detection routines do not measure update rate, but only check if any valid data is being received). However, the effective Heading update rate will be less than is required for "good steering" – so the autopilot will seem to be "steering poorly".

A specific case: if the Heading data source device is nominally transmitting valid Heading sentences at 10 Hz, but only 2 are getting through OK per second, then the effective Heading update rate that the autopilot is using is 2 Hz ... and that's much, much too low for "good steering".

Similar problems can occur with other NMEA data used by the autopilot (Speed, Position, Waypoints, etc.), if the link max data rate is exceeded.

²³ NAV2's Baud Rate is automatically set by the SPU – by looking for "correct" NMEA sentences at each rate possible.

Compass Source	Setting	Compass Type	Comments
Analog Compass	Mag		Choose this setting if you have an externally gimballed magnetic compass fitted with a ComNav Magnetic Sensor, such as the one shown to the left.
	Flux		Choose this setting if you have a ComNav Fluxgate Compass like the one shown to the left. <i>If you have a ComNav Heading Rate Stabilizer connected in series with the Fluxgate Compass, use the HRS setting (below).</i>
	Fixed	—	The autopilot can accept a variety of Analog compasses. Consult the manufacturer's documentation, or contact the manufacturer, to determine whether the reference signal is fixed or floating, and set the An. Compass Type to match.
	Float	—	
	HRS		Choose this setting if you are using a ComNav Heading Rate Stabilizer (& Fluxgate Compass) like the one shown at the left.
Digital Compass	Fixed		Choose this setting if you have a 45° transducer connected.
NAV1 Port	SSRC1		Choose this setting if you have a ComNav Tri-Axis Gyro Rate compass connected.
NAV1 or NAV2 Port	NMEA		Choose this setting if your autopilot system is utilizing any type of NMEA 0183 Compass (such as the ComNav Vector G2 or G2B GPS Compasses) other than Tri-Axis Rate Gyro compass or a specific NMEA compass that ComNav may support in the future. This type of compass usually does not require specific calibration, or can be calibrated through other means.

Table 6 – Compass types

Compass Setup – On the Water

The final steps of compass setup should normally be performed after all other installation and setup procedures for the autopilot system are completed, so that all net electrical and magnetic effects of the installation on the compass(es) are taken into account.

First you must compensate the compass(es) for Magnetic Deviation²⁴. Then, you may need to calibrate each compass (i.e., correct for any inherent constant directional offset in each).

You will need to take your boat away from the dock, and out onto a body of open water (the sea, a lake, a river, etc.), and in relatively calm conditions.

It is important that there be sufficient sea room to put the boat through a series of fairly slow & wide circle turns, and to run the boat for several minutes on a straight Track at various Headings, without encountering obstacles, other marine traffic, etc. You should also avoid areas around bridges, underwater power lines, and pipelines, as these can affect your compass(es).

ⓘ Caution! *Be sure to keep a proper lookout for other boats, and any hazards, while doing any of the circle turns & manoeuvres described below.*

Note: *some of the steps performed here require that you be familiar with the **STANDBY** mode & menu of the autopilot (see page 110).*

*During all these procedures, the INVALID HEADING alarm may occur. You can cancel it (press the **Fn** button), or leave it active.*

Compensation for Magnetic Deviation

The procedure you will follow to compensate your compass(es) depends on the type(s) of compasses you have installed.

Some elements of all the procedures are the same:

- You can take as long as you like to start the turns required to compensate any of the compasses requiring it, but once the SPU detects that you have started the turns, you have ~6 minutes to complete enough turns, before a “Failed ...” screen appears.
- You may choose to do the turns either to Port or to Starboard. It doesn't matter which way, as long as you do not reverse direction during the compensation step.

Boat speed matters only in that it should be sufficient to hold a constant rate of turn of about 2 to 3 degrees per second, meaning that the full circle should take between 3 & 2 minutes. As well, it should be sufficient that you can steer smooth, steady turns in the current sea conditions.

Magnetic Compass Sensor

ComNav strongly recommends that a professional compass adjuster compensate Magnetic Compasses.

The Sensor itself does not require compensation, only calibration.

²⁴ In the P Series, Magnetic Deviation compensation of Fluxgate Compasses (with or without HRS), and of the 45° Compass Transducer, only corrects for Hard-Iron effects. Soft-Iron effects are not corrected for.

Heading Rate Stabilizer

Note: *if you have a Heading Rate Stabilizer, you only need to compensate it. You do not need to compensate the Fluxgate Compass attached to it (and in fact, trying to do so will cause an error).*

If you do not have an HRS, do the Fluxgate Compass procedure instead of this.

- 1) With the autopilot powered off, loosen the white plastic screw on the top of the Heading Rate Stabilizer²⁵, by approximately 3 turns (don't remove it all the way, though).
- 2) Power up the autopilot, in the Dockside Setup menu.
- 3) Move the highlight to the "Compass Setup" line, and press the **Fn** button.
- 4) Highlight "Analog Compass", make sure the parameter is correctly set to "HRS", and press the **Fn** button.
- 5) You will see a "Reading Compass" screen, and then a "Turn Boat at 3°/s" screen.
 - If "ComNav HRS Found" appears instead, the HRS has not entered its test mode. Power off, back the HRS screw out another turn & re-try.
- 6) Manually steer the boat in a circle.

You will typically need to do a bit more than 2 full circles.

- 7) After enough circles, the screen should change to say "Compensation OK"²⁶.

Press the **PORT** button, to end the HRS testing procedure and go back to the Compass Configuration menu.

- If the "Compensation OK" screen does not appear after you have done more than 3 full circles, or if the screen shows "HRS Compensation Failed", shut off the autopilot, check all wiring, then repeat this procedure from step 2).
 - If that does not work, you should repeat the procedure, but try to turn the boat in a bigger, steadier circle.
 - If that does not work, you may also have to relocate the compass and/or HRS.
 - If you continue to encounter difficulties, please contact your ComNav Dealer for assistance.
 - To repeat the HRS compensation, you must power the system off & then back on again (in Dockside Setup). If you try to repeat compensation without a power cycle, you will see "ComNav HRS Found" appear on the screen, followed by "HRS Compensation Failed". If this occurs, press the **PORT** button to abort the invalid HRS compensation attempt.
- 8) Screw the plastic screw on the top of the HRS all the way in again. Be careful not to over-tighten it.

The HRS is now compensated. It and the Fluxgate Compass attached to it are ready for use (although the combination may still need to be calibrated).

²⁵ Backing out the screw toggles an internal "mode" switch, which it turn causes the HRS, the next time it is powered up, to perform some internal tests. In these tests, it adjusts certain of its operating parameters to the specific electrical characteristics of the Fluxgate Compass which it is connected to, and for Hard-Iron deviation errors. During testing, the HRS is outputting an "invalid" Sine/Cosine signal pair to the SPU ... both signals are at 2.5 Volts.

²⁶ The HRS has completed its tests, and is now outputting "valid" Sine/Cosine signals – derived from the Fluxgate's Sine/Cosine signals, but compensated for the vessel's rate of turn – to the SPU.

ComNav Fluxgate Compass and other fluxgate compasses

Note: if you have an HRS, do the compensation procedure for that, instead of this one.

- 1) Power up the autopilot in the Dockside Setup menu.
- 2) Select “Compass Setup” & press the **Fn** button.
- 3) Highlight “Analog Compass”. Make sure the parameter is set correctly for the type of Fluxgate Compass that you are using, and press the **Fn** button.
- 4) After the autopilot has auto-detected the compass, you will see a prompt to do compensation. Press the **STARBOARD** button to do that. During the compensation, you will see a “Turn at 3%/s” prompt on the screen.
- 5) Manually steer the boat in a circle.

Keep turning until the display reads “Compensation OK”; usually, it takes a bit more than one full turn, but sometimes it can take 2 or 3 turns.

- If after several turns, the display does not say “Compensation OK”, or if it says “Compensation Failed”, check all wiring, and/or relocate the compass, and begin the procedure over.
 - If you continue to encounter difficulties, please contact your ComNav Dealer for assistance.
- 6) Press the **PORT** to go back to the Compass Configuration menu.
 - 7) The Fluxgate Compass is now compensated and ready for use – although it may still need to be calibrated.

45° Compass

If you are not already in the Compass Configuration menu, start it as by selecting “Compass Setup” & press the **Fn** button.

- 1) Move the highlight to “Digital Compass”, and set the parameter to “Fixed”, and press the **Fn** button.
- 2) The rest of the compensation procedure is same as the step 4) to step 7) in above for the compensation of Fluxgate Compasses.

Tri-Axis Rate Gyro Compass

Note you will only be able to calibrate the gyro compass when the compass is connected to **NAV1** port, and you have followed the wiring in Figure 43 on page 67.

If you are not already in the Compass Configuration menu, start it as by selecting “Compass Setup” & press the **Fn** button from the Dockside Setup Menu (see the Dockside Setup Menu in Figure 66 on page 90).

- 1) Move the highlight to “NAV1 Port”, and set the parameter to “**SSRC1**”, and press the **Fn** button.
- 2) The rest of the compensation procedure is same as the step 4) to step 7) in above for the compensation of Fluxgate Compasses.

Other NMEA Compasses

Many NMEA compasses will not require compensation such as the ComNav Vector G1/G2/G2B GPS Compass. In all cases, you should refer to the instructions that came with your compass to determine whether compensation is needed and how to do it.

Calibrating for Compass Offset

Even after your compass(es) are compensated for Deviation, they still may not be giving a correct reading.

Any or all of them may have an individual fixed offset, so you must tell the P2's SPU what each one's *calibration* value is.

Calibration is a simple matter of synchronizing each compass's directional readings, as seen by the SPU, to the actual Magnetic direction values of the Earth's magnetic field.

All Compass Types

Bring the boat onto a known bearing and maintain it there by steering manually. The autopilot should be in **STANDBY** mode.

- 1) Double-press the **STANDBY** button to bring up the Standby menu. Select "Compass Source", and set it to the correct value for the first of your compasses:
 - "Analog" for a Magnetic Sensor, a ComNav Fluxgate Compass (with or without HRS), or a non-ComNav Fixed or Floating Analog Compass
 - "Digital" for a 45° Compass
 - "NAV1" for an NMEA compass connected to the IN-1 pins of the **J9 – NAV I/O** connector.
 - "NAV2" for an NMEA compass connected to the IN-2 pins of **J9 - NAV I/O** connector.
- 2) Move the highlight down one position to "Compass Cal". Using the **COURSE CHANGE** knob, adjust the reading so that it agrees with the known bearing that the boat is on.
 - Any changes simply increase or decrease the value stored in the P2's settings memory, by 1° per click of the **COURSE CHANGE** knob.
 - When you first set up your compass(es), the initial calibration value for each compass is the value it was outputting at the time it was detected during Dockside Setup.
- 3) Move the highlight back to "Compass Source", select the next type of compass you have, and repeat step 2). Repeat for all your compasses.
- 4) Double-press the **STANDBY** button to exit the Standby menu.
- 5) Verify that the compass heading shown agrees with the actual heading of the boat, and stays steady, by holding a number of constant-heading courses for a few minutes each.

Note: *NMEA compasses (e.g., the ComNav Vector G2/G2B GPS Compass) typically do not require on-the-boat calibration. You should refer to the Installation & Operation manual that came with your NMEA compass to verify this, however.*

Even if your NMEA compass does require calibration, it may not be necessary to set the value in the P2. Many – if not most – NMEA compasses can store their own calibration value. If that is so, you should skip the steps below, and follow the instructions that came with the NMEA compass.

However, if you wish to set a calibration value for an NMEA compass in the autopilot, you may do so. Indeed, you may set two values – one for each of NAV1 & NAV2.

Magnetic Sensor

There is an alternative calibration procedure, for Magnetic Sensors only:

- 1) Power up the autopilot in the Dockside Setup menu.
- 2) Select Compass Setup & press the **Fn** button.
- 3) Highlight “Analog Compass” and set the parameter to “Mag”; press the **Fn** button
- 4) After the autopilot has auto-detected the compass, it will ask you if you want to “Set North Now?”. Press the **STARBOARD** button.

Manually steer the boat so that it is pointing to Magnetic North. Hold it on that heading and push the **Fn** button. The autopilot will store the current heading and reference it as 000° Magnetic, and then automatically return to the Compass Configuration menu.

- 5) Highlight “Exit” and then press the **Fn** button to return to the Dockside Setup menu.
- 6) Exit the Dockside Setup menu. After a brief pause the autopilot will restart and automatically go into **STANDBY** mode.

Compass Setup – Final Steps

At this point, the entire Compass Setup procedure is complete.

All the compass settings & compensation/calibration values will be retained when the autopilot is turned off.

You should record all compass selections & settings, in the **Settings** chapter at the back of this manual.

It should not be necessary to re-compensate or re-calibrate any of your compasses again, unless the electrical/magnetic environment on your boat changes substantially. Examples of when that might be so are if you add some new piece of electronic equipment, or add new machinery, and so on. You should also re-do compass setup if you take your boat a long way away from where you did the setup just now – say, more than 10° of Latitude – or to an area where the local Magnetic Deviation is known to be different (say, where there are a lot of submerged wrecks).

And it is also a good idea to check all the compasses on your boat, for accuracy in all directions, on a regular basis – say perhaps once or twice a year – and before setting off on a long voyage.

A good way to do a quick check is with any of the traditional “box the compass” methods which even a novice boater learns almost right away:

- Find some convenient ranges which have good cuts between them, and steer back & forth along them.
- Steer various straight Tracks, in as many directions as possible, between pairs of charted objects.
- Determine the CMG between various plotted positions (with GPS, or with two or three-bearing LOP fixes with a good Pelorus or hand-bearing compass, etc.) on your paper charts.

You might even want to do a box-the-compass check right now, simply as a final “sanity” check of the compass setup you just did!

Sea Trials

Sea Trials allow you to test out the basic functions of the autopilot under way, and to fine-tune the steering parameters for best performance. The goal is to achieve accurate Course-keeping, and smooth, rapid changes of Heading – without excessive movements of the boat's rudder.

Note: *before you begin Sea Trials, it is a good idea to review how you steer a boat by hand ... and how that compares to what the Commander P2 does when steering the boat. Please re-read the **How Autopilots Work** chapter, page 18.*

During Sea Trials, you will test the default Steering Parameters of the P2, on **your** boat, and if necessary, make adjustments.

When the Steering Parameters are properly adjusted & fine-tuned for your boat, the autopilot will do the same as you would ... let the boat “work with the seas”, yet still maintain as straight a Track as possible in the current sea conditions, on the desired Heading or Course.

Sea Trial Procedure

The initial Sea Trials should be done in relatively calm conditions.

Note: *to do Sea Trials, you must be familiar with operation of the autopilot in **AUTO** mode (see page 123), and with the Auto menu.*

Sea Trials on a P2, or a P2VS with an RFU fitted, are slightly different than on a P2VS without an RFU; the places where this is so are indicated below.

Adjust Rudder Gain & Counter Rudder for Hi Speed

- 1) Bring the boat up to a speed where the boat's rudder (or steerable-thrust system, such as an outboard or I/O leg), provides sufficient steerageway that it has accurate, firm control of the boat's direction of travel.

Typically, this will be less than your normal “cruising speed”, perhaps by quite a lot. For many boats, this will be around 7 Knots.
- 2) Bring up the Auto menu, highlight “Parameter Set” and select “Hi”.
- 3) If ALC is set to “On”, highlight it and set it to “Off”.
- 4) Start with “Rudder Gain” & “Counter Rudder” set to the factory defaults (for Hi): 5 & 3.
 - On a P2VS without an RFU, start with Counter Rudder set to 0.
- 5) Highlight “Seastate” and set it to 1.
- 6) Highlight “Turn Rate”. Select a setting that is approximately $\frac{3}{4}$ of your boat's comfortable turning rate²⁷ at normal cruising speed.
- 7) Exit the Auto menu.
- 8) Switch to **AUTO** mode. The autopilot will automatically take the current boat Heading and use that as the Course to Steer.
 - On a P2VS without an RFU, you should always manually steer a steady, straight Heading (in **STANDBY** mode) for at least 10 seconds – or longer, until you don't have to continue to move the wheel/tiller to maintain a straight Track – before switching into **POWER STEER, AUTO** or **NAV** modes. The rudder *must* be at the dead-ahead position when you switch modes.
- 9) Run for about 5 minutes. If the boat “esses” back and forth more than about 3 degrees, bring up the Auto menu and reduce the Rudder Gain setting by 1 step, and test again.

²⁷ If you need to measure it: time a complete circle while the vessel is turning at a rate that seems ‘comfortable’, at the normal cruising speed. ‘Comfortable turning rate’ is 360° divided by the number of seconds it took to complete the circle.

- 10) On a P2, or P2VS with an RFU, make a medium Heading change, say 15° – 20° , with the **COURSE CHANGE** knob.

Observe how the boat responds, as it turns & settles onto the new Heading:

- If the boat stops turning before the new Heading is reached and then approaches it slowly, either increase Rudder Gain by 1, or decrease Counter Rudder by 1.
- If the boat overshoots the new Heading, and then makes several turns back & forth across the new Heading before settling down (known as “essing”, or “overshooting”), either decrease Rudder Gain by 1, or increase Counter Rudder by 1.
- If the boat approaches the new Heading, shies away, then approaches & shies away again, decrease Counter Rudder by 1.
- Continue making those medium Heading changes, adjusting Rudder Gain and Counter Rudder as needed, until the boat settles smoothly onto the new Heading without excessive overshoot.

Go to step 12).

- 11) On a P2VS without an RFU, it is necessary to start by testing how well the boat does small turns, before testing how well it settles onto a new Heading. Also, the optimum Rudder Gain setting must be found first, before adjusting the Counter Rudder setting.

Make a small Heading change ($\sim 5^{\circ}$), and observe the turn:

- If it makes an abrupt turn, reduce the Rudder Gain one step.
- If it takes too long to turn, increase the Gain by one step.
- Repeat the small change of Heading in the same direction, observe the response, and adjust the Gain as needed, until the turn is at a safe, comfortable rate.
- Repeat the sequence in the other direction. Then repeat in both directions a couple of times, until you are satisfied.

Now make a bigger Heading change ($\sim 10^{\circ}$). Observe how the boat settles on each new Heading:

- If the approaches the new Heading too slowly, increase the Rudder Gain.
- If it keeps “essing” back & forth across the new Heading, reduce the Gain.
- Keep doing turns, and adjusting the Rudder Gain as needed, until the boat settles on the new Heading with no more than two overshoots.

Now make some 30° Heading changes, in both directions.

- Adjust the Rudder Gain up or down a bit as needed, until the boat settles on the new Heading with no more than two “esses”.

Now increase Counter Rudder by 1, and make some 10° Heading changes.

- Repeat this until the boat settles on the new Heading with little or no “essing”.

- 12) Repeat step 10) (step 11) for a P2VS without an RFU), using gradually larger Course changes, up to 40° – 50° .
- 13) Repeat the above adjustments on several different Headings until you get consistently satisfactory results.
- 14) Reduce the Rudder Gain by 1, then increase speed to your normal cruising speed, and repeat steps 10) to 13). If the rudder is moving by large amounts – more than about 5° side to side – during any of the steps, you should reduce the Rudder Gain even more. You should also do so if the boat steps up onto the plane when you increase speed, because the rudder’s steering effect is typically much stronger once a boat is planing.
- You can leave the higher speed tests for later, if it is not safe to run at that speed where you are doing the Sea Trials.

Adjust Turn Rate for Hi Speed

- 1) Adjust the Turn Rate setting to the full comfortable rate (per step 6), above).
- 2) In **AUTO** mode, make a few course changes of 20° or more, to ensure that the rate of turn is indeed comfortable at normal cruising speed; if it is not, reduce the Turn Rate setting until it is.

Adjust Seastate for Hi Speed

To set Seastate, switch to **AUTO** mode, and then watch the Port & Starboard rudder movement arrows at the ends of the screen's RAI bar.

In normal conditions, there should be rudder movement about 15% to 20% of the time.

If the autopilot is over-active, increase Seastate until the arrows blink less often. If the autopilot is under-active, decrease Seastate.

Adjust Rudder Gain, Counter Rudder, Turn Rate and Seastate for Lo Speed

- 1) Adjust boat speed to what will be your lowest normal "low speed" – that is, the lowest speed at which you will ever want to use the autopilot. For most boats, a good speed to do the "low speed" adjustments is at or below the maximum speed in a Speed Control Zone or "no wash" area – usually 5 Knots.
- 2) Bring up the Auto menu, highlight "Parameter Set" and select "Lo".
- 3) Repeat steps 3) through 13) in the Hi speed Rudder Gain & Counter Rudder adjustment process above (the starting value to use for Lo speed Rudder Gain is the factory-default of 8).
- 4) Adjust the Lo speed Turn Rate setting to suit. Make a few Course changes of 40° or more to ensure that the rate of turn is comfortable.
- 5) Adjust the Lo speed Seastate setting to suit.

Adjust Speed Trip Point

- 1) Bring up the Auto menu, and set the Trip Point speed to something mid-way between the speeds used for setting the Hi & Lo speed parameters in the steps above. This should be a speed you will never travel at for any length of time – for example, in a planing-hull boat, it would be a speed just a little bit less than where the hull starts to get up on the step.
- 2) Bring up the Auto menu, highlight "Parameter Set" and select "Auto".
- 3) In **AUTO** mode, change the boat speed back & forth between the Lo & Hi speeds you will normally use. The boat should continue to maintain a straight Track along the Heading you are on, and you should see that the display's Parameter Set indicator (see page Figure 82 on page 126) changes back & forth between "L Auto" & "H Auto" as you change speeds.

Adjusting for Rougher Sea Conditions

The primary desire of any autopilot user is that it steer the boat well, across all sea conditions.

Adjusting the steering parameters in calm conditions – as you did during the initial part of the Sea Trials, above – gives a base reference for all other conditions. After doing those adjustments, you can then venture into rougher sea conditions.

Take all the time necessary to ensure that you are getting the best performance from your autopilot!

Some suggestions and points to keep in mind:

- Typically, you will find that you will only need to make small changes to the “calm conditions” steering parameters to handle a wide variety of sea conditions.
- Observe the wake of the boat while maintaining a straight Course in **AUTO** mode. This is one of the best indications of how well the autopilot is steering.
- The boat should come on to each new Course Heading smoothly. Any undershoot or overshoot can usually be observed in the wake. Adjustments to Rudder Gain & Counter Rudder, as in the tests above, are how you achieve “smoothly”.
- Generally speaking, the Rudder Gain & Counter Rudder settings for Hi speed will be less than those for Lo speed.
- As the seas get rougher, you will probably need to increase the Rudder Gain one or two steps.
- In very rough conditions, you may want to reduce the Counter Rudder setting, as well as increasing the Rudder Gain.
- In quartering seas, you may wish to increase Rudder Gain and the Seastate settings. This will allow the boat to yaw a bit more as it comes off of the waves, but typically the boat will come back onto course with minimal rudder movement.
- In the tests above, you will have determined the Turn Rate value which corresponds to the full “comfortable turn rate” of your boat.

But you do not have to leave Turn Rate always set to that value. You can, and should, change Turn Rate as required, to have safe, comfortable turning rates for the current sea conditions; you may also want to lower the Turn Rate for other reasons.

Once the autopilot system is steering satisfactorily, make a note of all your steering parameter settings, and record them in the **Settings** chapter, at the back of this book.

Basic Operations

Basic Operations

This chapter describes the basic modes of operation & features of a P Series system, and shows you how to use them.

The Control Head's LCD Screen & Buttons

All of your interaction with your autopilot system will be done using the Control Head:

- selecting an operating mode
- setting up the parameters you wish to use in each mode
- monitoring your boat's Heading
- setting a desired Heading to be followed
- ... etcetera ...

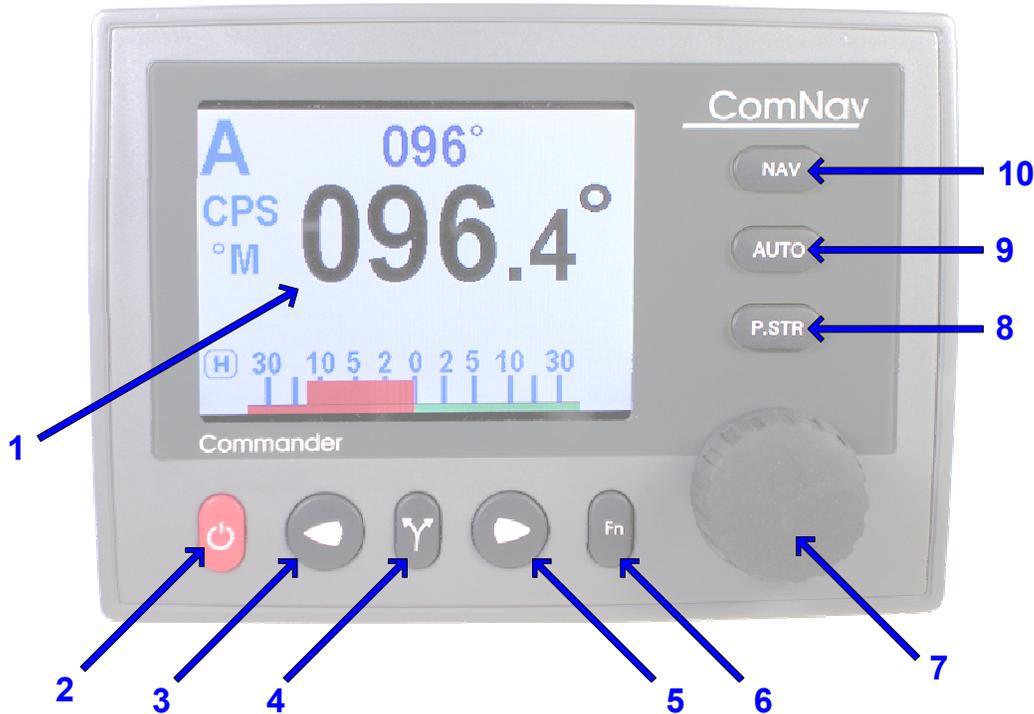


Figure 68 – Using the Control Head

The elements of the Control Head (with reference to the identifiers above) are:

1) LCD Screen.

While the system is powered, the LCD screen is normally displaying the compass Heading, rudder angle, and mode of operation; it can also be displaying desired Heading, system status, other information, or various menus.

2) **STANDBY** (and On/Off) button.

To power on the system, press and hold this button until the LCD screen lights up, and then release it.

To power off, press & hold this button approximately 3 seconds.

The autopilot always powers up in **STANDBY** mode, and it can always be put into **STANDBY** mode, by pressing and holding this button for approximately 1 second.

Double-pressing this button brings up (or exits) the Standby menu.

3) **PORT** button.

Pressing and holding this button while in **POWER STEER** mode moves the rudder to Port – and it keeps moving for as long as the button is held.

Pressing and holding this button while in **AUTO, NAV, WORK** or **WIND** modes allows you to avoid obstacles in the boat's path, by turning to Port.

This button is also used in menu operations – to move the highlight to the previous line.

4) **TURN** button.

Pressing this button once while in **AUTO** or **WORK** modes queues the default pre-programmed turn; in **WIND** mode, it queues a Tack or Gybe turn. Subsequent presses of the **TURN** button scroll through all of the available turn-types.

The pre-programmed turn sequence is then initiated by pressing either the **PORT** or **STARBOARD** button to indicate the direction of the turn.

See **Default Turn** on page 117 for more details on setting the default turn from the Special Turns available.

5) **STARBOARD** button.

Pressing and holding this button while in **POWER STEER** mode moves the rudder to Starboard – and it keeps moving for as long as the button is held.

Pressing and holding this button while in **AUTO, NAV, WORK** or **WIND** modes allows you to avoid obstacles in the boat's path, by turning to Starboard.

This button is also used in menu operations – to move the highlight to the next line.

6) **Fn** button. This is a multi-function button:

- On all boats except sailboats, this button invokes **WORK** mode while in **AUTO** or **NAV** modes; double-pressing the button will bring up (or exit) the Work mode menu.
- On a sailboat, this button invokes **WIND** mode while in **AUTO** mode; double-pressing the button will bring up (or exit) the Wind mode menu.
- Pressing this button when an alarm occurs will cancel the alarm.
- This button is also used during Dockside Setup, and in operating modes & menus.

7) **COURSE CHANGE** knob. This is used in several ways:

- In **POWER STEER** mode, it changes the rudder angle in the same direction as the knob is turned.
- In **AUTO** mode, it changes the Commanded Heading in the same direction as the knob is turned.

***Note:** Heading can not be changed during any **HEADING Alarm**.*

- The knob is also used to change parameters in the various menus.

8) **POWER STEER (P.STR)** button.

Pressing & holding this button places the autopilot into **POWER STEER** mode.

A double-press of this button brings up (or exits) the Power Steer mode menu.

9) **AUTO** button.

Pressing & holding this button places the autopilot into **AUTO** mode.

A double-press of this button brings up (or exits) the Auto mode menu.

10) **NAV** button.

Pressing & holding this button places the autopilot into **NAV** mode.

A double-press of this button brings up (or exits) the Nav mode menu.

Operating the System

Operating Modes – Overview

Your P Series autopilot system has four basic operating modes, known as **STANDBY**, **POWER STEER**, **AUTO**, and **NAV** mode.

- A fifth operating mode, known as **WORK**, is a sub-mode of **AUTO** & **NAV** modes; this mode is not available when Vessel Type is set to Sail.
- An alternative fifth mode, known as **WIND**, and a variation known as **WIND-Points**, are sub-modes of **AUTO** mode; they are available only on when Vessel Type is Sail.

Note: P2VS systems only support **WORK** mode, and only when an RFU is fitted.

Changing modes is done by pressing & holding the button on the Control Head which is associated with the mode you want to enter:

- for **STANDBY** mode  the **STANDBY** button
- for **POWER STEER** mode  the **POWER STEER** button
- for **AUTO** mode  the **AUTO** button
- for **NAV** mode  the **NAV** button
- for **WORK** or **WIND** & **WIND-Points** sub-modes  the **Fn** button

 *You must press & hold the new mode's button down for ~1 second. While you're holding it down, the current mode's indicator letter (in the upper-left corner of the screen) will flash.*

After the time delay, the mode change occurs, and the previous mode's letter is replaced by the new mode's letter (not flashing).

This time delay is deliberately designed, as a safety feature, into the system's response to the mode-change (& some other buttons), to prevent accidental activation of those buttons' functions.

Descriptions of the operating modes (& associated menus) can be found as follows:

- **STANDBY**, **POWER STEER**, **AUTO**, and **NAV** modes are in this chapter.
- **WORK**, **WIND** & **WIND-Points** modes are in the **Advanced Operations** chapter.

Mode Menus

Each of the operating modes has its own set of parameters that you can adjust, to configure and fine-tune how your autopilot system behaves in the respective mode. These parameters are stored in the system's non-volatile memory; you can view & change them with the Control Head, via sets of menus that appear on the LCD screen.

Note: *there is an additional menu – Dockside Setup – for parameters unique to the boat (e.g., compass type). It is described in the **Setting Up** chapter.*

The menus of the four main operating modes (**STANDBY**, **POWER STEER**, **AUTO**, and **NAV**) are accessed by using the respective mode buttons: the **STANDBY** button, the **POWER STEER** button, the **AUTO** button, and the **NAV** button. The **Fn** button is used to access the **WORK** or **WIND** & **WIND-Points** modes' menus.

- To access a particular operating mode menu, double-press the button associated with that mode (e.g., the **NAV** button for the **NAV** mode's menu).
- To exit a particular operating mode menu, double-press the associated button again, or wait about 10 seconds. The display will then revert to the active display of whatever mode the autopilot is operating in.
- You can access any mode's menu whether or not the autopilot is currently operating in that mode.

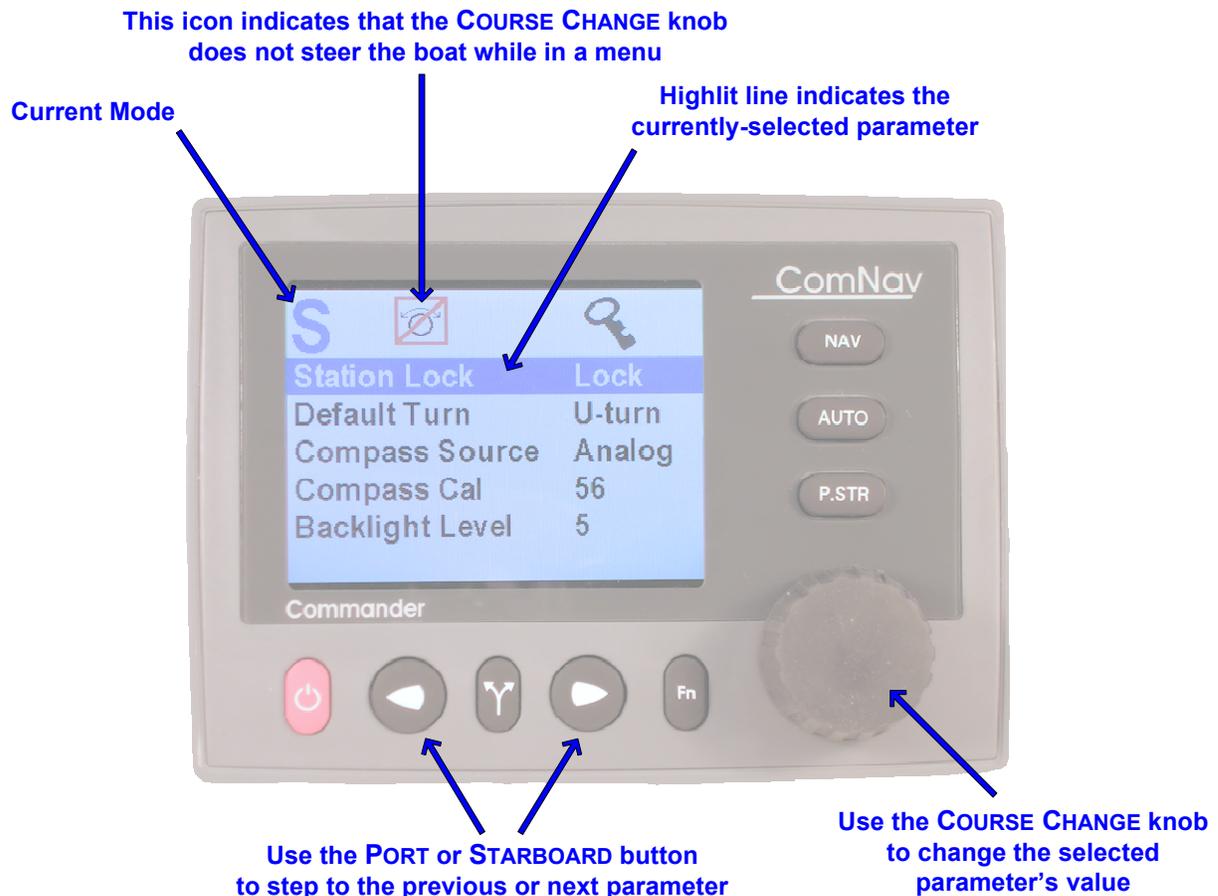


Figure 69 – A Typical Menu

All menus are arranged with parameter names on the left side of the screen, and the current value for each parameter on the right side.

In each menu, one line is always high-lit in a contrasting colour – it indicates which parameter is currently selected (for example, see the “Station Lock ... Lock” line in the figure above).

You can move the highlight to other lines on the menu by pressing the **PORT** button (moves the highlight up) or **STARBOARD** button (moves it down).

Some menus have more lines than can be shown on a single screen. In this case, when the highlight has been moved to the last line on a screen, each subsequent press of the **STARBOARD** button will cause the menu to scroll up by one line, revealing a new high-lit line.

Similarly, when the highlight has been moved to the first line on a screen, each subsequent press of the **PORT** button will scroll the menu down one line. These long menus are arranged in a circular fashion, so that the scrolling action can be carried on indefinitely.

Use the **COURSE CHANGE** knob to change the value of the currently high-lit parameter. For parameters with numbered values, a clockwise turn of the knob will increase the value; counter-clockwise movements will decrease the value. Non-numerical values are generally arranged in a circular list for ease of use.

- In general, changes made with the knob are effective immediately.
- ⓘ *For safety reasons, a few items do not take effect until the highlight is moved to the next or previous line, or the menu is exited.*

When a menu is being displayed, there is an icon at the top of the screen which looks like the **COURSE CHANGE** knob, but with a line drawn through it. This is a reminder that the knob is not available for its normal function of changing the boat's course – because the knob is now being used to change parameter values.

The autopilot's mode indicator letter continues to be displayed in menus. The current mode may not be the same as the menu (since all menus can be accessed in any mode). For example, in the figure above both the mode (`S`) & the menu are **STANDBY** – but the mode could be any of the others: `P` (**POWER STEER**), `A` (**AUTO**), etc.

All menus – except Dockside Setup – have a time-out feature that triggers after about 10 seconds, if no button presses, or movements of the **COURSE CHANGE** knob, are detected during that time-out interval.

When a menu times out, the display reverts to the previously active display, just as though you had double-pressed the mode button again.

Rudder Angle Indicator (RAI)

At the bottom of the screen in all operating modes is the Rudder Angle Indicator (an example can be seen in Figure 72 on page 116).

- On a P2 system, or a P2VS with an RFU fitted, the RAI shows the current position of the boat's rudder, as measured by the RFU (see pages 54 & 70).
- On a P2VS without an RFU, the RAI shows the estimated position of the rudder.

A "V" in a small box is shown at the right end of the RAI, to indicate that the autopilot is using the *Virtual Rudder Feedback* feature.

- ⓘ *The estimated rudder position on a P2VS may not always be accurate!*

*Please refer to the **Cautions** on page 143 for more information.*

The current or estimated rudder position is shown by a solid bar extending from the centre (rudder Dead Ahead, i.e., at 0°) to the right for Starboard rudder, or to the left for Port. The numerical scale above the bar (in degrees) is expanded around the centre, and compressed at the ends. On colour Control Heads, Starboard is shown in a green bar, and Port in red; on monochrome, the bar is always black. In the figure on page 116, the rudder is about 4.5° to Port.

The maximum length of the rudder position bar is defined by the rudder travel limit values detected or entered during setup.

The thin solid bar below the rudder position bar shows the rudder travel limits (see page 122 for details of the limits); in Figure 72, all the limits are 40°.

- ⓘ *On a P2VS without an RFU, the position bar does not appear in **STANDBY** mode. The rudder travel limits bar is shown, but is always the default full length (40° to either side), no matter the limits entered during setup.*

Whenever the autopilot is moving the boat's rudder, to Port or Starboard, a small "rudder movement" arrow symbol will be shown at the corresponding end of the RAI.

Alarm Clear

Whenever an alarm or error message occurs on the Commander P2, an audible alarm will sound, both at the SPU & at the Control Head, and a message will be displayed on the LCD.

The alarm will remain activated until the condition that caused it is remedied, or the alarm is cleared manually by you.

- To clear the alarm manually, press the **Fn** button once.

If the condition that caused the alarm remains, the alarm will reappear after approximately 20 seconds.

Power On

The first step in using your P2 system is to **turn it on** ...

- Press the Control Head's **RED** button (referred to as the **STANDBY** button).
 - ⇒ Press & hold until the introductory display (see below) appears on the LCD screen, then release the button.
- On the SPU, the BATT PWR, DRV PWR & VCC diagnostic LEDS should all light up.



After a few seconds, the firmware versions of both the Control Head and the SPU are listed on the display. You should record those version numbers in the **Notes** section at the back of the manual, to refer to should your autopilot ever require servicing.

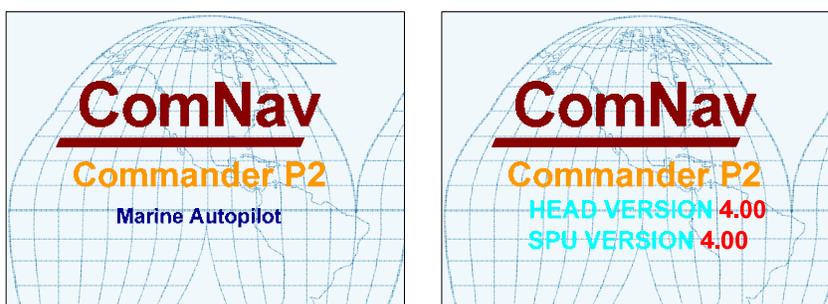


Figure 70 – Power On Sequence

The autopilot then goes into **STANDBY** mode.

Power Off

You can turn off the autopilot, at any time:

- Press and hold the **STANDBY** button.
 - The autopilot will switch first to **STANDBY** mode, if it was not already there.
 - Then, if you keep pressing the button, the autopilot will start a 3 second power-down sequence.
 - Once the countdown has expired, the display will prompt you to release the **STANDBY** button ... and once you do, the whole autopilot system will immediately shut off.

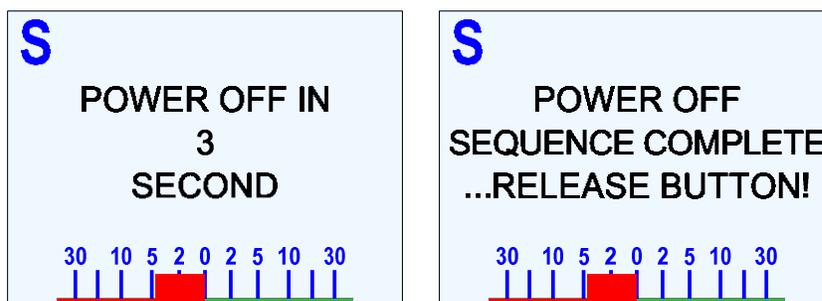


Figure 71 – Power Off Sequence

- If you release the **STANDBY** button before the 3-second countdown has completed, the autopilot will abort the countdown, and remain in **STANDBY** mode.

STANDBY Mode

The autopilot always turns on in **STANDBY** mode.

To switch to **STANDBY** mode from any other mode, press the **STANDBY** button for approximately 1 second, until the large letter 'S' appears in the upper left corner of the screen.

The 'S' indicates that the system is now in **STANDBY** mode.

In this mode, the autopilot displays the boat's current Heading and the rudder's angle, but has no control over the steering of the boat.

i To steer in **STANDBY** mode, you must use the boat's manual steering system: wheel, tiller, etc.

To the left of the Heading value is shown its source (e.g., Compass, one of the SPU's Navigation data inputs, etc.), and whether it is in Degrees Magnetic or Degrees True.

The latter is determined automatically by the autopilot, based on the type of the Heading source:

- All analog compasses are in Magnetic.
- NMEA sources may be in Magnetic or True, depending on which NMEA data sentences they are configured to transmit, and on the NMEA Heading Type parameter in the Standby Menu (see page 118 for more details).

The Heading source & type indicators appear in all operating modes, whenever the boat's current Heading is being displayed.

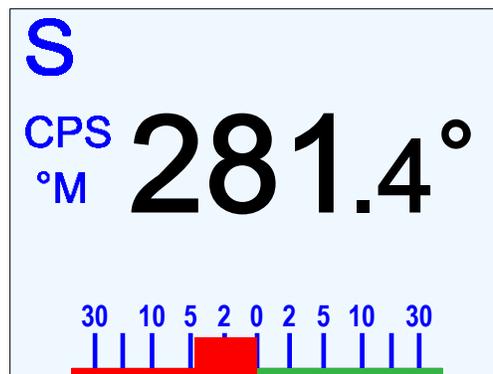


Figure 72 – Typical STANDBY Mode Screen

i On a P2VS without an RFU, the rudder position bar on the RAI does not appear in **STANDBY** mode (it does appear in all other modes)

Also, when switching to any other mode from **STANDBY**, the position bar is always set at Dead Centre – 0° – when the new mode begins.

Standby Menu

The Standby menu consists of a number of items that have a general bearing on how the autopilot operates. To access the Standby menu, double-press the **STANDBY** button.

S 		S 	
Station Lock	Unlock	Backlight Level	5
Default Turn	U-turn	Display	A
Compass Source	NAV1	Watch Alarm	Off
Compass Cal	360	Fishzag Time	60
NMEA Hdg Type	Auto	Battery	13.0

Figure 73 – Standby Menu

Station Lock

The Commander P2 system can accommodate up to three Control Stations – one main Control Head, and any combination of Control Heads & Remotes on the two AUX ports.

One of these Control Stations is always in control, and the others are simply repeater stations. You can take command with any of the repeater stations by simultaneously pressing the **PORT** and **STARBOARD** buttons on the repeater.

However, to prevent unauthorized personnel from doing this, the main Control Head can lock out all of the others. Station Lock must be changed to Unlock before the repeater stations can take command. For more details, refer to **Station Lock/Unlock** in the **Advanced Operations** chapter of this manual.

Default Turn

The autopilot system has a number of Special Turns pre-programmed into it. The variety of turns available depends on the system configuration, and what mode you are operating in.

Set the Default Turn parameter to the type that you are likely to use most often. Then, when you press the **TURN** button to initiate a Special Turn, the default turn will be the first one offered. See **Special Turns** in the **Advanced Operations** chapter for more details.

Compass Source

It is possible to have more than one type of compass connected at the same time, since there are a number of inputs for the different compass types which the autopilot can use. The boat's current "compass" can also be Heading data supplied by an NMEA device.

This menu line allows you to switch from one Heading source to another, whenever you want to.

- The available types always include NAV1 & NAV2; others depend on what types are detected during Dockside Setup. The default is NAV1; if an Analog compass type is detected during Dockside Setup, the default changes to Analog.
- If the selected source is one of the NAV inputs, it can be the same one used for the Navigation source²⁸ (page 138), and/or the Speed source (page 127).

²⁸ ... assuming the data source provides not only Navigation (&/or Speed) data, but also valid NMEA Heading data.

Compass Cal (*Compass Calibration*)

This line allows you to synchronize the Heading source the autopilot is currently using with an external reference – for example, some type of high-accuracy compass, or a navigation range which the boat is currently on, etc.

Simply turn the **COURSE CHANGE** knob until the Compass Cal value reads the same as your reference.

Note: *for safety reasons, the Compass Source & the Compass Cal values may not be adjusted in **AUTO** or **NAV** modes, so neither menu line appears if the Standby menu is entered when operating in one of those modes.*

NMEA Hdg Type (*NMEA Heading Type*)

Note: *this menu line only appears if the Compass Source parameter is set to NAV1 or NAV2.*

This line allows you to choose which type of value – Degrees Magnetic or True – from an NMEA source will be used by the autopilot for its Heading:

- “Auto”: the autopilot will automatically select whether to use Magnetic or True, depending on which NMEA sentences are received (assuming all sentences have valid data):
 - If the HDG sentence is being received (no matter whether HDM &/or HDT are also being received), then the autopilot will use Magnetic Heading (indicated on the display by an ‘M’ beside the boat’s actual Heading value on the screen), and it will be the value in the HDG sentence.
 - If only HDM & HDT are being received, or just HDT, then the autopilot will use True Heading (indicated by a ‘T’), from the HDT sentence.
 - If only HDM is being received, then the autopilot will use Magnetic Heading (indicated by an ‘M’), from that sentence.
- “True”: the autopilot will use True Heading from the HDT sentence. If HDT is not being received, a Heading Error alarm will occur.
- “Mag”: the autopilot will use Magnetic Heading from the HDG sentence, if that is being received, or from HDM if only that is being received. If neither HDG nor HDM are being received, a Heading Error alarm will occur.

Backlight Level

There are 9 levels of backlighting available, numbered 0 through 8.

Level 8 offers the brightest possible backlight. Each level below 8 offers a correspondingly lower level of backlight.

Level 0 is completely off (no backlighting). To change from Level 0 to any other level, double-press the **STANDBY** button to bring up the Standby menu. The screen will temporarily light up with level “3” brightness, so that you can see the menu.

For colour Control Heads, the screen automatically changes to a “night” colour scheme (see scheme “C” below), whenever the backlight level is set to “1”, “2”, or “3”.

Contrast (*monochrome Head only*)

There are 8 levels of contrast available. Level 5 is usually the optimum value.

Contrast of the LCD is affected primarily by temperature. The Control Head is internally compensated for fluctuations over a wide temperature range – but manual adjustments can be made to the contrast by changing this parameter, if necessary.

Graphics (monochrome Head) or **Display** (colour Head)

For monochrome Control Heads, the options are “Norm” (normal) and “Rev” (reversed), which refers to the manner in which characters and icons are shown on the display.

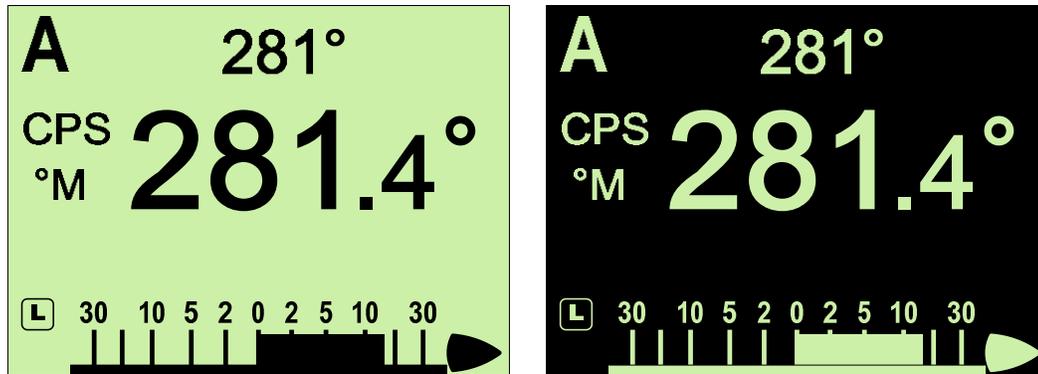


Figure 74 – Monochrome LCD: Normal & Reversed Display

For colour Heads, there are three built-in colour schemes:

- The standard is scheme is “A” – a white background with most text in black, and various red, green & blue colours to emphasize important elements of the various displays.
- Colour scheme “B” is an alternate that you may prefer – a light blue (cyan) background, with suitably-contrasting colours for text & the various display elements & information.
- Colour scheme “C” utilizes red colours on a black background, and was developed for use at night, to avoid impairing the boat operator’s night vision.

Note: schemes “B” & “C” are shown below; “A” is used for all other figures & pictures of the Colour Head in this manual.

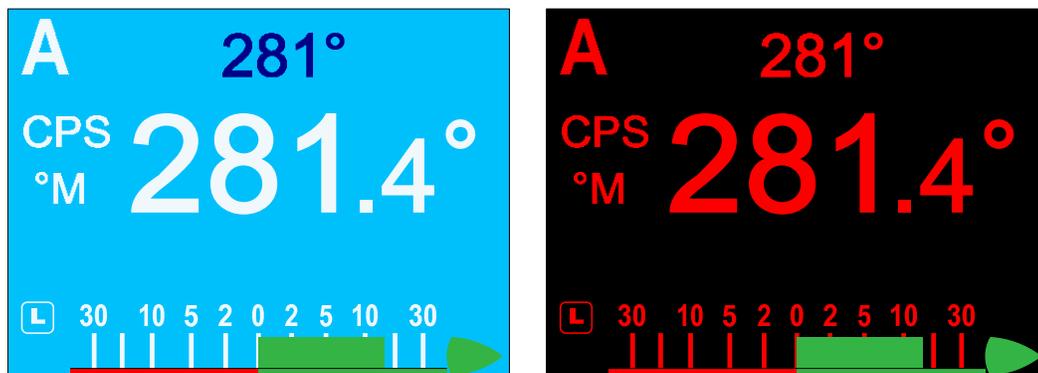


Figure 75 – Colour LCD: B & C Colour Schemes

Watch Alarm

The P Series autopilot has a built-in Watch Alarm. This menu line allows you to turn on the Watch Alarm, and set how much time is allowed to elapse before the alarm goes off. This menu line is “password protected” to prevent unauthorized personnel from changing the settings of this alarm. See the **Advanced Operations** chapter of this manual for complete details on the Watch Alarm & password.

Fishzag Time

This sets the time interval between course changes while executing the special Fishzag turn. The units are seconds, and each click of the **COURSE CHANGE** knob will change the interval by thirty seconds. See **Fishzag** in the **Advanced Operations** chapter.

Battery

This is a read-only display; it can not be changed.

The number shown is the battery voltage as measured at the Signal Processor Unit, after the logic fuse F1 – so it will be a little less than the voltage at the SPU’s **J1 – BATTERY INPUT** connector, and (depending on how you have wired the SPU) somewhat less than the voltage at your boat’s battery terminals.

- If the measured voltage is 10 Volts or less, a BATTERY LOW alarm will occur (see page 195).

POWER STEER Mode

In this mode, you can directly control the rudder. In effect, the autopilot is acting as an “electronic steering wheel”, allowing you to steer the boat manually – on any Heading you want, or into a turn.

To enter **POWER STEER** mode, press and hold the **POWER STEER** button for about 1 second, until the large letter ‘P’ appears in the upper left portion of the display.

The Control Head displays the boat’s current Heading, source & type, and the rudder’s angle, but only so you know what they are.

The **PORT** and **STARBOARD** buttons are used to control the rudder. Press one or the other to move the rudder in that direction. The rudder will keep moving for as long as the button is pressed, until it gets to the physical rudder limits (or the limits you set in the Power Steer menu – see next page).

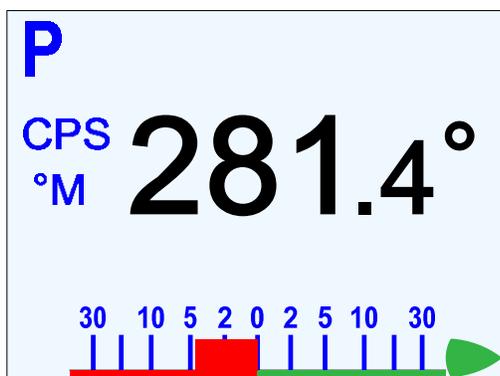


Figure 76 – Typical POWER STEER Mode Screen

The **COURSE CHANGE** knob can also be used to move the rudder in **POWER STEER** mode:

- One ‘click’ changes the rudder angle by approximately 1 degree.
- A quick spin moves the rudder approximately 10 degrees.

You can limit the maximum amount of rudder travel in **POWER STEER** mode, with the Power Steer limits. Turning on these limits, and adjusting them to suit, is done in the Power Steer menu (see next page).

i *On a P2VS without an RFU, you should always manually steer a steady, straight Heading, in **STANDBY** mode, for at least 10 seconds – or longer, if necessary, until you don’t have to continue to move the wheel/tiller to maintain a straight Track – before switching into **POWER STEER**, **AUTO** or **NAV** modes. The rudder must be at the dead-ahead position when you switch modes.*

*If the estimated rudder position (as shown on the RAI) reaches Dead Centre while you are pressing the **PORT** or **STARBOARD** button to move the rudder, the rudder will stop moving. This is to allow you to check that the actual & estimated rudder positions are the same (see page 143 for more information on the topic of actual versus estimated rudder position).*

If they are the same (or at least close), you can then continue to move the rudder by pressing the same button again.

*If they are not, you should go to **STANDBY** mode, manually steer a straight Heading, etc. (as above), before re-entering **POWER STEER** mode.*

Power Steer Menu

The Power Steer menu contains the “mechanical” steering parameters (which are common to all modes). To access the Power Steer menu, double-press the **POWER STEER** button.

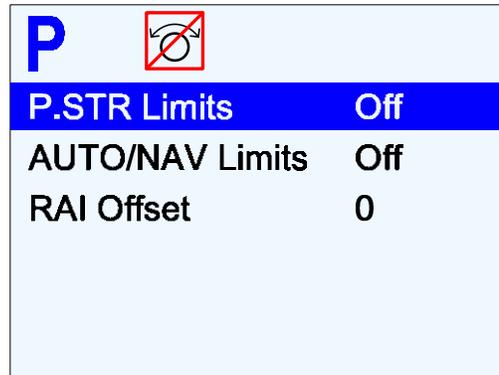


Figure 77 – Power Steer Menu

P.Str Limits (Power Steer Rudder Limits)

When you set up the autopilot system, you will move the rudder from hard-over Port to hard-over Starboard so that the autopilot can measure these positions²⁹. These hard-over positions are known as the “physical limits”, beyond which the rudder simply cannot be turned. However, you can also limit the amount of rudder travel which the autopilot will allow you to use in **POWER STEER** mode.

To do so, set the Power Steer³⁰ Limits to the number of degrees Port and Starboard that you would like to limit the rudder movement to. These rudder limits will be in effect whenever the autopilot is in **POWER STEER** mode, and during all Dodge and Jog Control turns.

The minimum setting is 5°; the maximum is the same as the physical limits measured in Dockside Setup. Setting the limits to “Off” means that the full range (up to the physical limits) will be allowed.

The physical range beyond the selected limits of the current mode³¹ will be shown on the thin bottom bar of the Rudder Angle Indicator display during normal operation – in a contrasting colour on a colour Control Head, and in a light grey on a monochrome Head.

Auto/Nav Limits

The Auto/Nav Limits are similar to the Power Steer Limits detailed above, but they are in effect only when the autopilot is in **AUTO** or **NAV** modes.

RAI Offset

The RAI (Rudder Angle Indicator) display at the bottom of the autopilot display may require a slight offset adjustment in order to read zero degrees when the boat is moving in a straight line. This is a fairly common scenario and may be due to boat loading or design, rudder design or function, or the installation of the Rudder Follower Unit.

For example, if the boat is traveling in a straight line, but the RAI reads 2° to Starboard, adjust the RAI Offset to Port so that the RAI display reads zero.

Note: *this menu line does not appear on a P2VS operating without an RFU.*

²⁹ On a P2VS, you enter those positions manually.

³⁰ P2 SPU firmware versions before 3.05 allowed the Rudder to be moved in Standby mode, with a Jog Lever, but this feature was disabled in that version & onwards, for safety reasons.

³¹ In **STANDBY** mode, the **POWER STEER** limits are shown.

AUTO Mode

In **AUTO** mode, the autopilot will steer the boat on your desired Heading.

To enter **AUTO** mode, press and hold the **AUTO** button for about 1 second, until the large letter 'A' appears in the upper left portion of the display.



Figure 78 – Typical AUTO Mode Screen

- The boat's current actual Heading is shown in large letters in the middle of the LCD screen, with the source & type.
- Your desired Heading – aka “Commanded Heading” – is shown in smaller digits at the top-centre of the screen.
- When you first enter **AUTO** mode, the autopilot will use the Heading that the boat was on at the moment the mode was entered as the initial Commanded Heading.

To change the Commanded Heading, use the **COURSE CHANGE** knob:

- A clockwise turn will result in an increase of the Heading.
- A counter-clockwise turn will decrease the Heading.
- One ‘click’ will change the Heading by 1 degree.
- A quick spin of the knob changes the Heading by 10 degrees.

The autopilot will then bring the boat around to the new Commanded Heading at no more than the rate of turn specified for Turn Rate in the Auto menu. The actual Heading shown in the display will gradually change to match the Commanded Heading.

Notes on AUTO Mode

- If you need to, you can quickly “dodge” around obstacles, and automatically return to your original Commanded Heading when the boat is clear of the obstacle, without having to turn the **COURSE CHANGE** knob – see **Dodge & Jog Steering Turns**, pages 140 & 142.
 - You can limit the maximum amount of rudder travel in **AUTO** mode by turning on the Auto/Nav rudder limits. Turning them on, and adjusting them to suit, is done in the Power Steer menu (see page 122).
 - The autopilot has an automatic Off-Course Alarm that will be activated should the boat fall off the Commanded Heading by more than 20°. There is a 32 second delay on this alarm.
- i** *On a P2VS without an RFU, you should always manually steer a steady, straight Heading, in **STANDBY** mode, for at least 10 seconds – or longer, if necessary, until you don't have to continue to move the wheel/tiller to maintain a straight Track – before switching into **POWER STEER, AUTO** or **NAV** modes. The rudder must be at the dead-ahead position when you switch modes.*

Auto Menu

The Auto menu contains all the autopilot's Steering Parameters.

To access the Auto menu, double-press the **AUTO** button.

A  321°		A  321°	
Rudder Gain	8, 5	Speed Trip Point	10
Counter Rudder	3, 3	Speed Source	NAV1
Seastate	A, A	ALC	Off
Turn Rate	8.0, 5.0	Thruster Assist	Off
Parameter Set	Lo	Thruster Gain	Low

Figure 79 – Auto Menu

Rudder Gain

Rudder Gain controls the amount of corrective Rudder movement applied, in proportion to an error in Heading³².

The parameter does not have any units.

P Series autopilots are able to accommodate a wide range of Rudder Gains, but restrict the user to a certain portion of this range, depending on the setting of the Vessel Type parameter (see page 87).

The effect of Rudder Gain on the amount of Rudder movement also depends on the type of boat.

Some examples:

- On a Stern Drive boat which is off-Heading by 5° to Port, with Rudder Gain set to 6, and Counter Rudder 0, the boat's rudder will be moved to 20° Starboard, and stay there for as long as the Heading error is 5°.
- On a Semi-Displacement boat under the same circumstances, the boat's rudder will be moved to 30° Starboard.

³² ... or amount to turn – when you change the Commanded Heading, the resulting “turn” is processed as if it is an “error”.

Hi & Lo Speed Rudder Gain

There are two numbers shown for Rudder Gain in the Auto menu. The number on the left is the value used when the autopilot is operating in Lo speed. The number to the right is the value used when the autopilot is operating in Hi speed.

Note: see the **Parameter Set** menu item for details on Hi & Lo speed selections.

If the autopilot is in Lo speed, only the Lo speed Rudder Gain will change when you rotate the **COURSE CHANGE** knob; the Hi speed Rudder Gain value will be shown in a greyed-out colour. Similarly, if the autopilot is operating in Hi speed, the **COURSE CHANGE** knob will only affect the Hi speed Rudder Gain value, and the Lo speed value will be greyed-out.

The following diagram provides general guidelines for setting Rudder Gain:

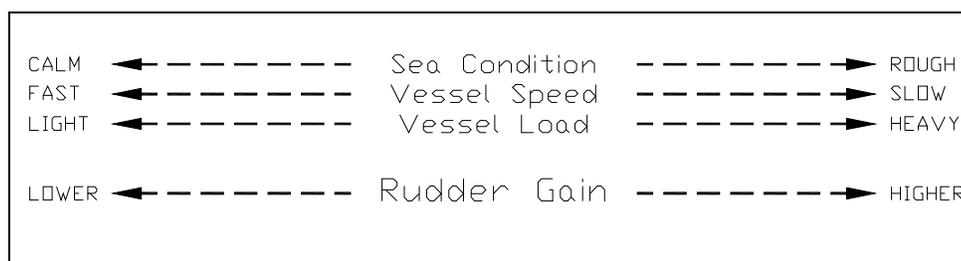


Figure 80 – Guidelines for setting Rudder Gain

Counter Rudder

Counter Rudder controls the amount of Rudder movement, in proportion to the rate of change in the amount of Heading error. The parameter does not have any units.

If the Heading error is increasing, the Counter Rudder movement adds to the Rudder Gain movement; if the error is decreasing, it is subtracted.

Similarly to Rudder Gain, the effect of Counter Rudder on the amount of Rudder movement depends on the type of boat.

An example:

- A Sailboat is off-Heading to Starboard by some amount, and the error is increasing by 2° per second: the amount the boat's rudder will be moved to Port – set by the Rudder Gain – will be increasing by 4° per second.

Hi & Lo Speed Counter Rudder

Like Rudder Gain, there are two numbers shown in the menu – one for Lo speed, and one for Hi speed. Only the Counter Rudder for the currently-active Speed setting will be changeable; the other will be greyed-out.

The following diagram provides general guidelines for setting Counter Rudder:

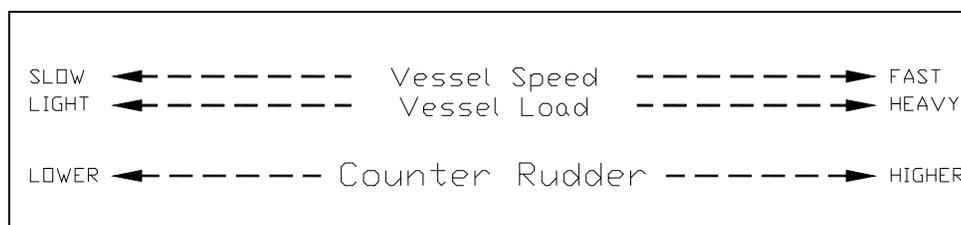


Figure 81 – Guidelines for setting Counter Rudder

Seastate

The Seastate parameter tells the autopilot how much deviation – also called Yaw – from the set Course to allow before taking corrective action.

Seastate should be set according to sea conditions. As conditions worsen, the Seastate setting can be increased. This may result in slightly worse steering performance, but will reduce the amount of rudder movement and strain on the steering system.

This parameter's units are degrees, and the value is the total across to either side of the set Course; that means that a value of 1 will allow the boat's Heading to yaw up to 0.5° on either side of the set Course before the autopilot brings it back on-course. The maximum value is 10°.

There is also an Automatic Seastate Control feature that will monitor and adjust the Seastate setting for you. To activate this, highlight "Seastate" in the menu and turn the **COURSE CHANGE** knob counter-clockwise until the value reads "A".

There are two Seastate settings; one is for Lo speed operations and one is for Hi speed operations. Only the Seastate for the currently-active Speed setting will be changeable; the other will be greyed out.

Turn Rate

Varying the Turn Rate parameter controls the maximum rate at which the boat may make a Heading change (in **AUTO** or **NAV** modes), return to its original heading after a dodge manoeuvre, or execute a Special Turn. Factors such as speed, load, hull characteristics and weather conditions may limit the maximum achievable Turn Rate.

This parameter's units are in degrees per second. Up to 1.5 %/sec, the value increments by 0.1° per click of the **COURSE CHANGE** knob; then it goes to 2.0 %/sec, and from there to the maximum of 10.0 %/sec (or 12.0 %/sec if the Vessel type is set to "Sail"), it changes by 1° per click.

There are two Turn Rate settings; one is for Lo speed operations and one is for Hi speed operations. Only the Turn Rate for the currently-active Speed setting will be changeable; the other will be greyed out.

Parameter Set

The P Series system gives you the ability to store two sets of steering parameters, "Lo" (low) and "Hi" (high). This allows for best performance under varying boat speeds and/or loading conditions.

The autopilot can be set manually to use either the Lo or the Hi settings. There is also a selection for "Auto". If "Auto" is chosen, the autopilot will automatically switch from Lo to Hi, or vice-versa, depending on the boat's speed. For "Auto" to work, the autopilot must be connected to an NMEA 0183 Navigation System that outputs speed information. The Speed Trip Point, described below, governs the point at which the switch is made.

When the autopilot is in **AUTO** or **NAV** mode, it always indicates which steering parameter set is in effect. This is shown just to the left of the Rudder Angle Indicator, and consists of a small box shape with either L for "Lo" or H for "Hi" in it. If the Parameter Set value is set to Auto, then the word "AUTO" also appears in the box.

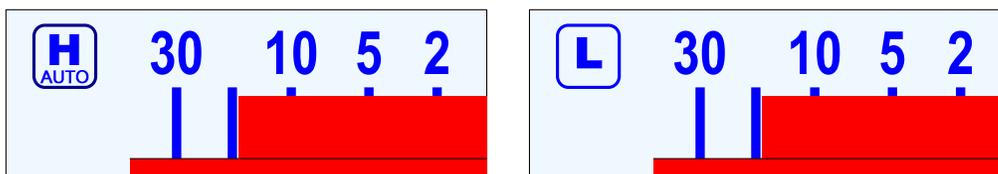


Figure 82 – Hi (AUTO) and Lo Speed Indicators (to left of the Rudder Angle Indicator)

Speed Trip Pt (Speed Trip Point)

The Speed Trip Point governs the point at which the autopilot automatically transitions from the Lo steering parameters to Hi. For automatic transition to take place, the Parameter Set must be set to “Auto”.

The value can be set from 2 to 20; the units (Knots, Km/h, etc.) are what the **Speed Source** is providing.

Note: *this parameter is also used to control the SPEED MODE status output (see **Speed Mode & Timing Outputs** on page 78).*

Speed Source

The Commander P2 can obtain information about the boat’s speed from a variety of sources which provide NMEA 0183 data, at either the **NAV1** or **NAV2** inputs on connector **J9**.

This menu line is used to select which of the two inputs the autopilot will use.

- The selected input can be the same one used for the Compass Source (see page 117), and/or the Navigation data source (see page 138).

i *A source of Speed data is strongly recommended on P2VS systems being used without an RFU, in order to give the Virtual Rudder Feedback algorithms a way to gauge the rudder’s effectiveness.*

If you do not have a Speed Source, then you should always set the Parameter Set to “Hi”.

ALC (Automatic Leeway Correction)

The autopilot’s ALC feature is turned on or off with this parameter. See the description on page 23 for details of what it does. It can be turned on only in **AUTO** mode.

When it is active, the letters “ALC” are shown, to the right of the ‘A’ mode indicator.



Figure 83 – Typical AUTO Mode Screen

**Thruster Assist
Thruster Gain**

These two parameters are only available when the Thrust Type parameter (see page 88) is not set to “None”. Complete instructions on how to configure the autopilot’s Thruster parameters, and on how to use it, are included with the CT7 Thruster Interface.

A “propeller” icon is shown to the left of the Commanded Heading when a thruster is present (see the figure above).

Helm Delay

This parameter is only available when the Vessel Type is set to “Large”.

When a Large vessel is slow on the Helm, this parameter can be used to “slow down” the autopilot’s IST steering processing responses to match. The range of values is 2 to 60.

The correct value of this parameter depends on the vessel’s Helm characteristics, and also on the type of Heading sensor in use, and must be determined by careful testing during Sea Trials.

For the standard ComNav magnetic compasses & sensors ([see pages 27 to 29](#)), a good rule of thumb for finding the correct value is to start by setting it to 10 times the number of seconds of Helm delay (i.e., the time span from initial movement of the Rudder until the vessel’s Heading starts to change) the vessel exhibits: for example, if the Helm delay is 2 seconds, set it to 20.

For NMEA 0183 compasses, the correct value depends on what Heading update rate the compass is set to; for example, with a Vector G2/G2B GPS Compass set to a Heading update rate of 5 Hz, a value of 10 would be a good value to start with.

After the initial value is entered, adjust it in small steps until satisfactory steering performance is obtained.

NAV Mode

In **NAV** mode, the P Series autopilot can use navigation data from an external NMEA 0183 Navigation System, to steer the boat directly to a specific destination, or along a route of waypoints leading to a destination.

To use **NAV** mode:

- Turn on your Navigation System
- Create and activate a waypoint at the destination you want to go to, or a series of waypoints along a route to the destination.
- Press & hold the **NAV** button on the Control Head until the large letter 'N' appears in the upper left portion of the display

The Control Head will display a screen similar to the figure below.

- The boat's actual Heading is shown in large letters in the middle of the LCD screen, with the source & type; the Commanded Heading is shown in smaller digits at the top centre of the screen.
- The Range & Bearing to the next Waypoint, its ID, and the current Cross-Track Error are shown below the Heading; these are all taken from the data provided by the Navigation System³³.

Note: *this is the normal NAV mode display; see the next page for the alternate "highway" display.*

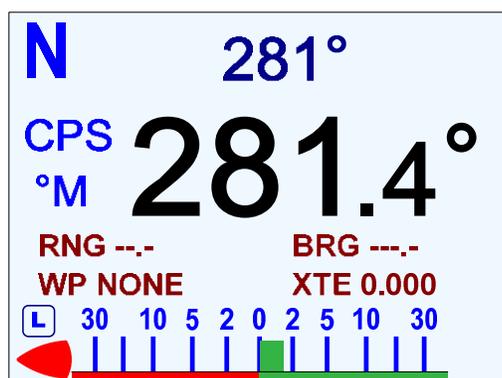


Figure 84 – Typical NAV Mode Screen (Normal Display)

Note: *the Commanded Heading shown on the Control Head may not be the same as the actual bearing to the target point, especially when using "XTE" or "Both" Correction (see page 132). It may even not be the same as a "current Heading" shown by the Navigation System.*

The difference is due to the effects of the correction method the autopilot uses, which may or may not match with what the Navigation System does in calculating "course to steer" & "bearing to destination".

³³ Some Navigation Systems do not provide all of this information. In such cases, the display will show dashes (---) or "NONE" in place of any missing data.

NAV Highway Display

An alternative “highway” display is available for **NAV** mode.

To access this display, press & hold the **NAV** button until the autopilot enters **NAV** mode. Then press the **NAV** button again.

The display will change to a “perspective” representation, as in the figure below:

To change back to the normal display, press the **NAV** button again.

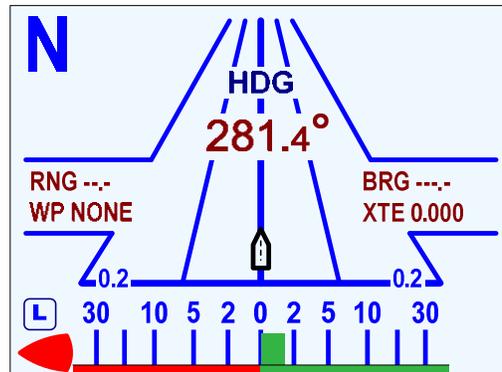


Figure 85 – Typical NAV Mode Highway Screen

In the NAV Highway display, the Track to the destination is the centreline of the “highway”. The boat’s position with respect to that Track is shown by the small “boat” shape.

Cross-Track Error is shown graphically by the boat being located to the left or right of the centreline. The offset is proportional to the amount of Cross-Track Error.

Note the small numbers in the lower corners of the highway display. These indicate the scale of the display. There are four scales that can be shown on the highway display: 0.2, 0.5, 1.5, and 3.0 Nautical Miles. The scale changes automatically to give the best resolution.

Notes on NAV Mode

- If you need to, you can quickly “dodge” around obstacles, and then automatically return to your original Track when the boat is clear of the obstacle – see **Dodge & Jog Steering Turns**, pages 140 & 142.
 - You can limit the maximum amount of rudder travel in **NAV** mode by turning on the Auto/Nav rudder limits. Turning them on, and adjusting them to suit, is done in the Power Steer menu (see page 122).
 - The autopilot has an automatic Off-Course Alarm that will be activated should the boat fall off the Commanded Heading by more than 20°. There is a 32 second delay on this alarm.
- i** *On a P2VS without an RFU, you should always manually steer a steady, straight Heading, in **STANDBY** mode, for at least 10 seconds – or longer, if necessary, until you don’t have to continue to move the wheel/tiller to maintain a straight Track – before switching into **POWER STEER, AUTO** or **NAV** modes. The rudder must be at the dead-ahead position when you switch modes.*

Understanding NAV Mode

In **NAV** mode, the autopilot steers the boat as required to maintain a Commanded Heading, just like it does in **AUTO** mode.

And it also uses the compass source which you have selected for its “current Heading”, for course-keeping purposes – again, just like in **AUTO** mode.

But there’s an important difference between the two modes:

- In **AUTO** mode, the autopilot “obeys” the Command Heading you give it (with the **COURSE CHANGE** knob) ... when you set an initial Heading, and later when you adjust it, as & when sea conditions change, to keep the boat on a straight Track to your destination.
- In **NAV** mode, after you enter a destination, or a route of waypoints, in the Navigation System, the autopilot uses the “steering & navigation” data received from that system to determine the Commanded Heading required to get there, and then does it.

Another key feature of **NAV** mode is that, as each waypoint in a route to your destination is reached, the autopilot can (either automatically, or when you “acknowledge” arrival at the waypoint) change the Commanded Heading, to turn the boat onto the Track to the next waypoint.

And then when the destination waypoint is reached, the autopilot will typically steer the boat so that it orbits that waypoint³⁴, until the autopilot either is switched out of **NAV** mode, or you give it new navigation information via the Navigation System.

Checking the Navigation Data

It is important to be sure that the Navigation System is providing good-quality data to the autopilot. You can test this by following these steps:

- 1) Make sure the Navigation System is turned on and that a waypoint is programmed in and activated.
- 2) Steer the boat close to the Track from the starting position to the waypoint.
- 3) In the NAV menu, select “CTS” for the “Correction” parameter.
- 4) Put the autopilot in **NAV** mode.
- 5) Observe the boat’s response for several minutes.
 - If the boat seems to be continually falling off-course (away from the Track), you probably need to change “XTE Sense” (Cross-Track Error sense) in the Nav menu from “Norm” (normal) to “Rev” (reverse). Then repeat this step.
- 6) If the boat is wandering back and forth, but there are no alarms on the autopilot or Navigation System, the data being provided to the autopilot may not be good enough.

The most common cause of this is poor signal quality in the sensor or antenna wiring of the Navigation System. This may be due to:

- Improper grounding
- Electrical noise generated in the boat (alternators, power packs, etc.)
- Poor antenna location

In this case, you should refer to the Navigation System’s manual for how to deal with poor signal quality, and for what to do to make improvements.

It may also be helpful to consult your ComNav Dealer.

³⁴ ... although it depends on what the Navigation System is set up to do when the destination is reached.

Correction Methods

There are three different methods that the autopilot can use to process data from the Navigation System, in order to update its Commanded Heading. Each has different effects on the path that the boat follows.

You select which method you want the autopilot to use, by specifying “CTS”, “XTE” or “Both” for the Correction parameter in the Nav menu.

The table below is a brief overview of the 3 methods. Full details on each method follow, over the next several pages.

The data used in these methods is defined as follows:

- “Direction data” is the Bearing Origin To Destination (BOD) data in the NMEA sentences from the Navigation System, or – if there is no BOD data – the boat’s initial Heading at the time **NAV** mode is entered.

Note: *the no-BOD condition for a whole route is possible only when the route is straight to a destination – i.e., it has only the one destination waypoint. For routes with multiple waypoints, the first leg can be with “initial Heading”, but the Navigation System must provide BOD data for subsequent legs.*

- “Steering data” is either the Course To Steer (CTS) data provided by the Navigation System, or – if there is no CTS data – the Bearing Present To Destination (BPD) data.
- The Cross-Track Error (XTE) data from the Navigation System, in Nautical Miles.

Setting	Method	Comments
CTS	Course To Steer	The autopilot uses “steering data” only: Heading = CTS or BPD ❖ <i>Cross-Track Error is displayed, but not used.</i>
XTE	Cross-Track Error	The autopilot steers so as to minimize Cross-Track Error as quickly as possible, using “direction” data: Heading = (BOD or Heading) + (XTE × 400° / NM) ❖ <i>CTS/BPD data is not used, even if provided.</i>
Both	Course To Steer plus Cross-Track Error	The autopilot steers so as to minimize Cross-Track Error smoothly, using either “steering data” or “direction data”, depending on what the Navigation System provides: ❖ <i>If CTS or BPD data is provided:</i> Heading = (CTS or BPD) + (XTE × 360° / NM) ❖ <i>If neither CTS nor BPD data is provided:</i> Heading = (BOD or Heading) + (XTE × 400° / NM).

Table 7 – NAV Mode Correction Methods

CTS – Steering a Direct Bearing

When Correction is set to “CTS”, the autopilot uses only the “steering” data (CTS or BPD) from the Navigation System – and therefore is always steering directly to the destination, or next waypoint, from the present position, as depicted in the following diagram.

Cross-Track Error is not used in the calculation.

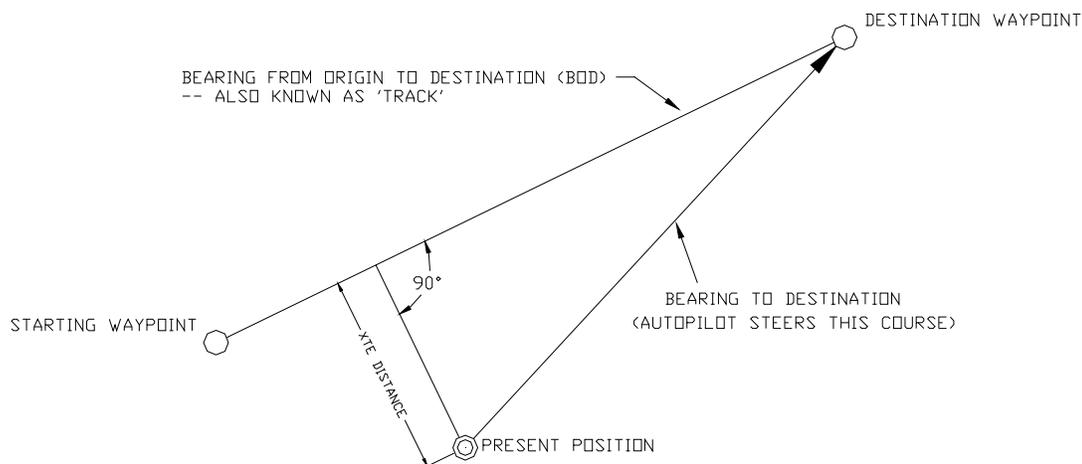


Figure 86 – Steering with Correction set to CTS

To see how this method works, try it out by performing the following steps:

- 1) Change Correction in the Nav menu to “CTS”.
- 2) Make sure the Navigation System is turned on, that a route consisting of at least a starting position (origin) and a destination point is entered, and that the Navigation System is set to output sentences which contain either CTS or BPD data.
- 3) Activate the route.
- 4) Switch the autopilot into **STANDBY** mode and manually steer the boat away from the Track between the starting position & destination, by at least a few hundred metres.
- 5) Place the autopilot into **NAV** mode.
- 6) Observe the Commanded Heading on the Control Head’s display. It should match the Bearing Present to Destination value displayed on the Navigation System – rather than the bearing of the desired Track.

Caution! *Be sure to maintain a sharp lookout to ensure that there are no obstacles between the boat and the destination, when Correction is set to “CTS”.*

XTE – Steering Quickly Back to a Track

Cross-Track Error is the perpendicular distance from the desired Track to the boat's position.

When using Cross-Track Error Steering (Correction set to "XTE"), the autopilot initially steers on the Heading that was current when you enter **NAV** mode, and also monitors the Cross-Track Error reported by the Navigation System.

If there is any Cross-Track Error, the autopilot changes the Commanded Heading so as to minimize the Cross-Track Error as rapidly as possible – so that the boat returns to the desired Track as quickly as possible.

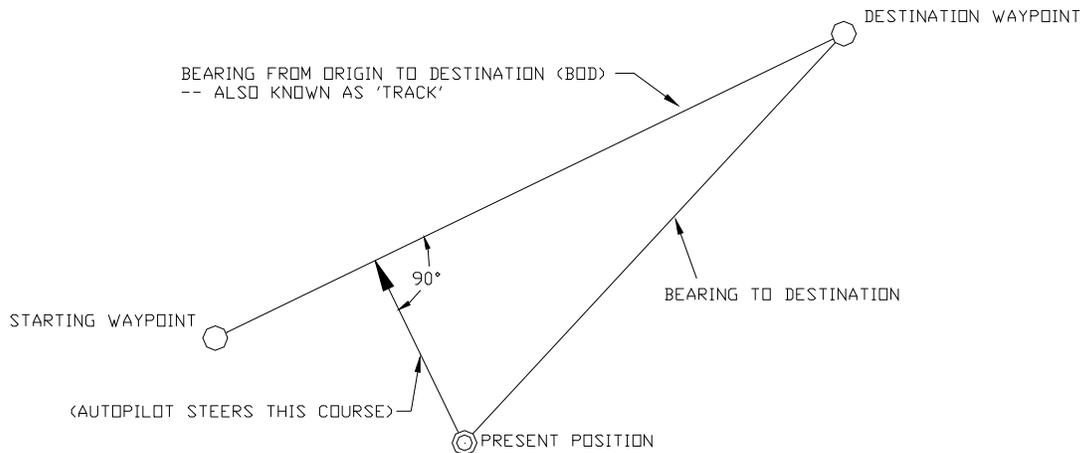


Figure 87 – Steering with Correction set to XTE

To see how this method works, try it out by performing the following steps:

- 1) Change "Correction" in the Nav menu to "XTE", and "MAX Correction" to 90°.
- 2) Make sure the Navigation System is turned on, that a route consisting of at least a starting position (origin) and a destination point is entered, and that the Navigation System is set to output sentences which contain BOD data.
- 3) Activate the route.
- 4) Switch the autopilot to **STANDBY** mode and manually steer the boat onto the Track.
- 5) Place the autopilot into **NAV** mode.
- 6) Observe the boat's Heading and the Cross-Track Error. The autopilot should be steering so as to minimize any Cross-Track Error that develops (from wind, waves, cross-currents, etc.), as rapidly as possible.
- 7) Switch the autopilot to **STANDBY** mode and manually steer the boat to a position well off the desired Track.
- 8) Place the autopilot back into **NAV** mode.
- 9) Observe the boat's Commanded & actual Heading and the Cross-Track Error. The Commanded Heading should shift to something approximately 90° different than the desired Track (less than the Track if you are to Starboard of it, greater if you are to Port).

The autopilot should keep steering that Heading until the boat nears the Track, thus minimizing Cross-Track Error as rapidly as possible, and then turn the boat onto the Track.

Caution! Be sure to maintain a sharp lookout to ensure that there are no obstacles between the boat's current position & the desired Track, with "XTE" Correction.

There is one major drawback to XTE Correction, however.

The course steered when Correction is set to “XTE” is usually not the most efficient in terms of overall distance traveled.

The main problem is that the sum of the distance travelled at a right angle to the Track (i.e., along the XTE distance), and then along the Track – in other words, along the two “right angle” sides of the triangle, in the figure below – is obviously greater than the path direct to the destination.

Also, if there is a large Cross-Track Error, the autopilot may overshoot the desired Track, and then gradually settle on to it. This is a function of turn rate, boat speed, and position updates received from the Navigation System.

- All of these effects are lessened when “Correction” is set to “Both” (see next page).

i *For best performance, it is always best to minimize any Cross-Track Error before putting the autopilot into NAV mode!*

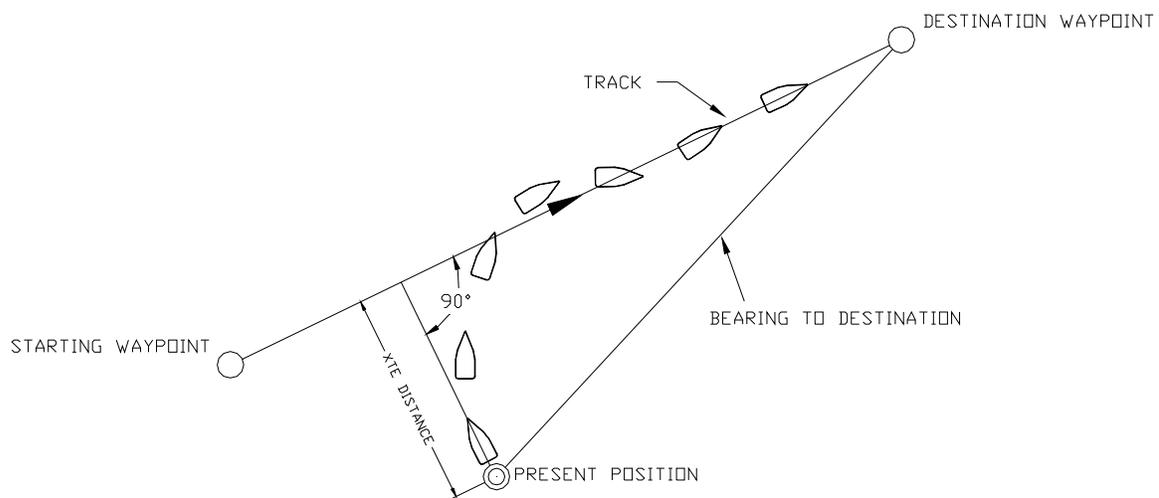


Figure 88 – Response of Boat to a Large Cross-Track Error

Large Cross-Track Error Effects

There is another potential drawback to XTE Correction.

If the Cross-Track Error is large, the autopilot will steer a Heading which can be almost perpendicular to the desired Track.

This may be annoying – and it might even be unsafe, depending on what objects or other boats are near you at the time.

However, the total number of degrees that the autopilot will adjust the Commanded Heading away from the desired Track is limited to the value set for “Max Correction”.

By using this parameter – by setting it to something less than the factory-default of 90° – you can thus limit the possibly-undesired effects of the “perpendicular to Track” behaviour of the autopilot.

Both – Steering Smoothly Back to a Track

When Correction is set to “Both”, the autopilot will bring the boat onto the desired Track as smoothly and efficiently as possible.

Experience has shown that this is generally the best method for most boats.

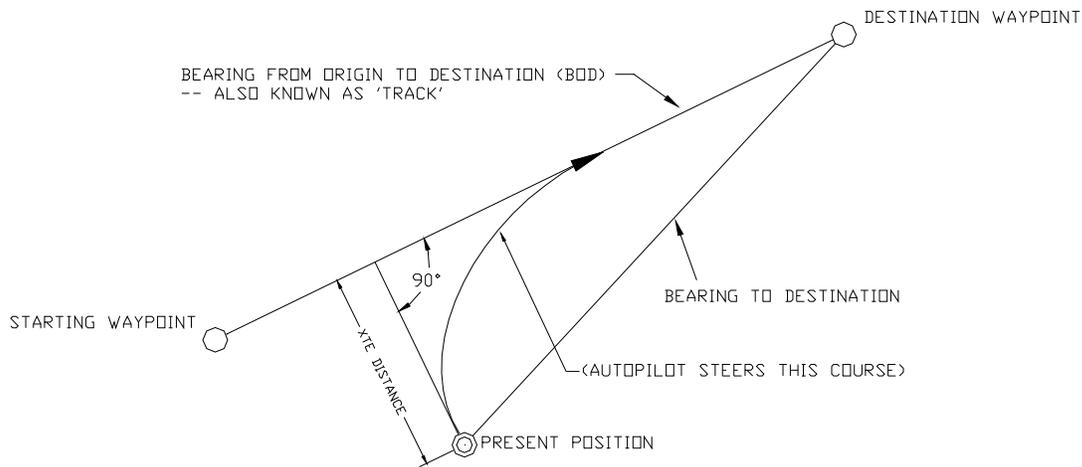


Figure 89 – Steering with Correction set to Both

When steering using this method, the autopilot tries to minimize Cross-Track Error by steering to a Heading that lies between a perpendicular to the Track and the current bearing to the destination waypoint.

The farther you are off-track, the closer to the perpendicular the Heading will be. As you come closer to the Track, the Heading of the boat will change closer to the Heading of the Track.

When you are on-track, the boat's Heading and the Track will be identical.

To see how this method works, try it out by performing the following steps:

- 1) Change “Correction” in the Nav menu to “Both”, and “MAX Correction” to 90°.
- 2) Make sure the Navigation System is turned on, that a route consisting of at least a starting position (origin) and a destination point is entered, and that the Navigation System is set to output sentences which contain CTS or BPD data.
- 3) Repeat steps 3) to 9) of the **XTE – Steering Quickly Back to a Track** test.
- 4) At step 6), the autopilot should be steering so as to minimize Cross-Track Error as smoothly as possible. It may be hard to tell if the steering is any different than with “XTE Correction”.
- 5) At step 9), the autopilot should steer the boat in a smooth arc back onto the Track.

If the Commanded Heading does initially go to 90° different than the Track, it should stay there for a much shorter time than with XTE Correction, and then gradually change back to the Track's bearing.

- Similarly to XTE Correction, you can limit the effects of the autopilot's potential “perpendicular to Track” steering with large Cross-Track Error values, with the Max Correction parameter.

Caution! Be sure to maintain a sharp lookout to ensure that there are no obstacles between the boat's current position & the desired Track, with “Both” Correction.

An example of NAV Mode in Operation

Here's an example of **NAV** mode in operation, to help make the real-world effects of all that math clearer!

Let's say that your boat is running on a waypoint-to-waypoint leg which has a charted bearing of 120° True, and the autopilot is using degrees True Heading data from an NMEA source. You've selected XTE Correction in the NAV menu, and set up the Navigation System to output Bearing Origin To Destination data in degrees True, and XTE data (in NM), with both in the NMEA APB sentence.

When you departed the first waypoint, you were right on the Track between the waypoints, and so the data in the APB sentence was BOD = 120° True, & XTE = 0.0 NM. Thus, the autopilot calculated a Commanded Heading of 120° True, and that's also the boat's actual Heading.

That's good ... you're going straight to the next waypoint ... you can relax!

Oops ... where did that cross-current come from? Seemingly all of a sudden, you're a tenth of a mile off-track to Port, although the boat's actual Heading is still ~120° ...

No worries! The autopilot will handle it:

- BOD is still 120° T, but XTE is now 0.010 NM
... so the Commanded Heading is now $120^\circ + (0.010 \text{ NM} \times 400^\circ/\text{NM}) = 124^\circ$, and the actual Heading is something close to 124°

A few minutes later, you're a little more than half-way back to the Track:

- BOD is still 120°, XTE is now 0.004 NM, so Commanded Heading is now 121.6° (and the actual Heading is close to that)

And after a few more minutes, you're back on-Track, with both Headings holding at ~120°.

Some other points about **NAV** mode to keep in mind:

- The XTE value the autopilot uses in its correction calculations is always in Nautical Miles, and has a precision of 3 decimal places (0.001 NM).

When XTE is 0.01 NM or less, the full 3-digit precision is used. But, when XTS is greater than 0.01 NM, the value is rounded to 2 decimal places (0.01 NM), before the correction calculations are done. The reason for that is to provide smoother & more efficient steering when XTE is "large".

To explain: there's really no point to making many fine adjustments to Commanded Heading when the boat is a long way off-track. For example, if XTE above were to change from 0.024 NM down to 0.015 NM, the Commanded Heading would stay at 128°, rather than going in 0.4° steps from 129.6° down to 126°. But ... the total time to come back on-track would be about the same.

And it's easier on the rudder & drive mechanism too. A few larger changes cause less wear & tear than many small ones – and also use less power!

- Very small changes in, or values of, the XTE value may not always cause a change of Heading - depending on the Sea State parameter value (see page 126).

Example: if Sea State is 1, a change in XTE of 0.001 NM yields a change of Heading of 0.4° - but that's less than the 0.5° of Yaw that is allowable for Sea State 1.

On the other hand, if very small XTE values exist for a time, what will happen instead is that the autopilot's Automatic Rudder Trim will gradually build up a "trim" which *does* have the same effect as changing the Commanded Heading.

In the example above, a steady XTE of 0.001 would cause the rudder to wind up a bit off-centre to Starboard – keeping the boat "crabbing" a bit into that cross-current from Starboard, so that you stay right on the Track that you want.

Nav Menu

The Nav menu contains a number of parameters used when operating the autopilot in **NAV** mode.

To access the Nav menu, double-press the **NAV** button.

N  321°		N  321°	
Nav Source	NAV2	XTE Limit	0.25
XTE Limit	0.25	Waypoint Arrival	Manual
Waypoint Arrival	Manual	Correction	Both
Correction	Both	XTE Sense	Norm
XTE Sense	Norm	Max Correction	60

Figure 90 – Nav Menu

Nav Source

Set Nav Source to the input connector (NAV1 or NAV2) that the external Navigation System is connected to. The autopilot will then look at that input when in **NAV** mode to obtain the bearing and course-to-steer information it needs.

- The selected input can be the same one used for the Compass source (see page 117), and/or the Speed source (see page 127).

XTE Limit (Cross-Track Error Limit)

The autopilot will raise an alarm while in **NAV** mode if the boat's Cross-Track Error exceeds the limit set here.

Waypoint Arrival

When the boat arrives at a waypoint or the end of a route, an NMEA "arrival" sentence is sent to the autopilot from the Navigation System.

This menu line tells the autopilot how you want it to react to the arrival sentence.

Auto (automatic sequencing):

- The autopilot will automatically turn the boat onto the Heading to next waypoint. "Waypoint Arrival" will be displayed on the Control Head screen, along with an audible alarm; both will continue until acknowledged by pressing the **Fn** button.
- ⓘ **Caution!** *Because the boat will turn automatically, it is crucial when planning the trip that you verify there will be sufficient room to execute the turn – at each waypoint.*

Manual (manual sequencing):

- "Waypoint Arrival" will be displayed on the Control Head screen, accompanied by an audible alarm; both will continue until acknowledged by pressing the **Fn** button.
- The autopilot will **not** automatically turn the boat to the next waypoint's Heading. Instead, the current Heading will be maintained until the **Fn** button is pressed.

Off (silent sequencing):

- Automatically turn the boat to the next waypoint in a route.
- **ⓘ Caution!** In “Off”, **no waypoint arrival alarm will be displayed.**

Typically, you would choose this option if your Navigation System has its own waypoint arrival alarm that cannot be turned off, and you do not wish to acknowledge the same alarm on multiple devices.

Correction

This parameter selects which of the three methods the autopilot will use to update the Commanded Heading when in **NAV** mode:

- “CTS” – Course To Steer
- “XTE” – Cross-Track Error
- “Both”

See **Understanding NAV Mode**, above for full details.

XTE Sense (*Cross-Track Error Sense*)

Cross Track Error (XTE) contains two pieces of information. First, it contains the *amount* of the error. Secondly, it gives information about the ‘sense’ of the error – that is, whether the boat is to the *left* or the *right* of the line between the beginning and ending waypoints.

The NMEA 0183 Standard specifies how the Cross-Track Error should be identified. An ‘L’ indicator in the data sentence means the boat should steer to the left, and an ‘R’ indicator meaning the opposite.

However, some manufacturers of GPS, chartplotters, and other Navigation devices & systems have taken the ‘L’ indicator to mean that the boat is to the left of the line, so the boat should steer to the right, and the ‘R’ indicator to mean the opposite.

Because of this confusion, the P Series autopilot’s handling of XTE can be switched from “Norm” (normal) to “Rev” (reverse).

- In “Norm”, the autopilot will respond normally (i.e., in the way defined in the NMEA Standard) to the sense of the Cross-Track Error.
- In “Rev”, the autopilot will respond in the opposite way in response to the same information.

Max Correction

When activating pre-stored routes when there will be a large amount of initial Cross-Track Error, the autopilot will steer the boat at almost 90° to the Track to the first waypoint, in order to get back on-track as fast as possible.

In certain circumstances, this can appear as though the boat is actually moving away from the waypoint.

You can minimize this phenomenon by setting Max Correction to something less than 90°.

Dodge Turns

When in **AUTO**, **NAV** or **WORK** modes, you can use the **PORT** and/or **STARBOARD** buttons to avoid (“dodge around”) an obstacle in the water.

Pressing & maintaining either the **PORT** or **STARBOARD** button will cause the autopilot to turn the boat in that direction.

As long as one of the “direction” buttons is pressed, the rudder will keep moving in the corresponding direction.

- The autopilot will stop moving the rudder when it gets to the Auto/NAV Rudder Limits (see page 122), or when it gets within a few degrees of the physical limits of rudder travel if those limits are not set.

Once the button is released, the Autopilot will turn the boat back to the Commanded Heading, Track, or Wind Angle (depending on which operating mode is in effect).

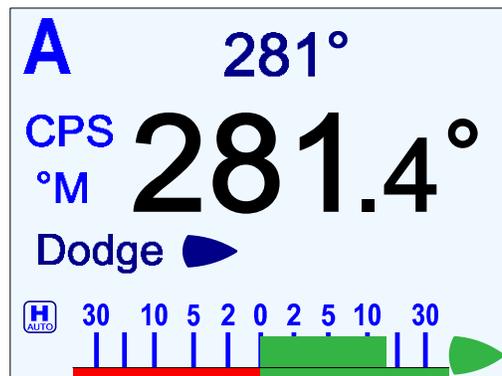


Figure 91 – A Dodge in Progress (in AUTO Mode)

- If you dodge the boat in **AUTO** or **WORK** modes, then when you release the **PORT** or **STARBOARD** button, the boat will return to the same Heading – but **not** the same Track. The new Track will be offset from the original Track by the distance traveled during the Dodge manoeuvre. This is illustrated below.

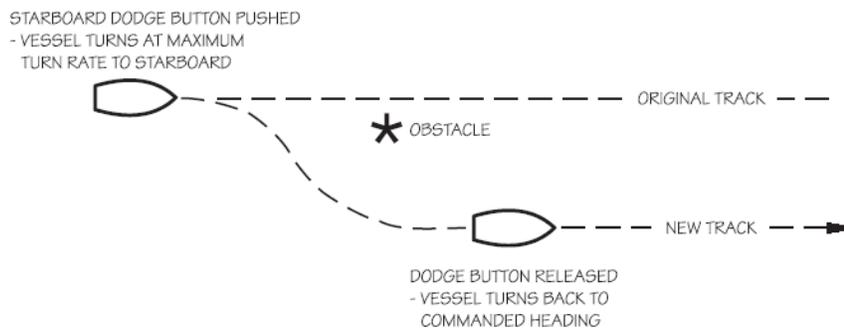


Figure 92 – Boat Track During a Dodge Manoeuvre in AUTO Mode

- In contrast, when you execute a Dodge in **NAV** mode, the autopilot **will** return the boat to the original Track, once you release the **PORT** and/or **STARBOARD** button.

- ⓘ **Caution!** During a Dodge turn (i.e., while one of the **PORT** or **STARBOARD** buttons is maintained), the Autopilot will **not** limit the rate of turn of the boat.

Once the **PORT** or **STARBOARD** button is released, the autopilot will begin to turn the boat back to the Commanded Heading or Track, but this time the turn will occur at no greater than the maximum turn rate that is set in the Steering Parameters.

- ⓘ **Special notes for a P2VS without an RFU:**

Too much rapid &/or repeated side-to-side dodging can cause the autopilot to lose track of the estimated rudder position.

Also, be especially careful not to “dodge in the opposite direction” to get back on-course.

Instead, it is recommended that you always follow a dodge with a “dodge-centre” (see below), until the rudder reaches the dead-ahead position. Then release both the direction buttons, and the autopilot will perform a turn to get back onto the desired Heading. Typically, you will then be off-Track – so if you want to get back on Track, you can change Heading as required.

If you are in a situation where you do have to dodge frequently, it is better to change into **Power Steer** mode, until you are back in a situation where there will be a long period of “steady Heading”. The same is true if you are on a Track where you will have to change Heading frequently.

Dodge Centre

You can bring the rudder back to centre (Dead Ahead) part-way through a Dodge. For example, you might want to center the rudder in order to maintain, for a while, a specific Heading that the boat has reached during the dodge.

- Press the “other direction” button (**PORT** if you are dodging to Starboard, and vice-versa), without releasing the button already being pressed.
- Maintain both buttons simultaneously for as long as you wish to keep the rudder centred.

The Track that the boat follows while both buttons are pressed will typically be straight, at approximately the Heading that was current at the time the second button was pressed.

However, this can be affected by wind and waves, by the boat’s rudder speed and steering response time, and any directional offset that the boat exhibits when the rudder is centred.

- Releasing one button will re-start a Dodge in the other direction.
- Releasing both buttons will end the dodge completely, with the same mode-dependant behaviour with respect to “resuming the Track” as noted above.

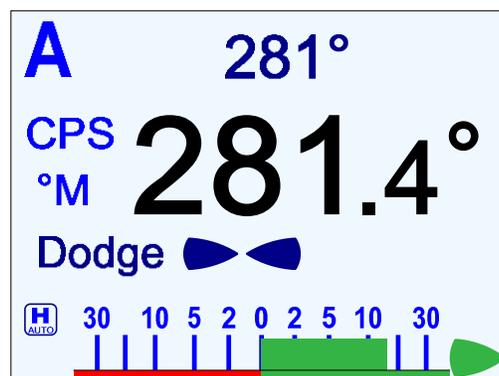


Figure 93 – Holding at a Heading Part-way Through a Dodge Turn

Jog Steering Turns

If a Jog Steering Control Lever is connected to the SPU terminal block **J3**, you can directly change the boat's heading with that Jog Control³⁵, while the autopilot is in **POWER STEER**, **AUTO**, **NAV**, or **WORK** or **WIND** modes.

This is identical to a Dodge, except that you use a Jog Control to start and control it, and you can do it while in **POWER STEER** mode.

When the Control's lever is moved far enough to activate the internal switch, the rudder will move immediately in the requested direction (to Port or Starboard).

As long as the Jog Control is held activated, the rudder will keep moving in the corresponding direction.

- If one, or both, of the Power Steer Rudder Limits and/or the Auto/NAV Limits are set (see page 122), then the autopilot will stop moving the rudder when it gets to the smaller of the limits.
- If neither of the Rudder Limits are set, then the autopilot will stop moving the rudder when it gets within a few degrees of the physical limits of rudder travel.

When you release the Control's lever, the autopilot will return the boat:

- to the current Commanded Heading, if in **AUTO** or **WORK** modes, or in **NAV** mode with "CTS" correction
- or to the current Track to the next Waypoint, if in **NAV** mode with "XTE" or "Both" correction
- or to the current Commanded Wind Angle, if in **WIND** mode (see page 140).

ⓘ Important! *You should be prepared for a change in the boat's direction when you release the Lever.*

A large `J` is displayed in the upper left corner of the Control Head's screen – temporarily replacing the current mode's indicator letter – whenever a Jog Control is activated.

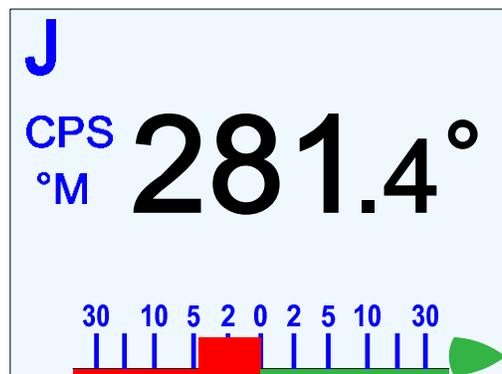


Figure 94 – Typical Jog Control Activated Screen

The Jog Controls are ignored when the autopilot is in **STANDBY** mode, and during **DOCKSIDE SETUP**.

³⁵ The autopilot system allows connecting any desired number of Jog Levers (see page 117).

Commander P2VS Operations

The P2VS is basically a Commander P2, but with extra features – most notably, the ability to operate without a Rudder Follower Unit, using *Virtual Rudder Feedback* (referred to as “*VRFU operation*”). From a hardware standpoint, it is identical³⁶ to a P2 – all the differences lie in the firmware in the SPU & Head.

The P2VS was developed primarily for use on boats with Outboard motors or steerable Inboard-Outboard drives, where installing an RFU is usually very difficult.

Cautions

It is important to keep in mind that – when operating without an RFU – the P2VS can **not** sense where the rudder is positioned, **nor** if it is in motion.

It can only *estimate* the rudder’s position & how far it moves while the “move rudder” signal is being output.

Note: *the word “rudder” is used in the generic sense in this section. It refers to whatever mechanism the boat uses to control its direction of travel – e.g., outboard motor(s), an I/O leg, and so on.*

Here is some background to, and some effects of, that “only an estimate” condition:

- During **Drive Setup**, you enter the rudder travel limits, and then the rudder’s HO-HO travel time is measured. Together, those give the speed (degrees per second) at which the rudder moves.

Later, during normal operation when the P2VS is controlling the rudder (**POWER STEER, AUTO** or **NAV** modes), the SPU continuously re-calculates the current estimated rudder position – by multiplying the measured rudder speed & the length of time it outputs each “move rudder” signal.

- The P2VS VFRU steering algorithms also make some assumptions about the rudder position, at certain “reference points”.

For example, it is assumed that the rudder is in the Dead Ahead position when the boat is running on a straight Heading.

On most boats, in calm sea conditions, “dead ahead” is indeed where the rudder is at the “dead centre” position. But that may not be so if the boat is towing something, or in rough seas, or if there is some condition that requires the rudder to be positioned off-centre for the boat to follow a straight Track.

- There are many factors that can cause errors in the rudder position estimation:
 - ⇒ The only measurable effect of the rudder that the P2VS VFRU steering algorithms can sense is changes in the Heading of the boat³⁷. But the rudder’s effect on Heading varies with different boat speeds, current, tide, wind, etc.
 - ⇒ The rudder and the associated drive mechanism (hydraulic ram, electric solenoids, cable, etc.) typically respond to “move signals” from the SPU in a non-linear way. The rudder’s movement may also be asymmetric – different when moving to Port than Starboard.

³⁶ ... other than the black-coloured Control Head & the product name on the Head’s LCD-protection overlay.

³⁷ ... which is why a *reliable* Heading source is so vital during VFRU operation.

- The Rudder Angle Indicator (the one shown on the Control Head, and any RAI meters connected to the SPU) displays the estimated rudder angle.

Usually, when the RAI's rudder position bar is at the centre (& when the needle on an RAI meter is at the "0" mark), the P2VS is indicating that the boat is holding a steady Heading on a straight Track.

At other times, for many possible reasons, the RAI may be showing a "rudder is off-centre" condition, even though the boat is on a straight Track. This is especially so in **AUTO** & **NAV** modes; however, the misalignment between the RAI & the rudder's actual position will be eliminated gradually, if the boat runs straight for some time.

- During autopilot-controlled steering (**POWER STEER**, **AUTO** or **NAV** modes), the rate of turn is limited to the value you enter in the **Turn Rate** parameter. This is usually well below the rate which a maximum deflection of the rudder would cause, at a normal speed. The result is that the rudder is normally always positioned well within the maximum-deflection limits, and moves more or less equally around the "centre" Dead-Ahead position.

However, if for some reason the boat will only run straight with a big offset of the rudder to one side or the other (or if there is a temporary false offset in the RAI), the arc which the rudder can move within, on the side of the offset (i.e., between that offset "Dead-Ahead" position & the maximum deflection), is reduced. Since the P2VS VFRU steering algorithms have no way to know the size of any such offset, they can not properly assess how close the rudder is to the maximum-deflection boundary.

In such circumstances, the responsibility for keeping the rudder's movement safely within the physical limits lies solely on the operator.

This is especially true when the Dodge Turn function is used.

- ⓘ *If you see that the rudder has a big offset while the boat is travelling Dead Ahead, or if the RAI shows a much different "rudder position" than the rudder is actually at for any length of time, it is **strongly** recommended that you put the autopilot into **STANDBY** mode.*

*Then, determine the cause of the offset or RAI misalignment, before continuing on in **POWER STEER**, **AUTO** or **NAV** modes.*

- It is vital that you can see the rudder during the **Drive Setup** procedure (or at least have a reliable way to monitor it), that you position it correctly when prompted, that you enter accurate values for the rudder travel limits, and that you carefully perform all the steps required.

P2-Equivalent Operation

As noted earlier in this manual, a Rudder Follower Unit may optionally be installed on a P2VS system.

During the initial step of the **Drive Setup** procedure, if an RFU is detected, the P2VS changes into a state which is equivalent to a Commander P2; all menus, features, operational displays and available modes of operation will be the same as on a P2.

Note: *the converse may or may not be true.*

*As of the date of publication of this manual, P2 firmware v4.00 had not been released. The plan was that the P2 was not going to have a “P2VS-equivalent” mode (i.e., if an RFU was **not** found during Drive Setup), but that may have changed during the final design/testing/review work on the new P2 firmware.*

In particular:

- **WORK** mode will be available.
- All Vessel types can be selected.
- The RAI and all “rudder position” functions will be as accurate as the RFU.
- The P2VS’ VRFU feature will be disabled.

There are a few exceptions:

- The P2’s 1PPS output pin will remain non-functional.
- The P2’s HTD NMEA output sentence will not be provided.
- Neither **WIND** nor **WIND-Points** mode will be available.
- The initial screens displayed on power-up will still show “P2VS”.

Advanced Operations

Advanced Operations

This chapter describes the advanced modes of operation & features of a P Series system, and shows you how to use them.

WORK Mode

WORK mode is special mode, for use under conditions that are different from normal autopilot operation; prime examples are dragging, trawling, and pair trawling. It is also useful for towing or when traveling at very slow speeds. **WORK** mode can be activated in either **AUTO** or **NAV** mode. You can even switch from **AUTO** to **NAV** mode or vice-versa, while **WORK** mode is active.

Note: ***WORK** mode is not available when the Vessel type in the Dockside Setup menu is set to Sail, nor on a P2VS without an RFU.*

Initial set up of **WORK** mode is easily accomplished. Only two parameters need to be adjusted: a Work Trip Point and the Rudder Scaling Factor. Some other parameters can be used to monitor and fine-tune the operation of **WORK** mode.

Note: *the autopilot has an automatic Off-Course Alarm that will be activated should the boat fall off the Commanded Heading by more than 20°. There is a 32 second delay on this alarm.*

Automatic WORK Mode

Although **WORK** mode can be used manually, it works best if a valid NMEA source of the boat's speed is also interfaced to the autopilot. The speed source must also be properly configured (in the Auto menu, see page 127). With a valid NMEA speed source, **WORK** mode can be engaged automatically when the boat's speed falls below the Work Trip Point, and disengaged when the boat's speed increases beyond the Work Trip Point.

To use **Automatic WORK** mode, first go into either **AUTO** or **NAV** mode. Then press and hold the **Fn** button for approximately 1 second, until a confirming beep is heard. A small letter `W` will appear beside the bigger mode-indicator letter (`A` or `N`) in the upper left portion of the LCD screen, to indicate that the **WORK** mode feature is enabled.

If the boat's speed is above the Work Trip Point, the `W` will flash slowly, about once per second, indicating that **WORK** mode is enabled – but not yet engaged. If the `W` appears continuously (not flashing), the boat speed is below the Work Trip Point, and **WORK** mode is actually engaged.

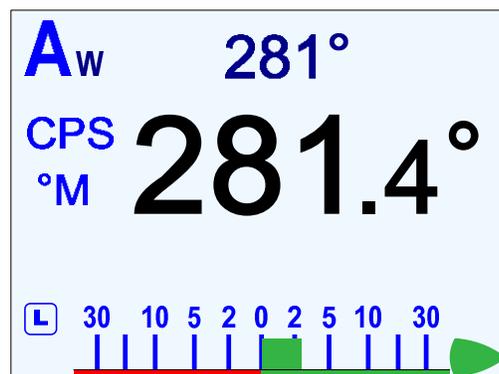


Figure 95 – Typical WORK Mode Screen (Engaged)

To disable **WORK** mode, press the **Fn** button again, for approximately 1 second, until a confirming beep is heard and the letter `W` disappears from the display. **WORK** mode can also be cancelled by switching to either **STANDBY** or **POWER STEER** mode.

When **WORK** mode is engaged, the Rudder Scale Factor changes the amount of corrective rudder movement which the steering algorithms calculate using the Rudder Gain setting. In **WORK** mode, that calculated amount (i.e., proportional to the course error) will also be multiplied by the Scale Factor, resulting in larger rudder movements for a given course error. The Rudder Scale Factor is entered on the Work menu (see page 151).

Other effects take place in **WORK** mode too.

- The corrective rudder movement calculated for Counter Rudder is reduced to the minimum possible for the Vessel type (i.e., as if the Counter Rudder parameter was set to 0), which enhances the effect of the Rudder Gain and Rudder Scale Factor.
- Turn Rate is limited to 10%/second while **WORK** is active, for all changes of Heading controlled by the autopilot, and for Special Turns.
- Particularly useful for pair trawling, the autopilot also disables the automatic course trim unless Autotrim (in the Work menu) is specifically turned on.
- Finally, the built-in off-course alarm will be disabled the entire time **WORK** mode is engaged.

If the user is not satisfied with the fixed helm bias determined by the Autopilot at the onset of **WORK** mode, manual adjustments can be made “on-the-fly” while **WORK** mode is engaged. A double-press of the **Fn** button will bring up the regular Work menu, but with an additional line. Rudder Bias will be the first line on the list, and will show the current helm bias. You can change this value to suit, using the **COURSE CHANGE** knob. This feature is useful in order to accommodate changing load or sea conditions.

As mentioned earlier, **WORK** mode will automatically be disengaged if the boat’s speed rises above the Work Trip Point set by the user. While it is disengaged, all normal features such as automatic trim and off-course alarm will be operational.

Manual WORK Mode

Even if no NMEA source of speed data is available, **WORK** mode can still be used, by manually invoking it.

To do so, switch to **AUTO** or **NAV** mode, and then press the **Fn** button for ~1 second until the letter ‘A’ or ‘N’ in the upper left portion of the display stops flashing, and a small letter ‘W’ appears beside it.

Then, double-press the **Fn** button to bring up the Work menu. Highlight “Work Mode State”. Then use the **COURSE CHANGE** knob to change the selection to “M_On” (Manual On).

WORK mode is now engaged.

Caution! When **Manual WORK** mode is engaged, large rudder movements may occur. If your boat is traveling too fast, these rudder movements may affect the stability of the boat. Do not engage **Manual WORK** mode without first ensuring that it is safe to do so and that the boat speed is appropriate for using **WORK** mode.

To disengage **WORK** mode, again select “Work Mode State” in the Work menu and change it to “A_Rdy” (Automatic Ready).

To cancel **WORK** mode completely, press and hold the **Fn** button for 1 second, or switch to **STANDBY** or **POWER STEER** mode.

- You can also manually disengage **WORK** mode, if it has been engaged in the automatic mode. Double-press the **Fn** button to bring up the Work menu. If **WORK** mode is engaged, the “Work Mode State” will show “A_On” beside it. Highlight “Work Mode State”, then use the **COURSE CHANGE** knob to change it to “M_Rdy” (Manual Ready).

Work Menu

The Work menu has all of the adjustable parameters that are involved with **WORK** mode. To access the Work menu, double-press the **Fn** button.

A_w 	321°
Rudder Bias	0
Autotrim	Off
Work Trip Pt.	2
Rudder Scale	3.00
Work Mode State	A_On

Figure 96 – WORK Mode Menu

Rudder Bias

This menu line only appears when **WORK** mode is active. It shows the current rudder bias, which can be adjusted if desired.

Autotrim

The autopilot's **WORK** mode can be configured to use manual or automatic rudder bias trim when in **WORK** mode (the default is to use automatic bias).

Manual rudder bias is fixed by the position of the rudder when the autopilot first enters **WORK** mode, but can be adjusted by the user if desired (see **Rudder Bias**, above).

Automatic rudder bias is initially set to the position of the rudder when the autopilot first enters **WORK** mode, but is automatically adjusted on a continual basis thereafter to ensure that the boat remains on-course.

Work Trip Pt. (Work Trip Point)

This is the speed below which **WORK** mode can be engaged, and above which **WORK** mode will be disengaged automatically. The value can be 1 to 10, and is in the units that the **Speed Source** (see the Auto menu) is using.

Rudder Scale (Rudder Scale Factor)

When **WORK** mode is engaged, the Rudder Scale Factor" will multiply the Rudder Gain setting in the Auto menu. Normally, the rudder is moved an amount proportional to the course error detected (i.e., the error times the Rudder Gain, and using some constants which depend on boat type), but in **WORK** mode that amount will also be multiplied by the Scale Factor. This will always result in larger rudder movements for a given course error

Work Mode State

This parameter shows the current status of **WORK** mode. It is also a means to force **WORK** mode to be active or not. Normally, **WORK** mode is engaged or disengaged depending on the speed of the boat as given by a Navigation System. In cases where this information is not available, **WORK** mode can still be made to function by forcing it on.

The states shown are "Off", "A_On" and "A_Rdy" (abbreviations for Automatic On & Automatic Ready, respectively), or "M_On" and "M_Rdy" (Manual On & Manual Ready).

WIND Mode

WIND mode is special mode used on sailboats; it is a sub-mode of **AUTO** mode.

Note: *WIND mode is only available when the Vessel Type in the Dockside Setup menu is set to Sail; it is not available on P2VS systems.*

In **WIND** mode, the autopilot steers the boat so as to maintain a constant angle to the wind, rather than a constant Heading.

In order to use **WIND** mode, your autopilot must receive wind information (speed & angle) from a ComNav Twin-Fin Wind Transducer, or as NMEA 0183 data from some other wind sensor via one of the NAV data inputs. The "Wind Source" in the Wind menu must match what you are using.

Note: *you can not change the "Wind Source" while in WIND mode, for safety reasons (different wind sources may not give the same reading).*

To enter **WIND** mode, bring the boat around so that the wind angle on the bow is between about 045° and 160°, and set your sails correctly for that wind angle. Then enter **AUTO** mode, and then press the **Fn** button for ~1 second, until the large letter 'A' stops flashing. The screen displayed will be similar to the figure below.

The smaller letter 'W' that appears to the immediate right of the 'A' indicates that the autopilot is now in **WIND** mode.

The large numbers on the display show the actual wind angle, while the smaller numbers in the upper center portion indicate the Commanded Wind Angle. The Commanded Angle is automatically set to the actual wind angle when you enter **WIND** mode; you can then change it, with the **COURSE CHANGE** knob.

The letters after the wind angles show which side of the boat – Port or Starboard – the wind is coming from.

The boat's current Heading is also shown, and whether it is degrees True or Magnetic.

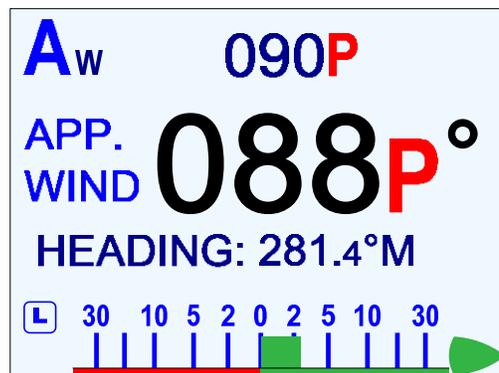


Figure 97 – Typical WIND Mode Screen (Normal Display)

To exit **WIND** mode, press the **Fn** button again. The **AUTO** mode screen will re-appear, and the letter 'W' will disappear from the display.

WIND mode can also be cancelled by switching to any other mode.

Changing Wind Angle

To change the Commanded Wind Angle, rotate the **COURSE CHANGE** knob. The angle will change by 1° for every click of the knob.

ⓘ Important! Turning the **COURSE CHANGE** knob, tells the autopilot to turn the boat in the direction you turn the knob. But keep in mind that **the change in the Commanded Wind Angle depends on the Tack you are on:**

- On Port Tack, turning knob clockwise (thus turning the boat to Starboard) increases the Commanded Wind Angle, since the boat will turn farther away from the wind. Similarly, turning the knob counter-clockwise turns the boat to Port, and so decreases the Commanded Angle.
- On Starboard Tack, it is the opposite way around.

Of course, as the boat turns you should also trim your sails to suit the new wind angle!

Tack & Gybe Inhibit

The 045° to 160° wind angles for the “**WIND** mode entry range” are in fact the Close Haul & the Gybe Hold angles, respectively. The actual values of each of these points of sail can be changed, in the Wind menu, if you wish – and if you do so, the “entry range” will change too.

However, attempts to change the Commanded Wind Angle beyond these Points of Sail (i.e., less than Close Haul or more than Gybe Hold) will be ignored. This is a safety feature known as Tack and Gybe Inhibit.

ⓘ Caution! These Inhibits are **not** a guarantee against hazardous situations. When sailing under autopilot control, your attention is required at all times, most especially when running or beating.

The Tack and Gybe Inhibits are meant to prevent unintended, accidental Tacks & Gybes. However, there is a way to perform Tack and Gybe manoeuvres **intentionally**, using the **TURN** button – see pages 156 & 159.

Low Wind Speeds

A warning will appear on the screen any time the wind speed is below about 9 – 10 Knots³⁸; for example, in Figure 97, the display would show “Low Wind” instead of “App. Wind”.

The reason for this warning is that sailing in light winds (below about 6 Kn, on a typical sailboat) under autopilot control can be very tricky. The boat speed will be low, and so there will not be sufficient steerageway for the autopilot to control the boat’s direction properly.

However, the autopilot will still try to do its best in a Low Wind condition – and so the warning is to remind you that it **may** not have very good control of the steering!

When the wind speed is above 9 – 10 Kn, the low wind warning will be replaced with either “App. Wind” (Apparent Wind) or “True Wind” (determined by the Wind Source parameter).

- If the wind speed drops to about 3 Kn, a “Wind Sensor Error” alarm will occur. In this condition, the wind speed is too low to maintain the Commanded Wind Angle, and so the autopilot will instead try to maintain the Heading the boat was on just before the alarm occurred. Typically, this will cause the rudder to move gradually to the Dead Ahead position³⁹.
- This alarm will also occur when using a Wind Vane, if the vane fails.
- When using an NMEA source, this alarm will occur if there are no valid wind data sentences received for ~2 seconds.

³⁸ There’s a 1 Kn hysteresis on the Low Wind & Wind Sensor Error detections, to reduce annoying warnings & alarms around the thresholds.

³⁹ If there is also a problem with the RFU, the autopilot will simply keep the rudder at the same position it was at.

WIND-Points Mode

There is a variation of **WIND** mode, called **WIND-Points** mode.

In this mode, the **COURSE CHANGE** knob is used to command the autopilot to steer to specific predefined Points of Sail: Close Haul, Close Reach, Beam Reach, Broad Reach, or Gybe Hold . You can define the exact wind angle for any of these in the Wind menu.

To enter the **WIND-Points** mode, press the **AUTO** button when in **WIND** mode until the screen changes to the display shown below.

To go back to the **WIND** mode & display, press **AUTO** again.

Note: if you change to a non-wind mode from the **WIND-Points** mode, then when you re-enter **WIND** mode, you will go right back into **WIND-Points** mode.

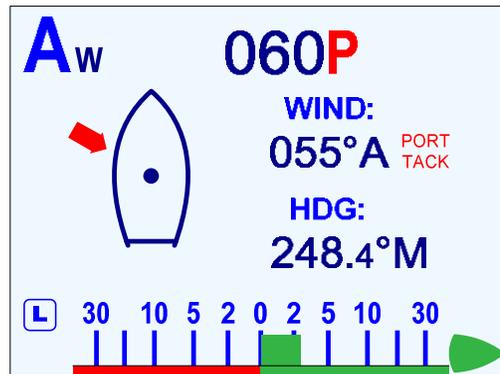


Figure 98 – Typical WIND-Points Mode Screen

Changing Point of Sail

In the example above, the solid arrow shows the *approximate* direction which the wind is coming from. The actual wind angle (055°) is shown in the centre, and whether it is True (T) or Apparent (A); the boat's current Heading, 248.4° Magnetic, is also shown⁴⁰.

The Commanded Wind Angle, to which the autopilot will try to steer to & maintain, is located in the upper middle of the display (060P, in the figure above).

To change the Commanded Wind Angle, rotate the **COURSE CHANGE** knob. Note that the Commanded Wind Angle does not change by 1° as would happen in the regular **WIND** mode; instead, it changes all the way to the closest (to the current actual wind angle) Point of Sail, in the direction the boat will turn.

A new arrow is then shown on the display – but this one is an outline only, showing what the wind direction will be, once the autopilot brings the boat onto the new Commanded Angle.

ⓘ Important! Just as in **WIND** mode, turning the **COURSE CHANGE** knob, tells the autopilot to turn the boat in the direction you turn the knob. But keep in mind that **the change in the Commanded Wind Angle depends on the Tack you are on** (see *Changing Wind Angle on the previous page*).

Tack & Gybe Inhibit

Similar to operation in **WIND** mode, the autopilot does not allow you to Tack or Gybe using the **COURSE CHANGE** knob, in the **WIND-Points** mode. But there *is* a way to do Tacks & Gybes – see pages 156 & 159.

⁴⁰ A Low Wind condition – see page 147 – is indicated on this screen as “WIND-LOW”, above the actual wind angle.

Here's an example of **WIND-Points** mode operation:

Assume that you have defined a Close Reach as 060°, a Beam Reach as 090°, and a Broad Reach as 120°. You are in **WIND** mode, and the autopilot is steering to the wind at a Commanded – and actual (Apparent) – wind angle of 080° on a Port tack.

When you press the **Fn** button to bring up the **WIND-Points** mode, the autopilot will set the Commanded Wind Angle to 080° Port, because that is the current wind angle. The display will show a solid arrow at the closest Point of Sail, 090° Port.

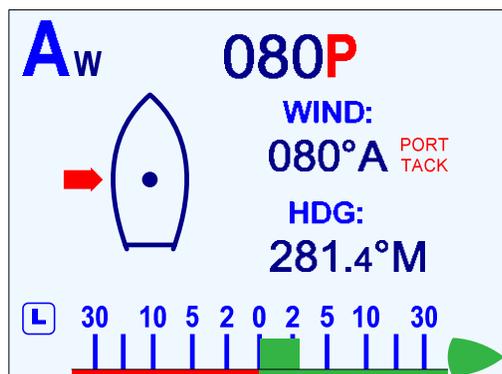


Figure 99 – Commanded Wind Angle of 90°

Now let's say you turn the **COURSE CHANGE** knob one click counter-clockwise. The Commanded Wind Angle changes to 060° Port, since you've commanded a turn of the bow to Port – which will decrease the wind angle on the bow, and so the corresponding point of sail is a Close Reach Port. The outline arrow shows that the wind will be coming from 060°, once the autopilot brings the boat onto the new Commanded Angle (i.e., new Point of Sail). The boat will then turn to Port, and as the actual wind angle approaches 060°, the outline arrow will be replaced with a solid one, once the actual angle is within 5° of the new Commanded Angle.

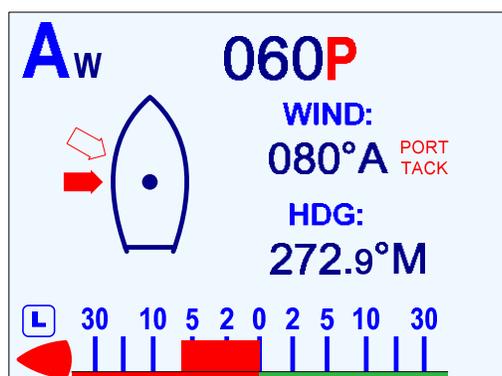


Figure 100 – Outline Arrow shows the Commanded Point of Sail

If you had instead turn the knob one click clockwise, the Commanded Wind Angle would change to 120° Port (i.e., a Broad Reach), an outline arrow would appear at 120°, and the boat would begin to turn to Starboard.

As before, while the boat turns you should also trim your sails to suit the new wind angle!

Boundaries of the Points of Sail

The boundaries between the Points of Sail are used in deciding which Point to change the Commanded Wind Angle to, when making a turn. The Point chosen is the one between the boundaries that the actual wind angle falls in.

To show how the boundaries are determined, look at the following diagram⁴¹.

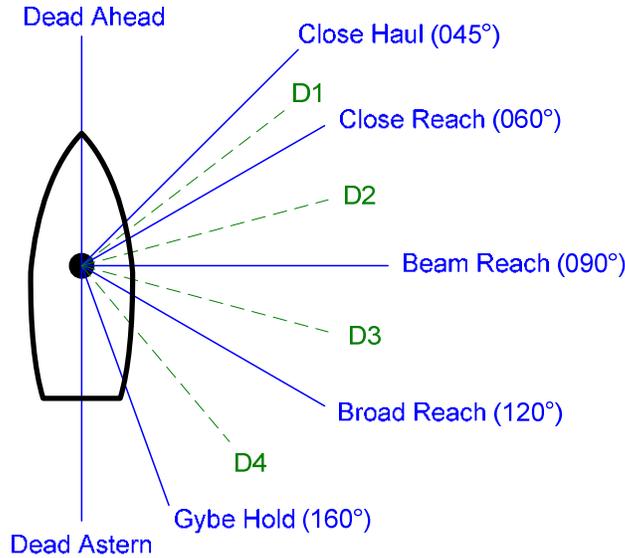


Figure 101 – Points of Sail

Note: when the WIND-Points mode is entered, the Commanded Wind Angle will be the actual wind angle, even if it is not one of the Points of Sail. But, if you then turn the **COURSE CHANGE** knob, the Commanded Angle will change to the Point of Sail which is closest to the actual wind angle.

Each of the boundaries (labelled “D1”, “D2”, etc., in the figure above) is half-way between the surrounding Points of Sail. Since the angles of the Points of Sail can be changed, in the Wind menu, the angle of the D1 – D4 boundaries can change too (Dead Ahead & Astern are also boundaries, but have fixed values).

Divider	Calculated By	Default Angle
Dead Ahead	—	000°
D1	$\frac{\text{Close Haul} + \text{Close Reach}}{2}$	052.5°
D2	$\frac{\text{Close Reach} + \text{Beam Reach}}{2}$	075°
D3	$\frac{\text{Beam Reach} + \text{Broad Reach}}{2}$	105°
D4	$\frac{\text{Broad Reach} + \text{Gybe Hold}}{2}$	140°
Dead Astern	—	180°

Table 8 – Boundaries Between Points of Sail

⁴¹ The angle values shown in the diagram for the Points are all the default definition values; if you change any (see page 156), then the angle(s) will be the changed value(s).

Tacking

ⓘ *Tacking should initially be tested out in moderate winds and calm seas, in order to understand how it works on **your** boat.*

Tacking is accomplished as follows (in **WIND** or **WIND-Points** mode).

- 1) Do all your normal preparations (lines, sails, other gear, etc.) to Come About.
- 2) Set the Commanded Wind Angle to Close Haul. If necessary, let the boat head up until the actual wind angle is close to the Commanded Angle.
- 3) Push the **TURN** button.

If you are sailing at an actual wind angle greater than 010° and less than the value in the Close Reach parameter in the Wind menu, the screen shows the “Tack ?” prompt.

At any other angle, a Tack is not allowed, so an “Invalid Command” message pops up.

Note: if the actual wind angle is greater than a Broad Reach & less than 175°, the autopilot assumes that you want to Gybe. In this case, the screen will show the “Gybe ?” prompt instead (see **Gybing** below, for more information).

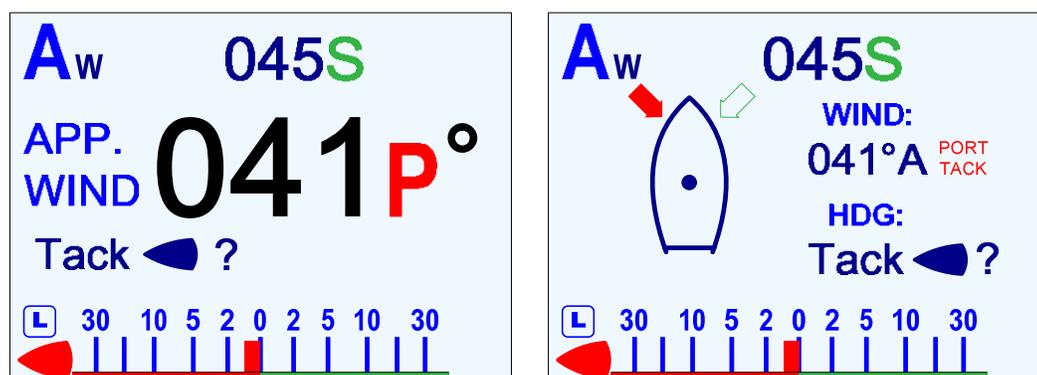


Figure 102 – Starting a Tack in WIND (left) and WIND-Points (right) Modes

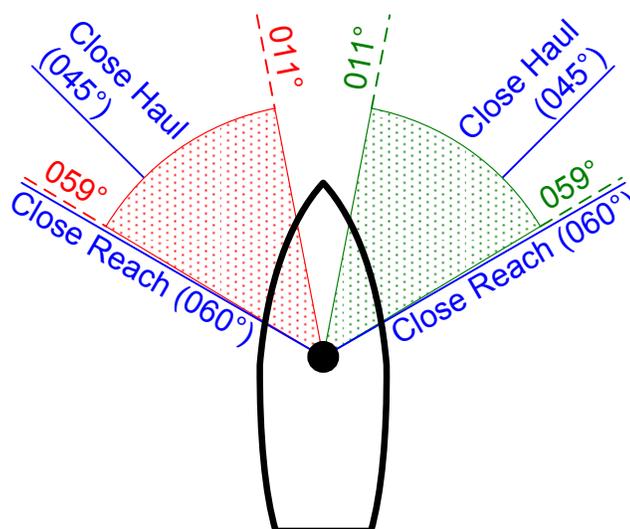


Figure 103 – Wind Angle Limits to Start a Tack

For example, with Close Reach set to the default 060°, if you are sailing at an angle of 011° or 059°, or anything in between, you will see the prompt.

- 4) Push either the **PORT** or **STARBOARD** button, depending on which Tack you are on.

Just like when changing the Commanded Wind Angle with the **COURSE CHANGE** knob, the “turn direction” buttons tell the autopilot which way you want the boat to turn.

So, you must press the correct button for the Tack you are on: **PORT** when on Port Tack, and vice-versa.

i *The “correct direction button” for a Tack is the opposite of a Gybe!*

A small “arrow” symbol, in the correct direction, appears in the “Tack ?” prompt, as a reminder of which button to push.

- The autopilot will not do the Tack if you press the wrong “direction” button, but instead just restore the normal **WIND** or **WIND-Points** display.

For example, say you are on a Starboard tack and steering to a wind angle of 045°. If you press the **TURN** button followed by the **PORT** button, it would result in the boat turning to Port, which would increase the wind angle instead of tacking the boat.

In this case, the autopilot would simply cancel the Tack, and continue to steer to the Commanded Wind Angle it was already on.

- 5) The autopilot will tack the boat to the Close Haul point on the opposite tack. You can now adjust the Commanded Wind Angle as desired. You should also trim your sails to suit!

- During the Tack, the autopilot automatically adjusts its steering parameters (Rudder Gain, etc.) to make the turn a bit quicker than a normal turn.
- The autopilot will only tack the boat if the actual wind angle, at the time the **PORT** or **STARBOARD** button is pushed, is less than the Close Haul angle plus 10° – otherwise the Tack will be cancelled.

To allow for tacking in shifty winds, the angle can be anything less than that – and even already be on the opposite tack, as long as it is less than Close Haul plus 10°.

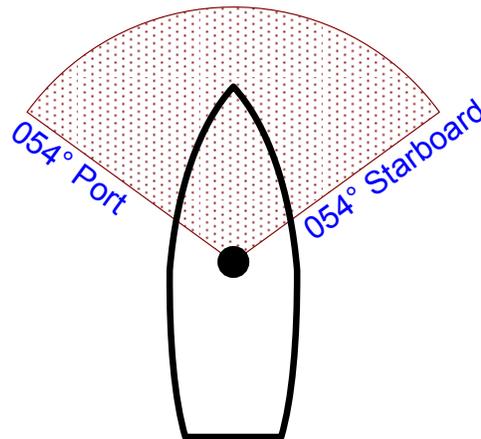


Figure 104 – Wind Angle Limits for Tacking

For example, in the same 045° Starboard tack example as above, the wind must be between 054° Starboard & 054° Port when the **STARBOARD** button is pushed.

Note: *to cancel a Tack after you have pressed the **TURN** button but before you have pressed the direction button, just press the “wrong” direction button.*

*To abort a Tack once the autopilot has begun to steer the boat onto the opposite tack, you must change to some other mode, by pressing either the **STANDBY**, **POWER STEER**, or **NAV** button.*

Gybing

i Gybing should initially be tested out in moderate winds and calm seas, in order to understand how it works on **your** boat.

Gybing is performed in almost the same way as a Tack – but with different wind angle limits to start & perform the manoeuvre.

- 1) Do all your normal preparations (lines, sails, other gear, etc.) for a Gybe.
- 2) Set the Commanded Wind Angle to Gybe Hold. If necessary, let the boat head up or fall off until the actual wind angle is close to the Commanded Angle.
- 3) Press the **TURN** button.

If the actual wind angle is within the limits – greater than the value in the Broad Reach parameter in the Wind menu and less than 175° – the screen will show a “Gybe ?” prompt.

At any other angle, a Gybe is not allowed, so an Invalid Command message pops up.

Note: if the actual wind angle is greater than 011° & less than a Close Reach, the autopilot assumes that you want to Tack (see **Tacking** above).

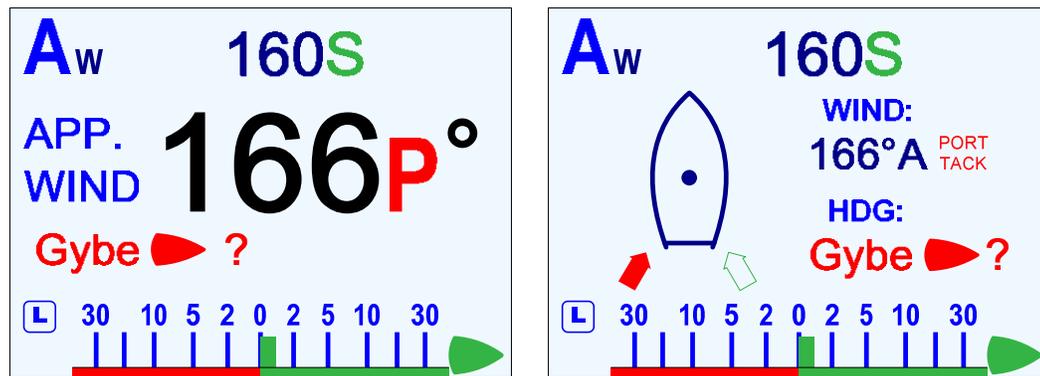


Figure 105 – Starting a Gybe in WIND (left) and WIND-Points (right) Modes

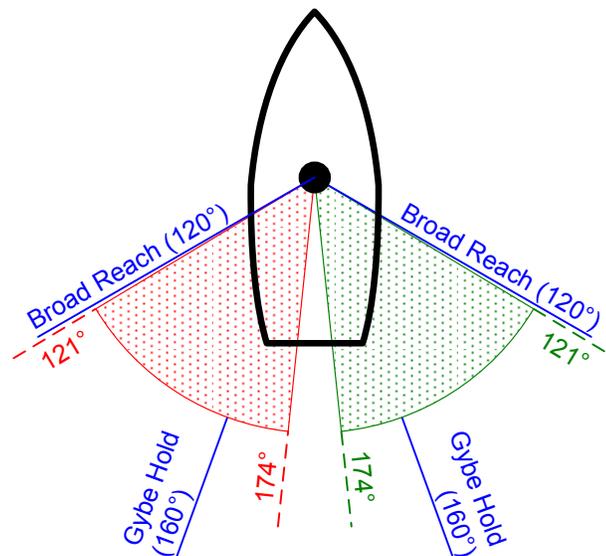


Figure 106 – Wind Angle Limits to Start a Gybe

For example, with Broad Reach set to the default 120°, if you are sailing at an angle of 121° or 174°, or anything in between, you will see “Gybe ?” prompt.

- 4) Push either the **PORT** or **STARBOARD** button, depending on which Tack you are on.

ⓘ *The “correct direction button” for a Gybe is the opposite of a Tack!*

A small “arrow” symbol, in the correct direction, appears in the “Gybe ?” prompt, as a reminder of which button to push.

- The autopilot will not do the Gybe if you press the wrong “direction” button, but instead just restore the normal **WIND** or **WIND-Points** display.
- 5) The autopilot will slowly steer the boat to the Gybe Hold Point on the opposite tack. Once the Gybe manoeuvre is completed, the Commanded Wind Angle can be adjusted as desired, and you can let out & trim the sails as required.

ⓘ **Caution!** *Be alert – avoid the swinging boom!*

- During the Gybe, the autopilot automatically adjusts its steering parameters (Rudder Gain, etc.) to make the turn a bit slower than a normal turn.
- The autopilot will only gybe the boat if the actual wind angle, at the time the **PORT** or **STARBOARD** button is pushed, is greater than the Gybe Hold Point angle minus 11°; it can even already be on the opposite tack, as long as it is still greater than Gybe Hold Point minus 11°.

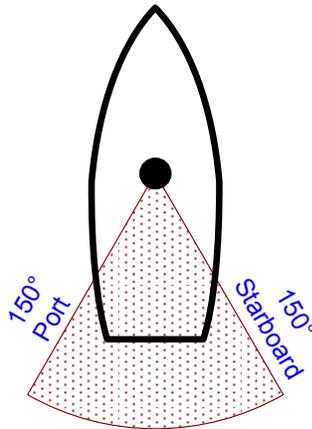


Figure 107 – Wind Angle Limits for Gybing

For example, if the Gybe Hold Point value is the default 160°, the wind must be between 150° Starboard & 150° Port when the appropriate **PORT** or **STARBOARD** button is pushed, otherwise the Gybe will be cancelled.

Note: *to cancel a Gybe after you have pressed the **TURN** button but before you have pressed the direction button, just press the “wrong” direction button.*

*To abort a Gybe once the autopilot has begun to steer the boat onto the opposite tack, you must change to some other mode, by pressing either the **STANDBY**, **POWER STEER**, or **NAV** button.*

ⓘ **Caution!** *Aborting a Gybe in progress is not recommended, as it may cause an accidental Gybe, which could result in damage to the boat or injury to the crew.*

Wind Menu

The Wind menu has all of the adjustable parameters that are involved with **WIND** & **WIND-Points** modes. To access the Wind menu, double-press the **Fn** button.

A _w  321°		A _w  321°	
Damping Time	0.5	Close Haul Def.	45
Wind Source	Vane	Close Reach Def.	60
Wind Shift	Off	Beam Reach Def.	90
Wind Shift Delay	0.2	Broad Reach Def.	120
Preset Tack Angle	100	Gybe Hold Pt.	160

Figure 108 – Wind Menu

Wind Source

Wind data may be received either directly from a ComNav Twin-Fin Wind Transducer, or from other devices that provide wind data in NMEA 0183 format. Select the appropriate value according to the table below.

Note: for safety reasons, this menu line does not appear if you enter this menu while in **WIND** mode.

Setting	Wind Source	Comments
Vane	Twin-Fin Wind Transducer	Wind direction & speed is taken directly from the Wind Transducer. The boat will sail to the <i>Apparent Wind</i> .
NAV1A	NAV1 input, <i>Apparent wind</i> ①	Wind direction & speed is taken from a wind-measuring instrument that provides <i>Apparent Wind</i> data in NMEA 0183 format, & connected to the NAV1 input.
NAV1T	NAV1 input, <i>True wind</i> ①	Wind direction & speed is taken from a wind-measuring instrument that provides <i>True Wind</i> data in NMEA 0183 format, & connected to the NAV1 input.
NAV2A	NAV2 input, <i>Apparent wind</i> ①	Wind direction & speed is taken from a wind-measuring instrument that provides <i>Apparent Wind</i> data in NMEA 0183 format, & connected to the NAV2 input.
NAV2T	NAV2 input, <i>True wind</i> ①	Wind direction & speed is taken from a wind-measuring instrument that provides <i>True Wind</i> data in NMEA 0183 format, & connected to the NAV2 input.

Table 9 – Wind Source Selection

① When the wind data source is an NMEA device, there are several sentences which can contain the wind speed & direction data.

If the data in the sentence being received (or in the sentence with highest priority, if there is more than one with “wind data” received) is not the type – *Apparent* or *True* – selected in *Wind Source*, and if boat speed data is also available, the autopilot calculates the required *Apparent/True* wind speed.

If no boat speed data is available, the wind data is used as is, but the *Apparent* or *True* indicator on the **WIND** & **WIND-Points** mode screens does not change.

Wind Shift (*Wind Shift Alarm*)**Wind Shift Delay**

The autopilot can warn you if the wind shifts significantly. For example, if the Wind Shift alarm is set to 10 and the Wind Shift Delay is set to 0.5, then if the wind shifts by more than 10 degrees for 0.5 minutes, the Wind Shift Alarm will sound.

The Wind Shift Alarm can be disabled by selecting Wind Shift in the menu and rotating the **COURSE CHANGE** knob counter-clockwise until the value reads "Off".

Preset Tack Angle

When the Vessel type is set to "Sail" (in the Dockside Setup menu), the P Series autopilot includes "Pretack" (Preset-Tack) in the list of possible Special Turns. The Preset Tack Angle allows the user to customize the number of degrees that the boat will turn through when a Preset-Tack Special Turn is executed.

Close Haul Def (*Close Haul Definition*)**Close Reach Def** (*Close Reach Definition*)**Beam Reach Def** (*Beam Reach Definition*)**Broad Reach Def** (*Broad Reach Definition*)**Gybe Hold Point** (*Gybe Hold Point Definition*)

You can set a wind angle in the autopilot for the often-used Points of Sail: Close Haul, Close Reach, Beam Reach & Broad Reach, and also for a special angle called Gybe Hold. Each of these Points is defined by the angle of the wind relative to the boat, no matter whether the boat is on Port or Starboard Tack.

In the **WIND-Points** mode, the autopilot will steer the boat so as to maintain the wind angle at one of these Points. Moving the **COURSE CHANGE** knob one "click" will change from one of these Points of Sail to the next.

- The Close Haul & Gybe Hold angles also define the range of wind angles which the boat should be at when entering **WIND** or **WIND-Points** modes.
- Close Haul defines the angle from which the boat can be tacked.
- Gybe Hold defines the angle from which the boat can be gybed.

Special Turns

There are a number of Special Turns pre-programmed into the P Series system.

The Special Turns described in this section can only be executed in **AUTO** & **WORK** modes.

Note: the **WIND** & **WIND-Points** modes' Tack & Gybe turns operate similarly to Special Turns.

To execute a Special Turn (with the autopilot in the appropriate mode):

- 1) Press the **TURN** button. The default special turn will be displayed, along with a query for a direction.

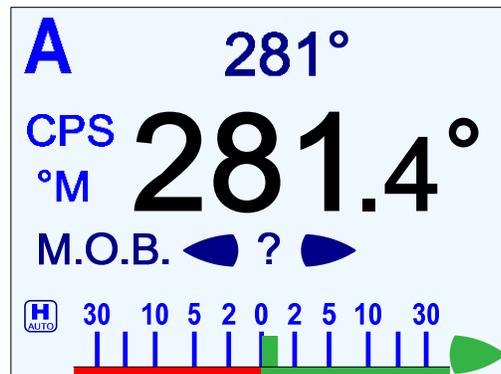


Figure 109 – Typical Special Turn Query

- 2) If a different special turn other than the default shown is desired, press the **TURN** button again. The next special turn in the available list will be shown. Press the **TURN** button again and again until the desired special turn is shown.
- 3) Press & hold either the **PORT** or **STARBOARD** button to select the direction in which to execute the Special Turn.

The default Special Turn can be changed as desired by adjusting the “Default Turn” in the Standby menu (see page 117).

Special Turns can be aborted by pressing the **TURN** button again while the Special Turn is executing, or by changing modes.

U-Turn



Figure 110 – U-Turn Query

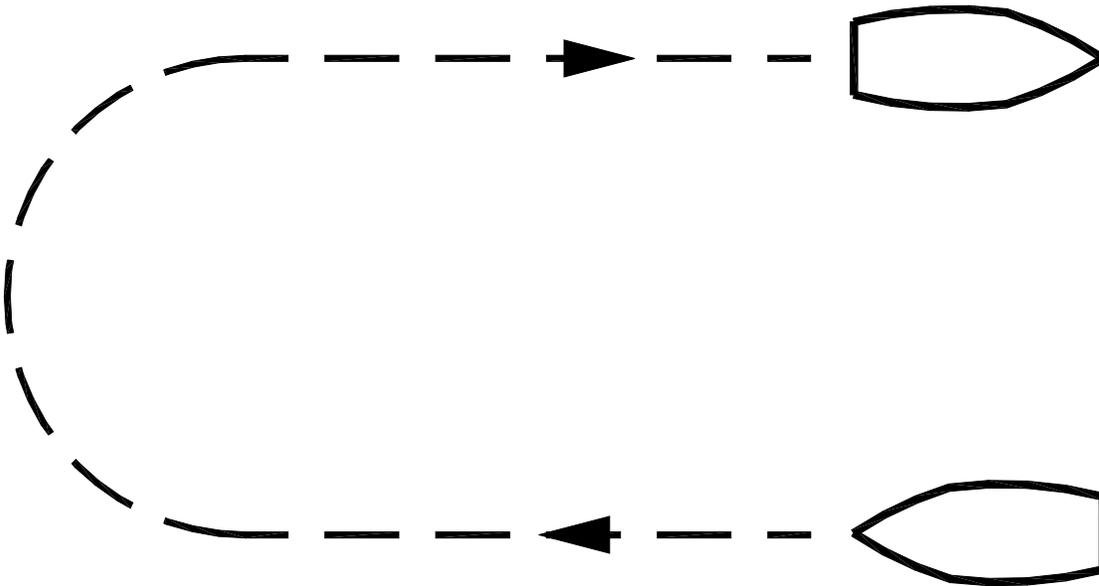


Figure 111 – U-Turn Boat Path

The autopilot calculates a reciprocal course to the boat's heading, and then turns the boat to that heading, in the appropriate direction, once the **PORT** or **STARBOARD** button is pressed.

Circle Turn



Figure 112 – Circle Turn Query

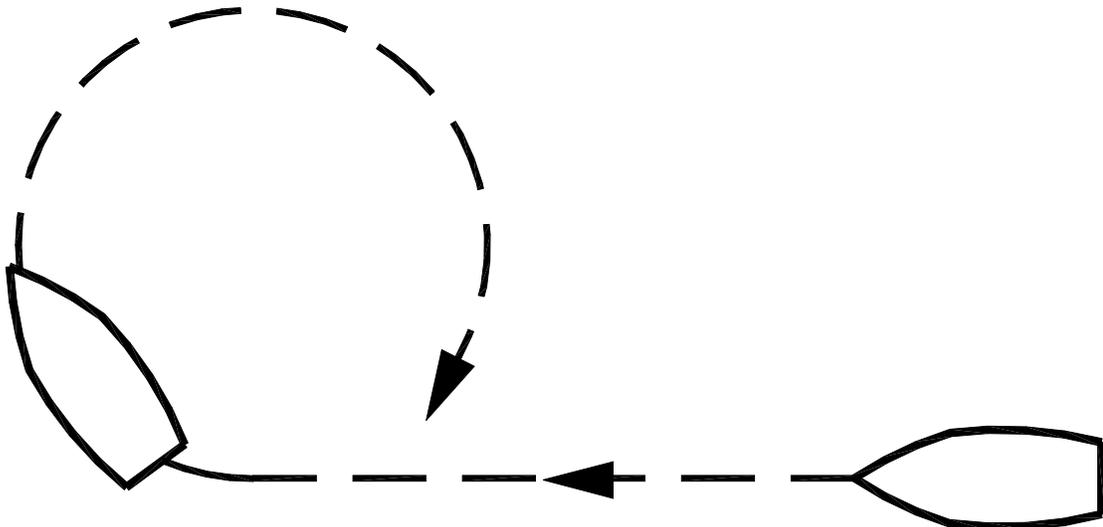


Figure 113 – Circle Turn Boat Path

The autopilot steers a never-ending circle in the appropriate direction once the **PORT** or **STARBOARD** button is pressed. The Turn Rate setting in the Auto menu governs the rate of turn.

To stop the circle, press the **TURN** button again, or switch modes.

M.O.B. – Man Over-Board



Figure 114 – M.O.B. Turn Query

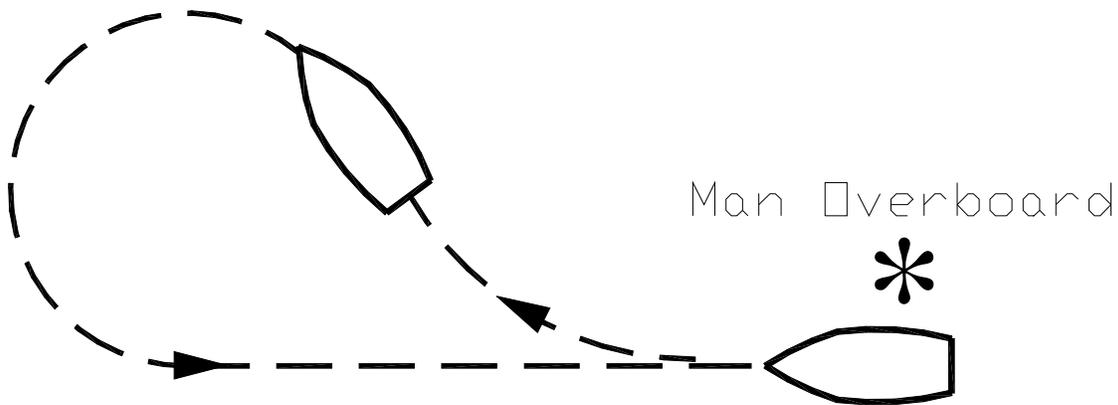


Figure 115 – M.O.B. Turn Boat Path

The autopilot will perform a Williamson Man-Overboard turn, sometimes known as an Emergency or E-turn. This will bring the boat onto a reciprocal heading; typically right down the boat's own wake. The **PORT** or **STARBOARD** buttons are used to determine the initial turning direction.

For best accuracy, do not adjust boat speed once this turn has been initiated.

Fishzag



Figure 116 – Fishzag Turn Query

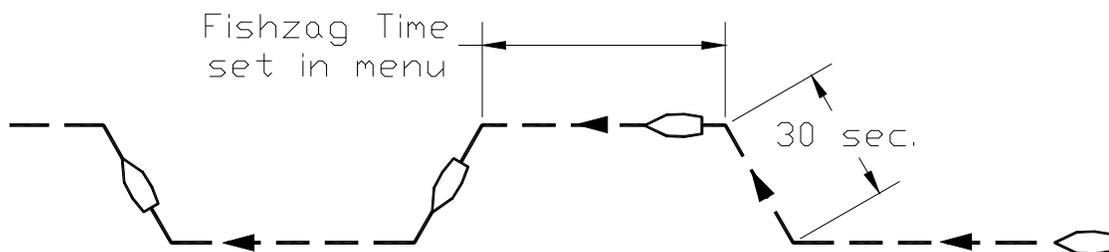


Figure 117 – Fishzag Turn

As its name implies, the Fishzag turn was developed specifically for fishing.

When this Special Turn is executed, the autopilot maintains the present course for the time interval specified by the Fishzag Timer in the Standby menu. Once the timer has expired, the autopilot will make a 60° course change in the direction specified when you pressed the **PORT** or **STARBOARD** button.

After 30 seconds, the autopilot will return to the original course, and start the timer over again. This time, when the timer goes off, the autopilot will make a 60° course change in the opposite direction. Again, after 30 seconds, the autopilot will return to the original course where the cycle repeats itself.

The Fishzag turn has the effect of dropping the fishing gear behind one side of the boat, and raising the gear slightly on the other side while the boat is turning. This has been shown to be an effective means of luring fish to strike.

To cancel the Fishzag turn, press the **TURN** button again, or switch modes.

Pretack (Preset-Tack)



Figure 118 – PreTack Turn Query

Preset-Tack Special Turns are only available in **AUTO** mode, and if the Vessel type in the Dockside Setup menu is set to Sail.

You may activate this turn at any wind angle, and you may do it in either direction.

The Preset-Tack turn will turn the boat the number of degrees specified by the Preset Tack Angle in the Wind menu, in the direction you select by pressing the **PORT** or **STARBOARD** button.

This turn is used when you need to Tack (or Gybe) while sailing the boat at various specific Headings, rather than tacking/gybing to a specific wind angle, as is done in **WIND & WIND-Points** modes using those modes' **Tacking** or **Gybing** functions (which operate very much like Special Turns do).

For example, you could use the Preset-Tack turn when tacking back & forth across the CMG upwind you're trying to achieve, if you didn't want to have to tack from Close Haul to Close Haul.

You can also use it to change the wind angle back & forth by a specific number of degrees (i.e., the Preset Tack angle) on the same tack: for example, to go from 060° to 110° Port, and back again, if Preset Tack is 050°.

Note: none of the Special Turns – including Preset-Tack – are available in **WIND** or **WIND-Points** modes.

ⓘ Caution! You should keep in mind that none of the special safety features of **Tacking & Gybing** turns apply to Preset-Tack turns.

Be especially careful as to at what wind angle, and in what direction, you do a Preset-Tack turn!

The Preset-Tack turn should initially be tested out in light to moderate winds and calm seas, in order to understand how it works on your boat.

Multiple Control Heads & Auxiliary Controllers

Two additional Control Heads or Auxiliary Controllers may be added to the standard P Series system. These may be any combination of Control Heads, CR-203 Handheld Remotes, and TS-203 Fixed Remotes.

Only one Control Head or Auxiliary Controller may be *In-command* at any given time. When the autopilot system is first powered on, the main Control Head (connected to J11 of the SPU), will always be In-command.

The other Control Heads and/or Auxiliary Controllers are said to be Repeaters. As a Repeater, the unit simply repeats the display information from the In-command unit, but does not affect the operation of the autopilot. You can always tell whether a particular unit is a Repeater, because it will display a large letter 'R' in the upper right corner of the display.

Command can be transferred from an In-command unit to a Repeater. To do so, press and hold the **PORT** and **STARBOARD** buttons on the Repeater until the audible alarm beeps and the 'R' disappears. The Repeater now becomes the In-command unit, and the previous unit becomes a Repeater.

Station Lock/Unlock

Setting the Station Lock parameter in the Standby menu to Lock prevents any of the Repeaters from being able to take command.

When the parameter is set to Lock, a key icon will be shown in the upper right corner of the display (to the left of the 'R' on Repeaters).

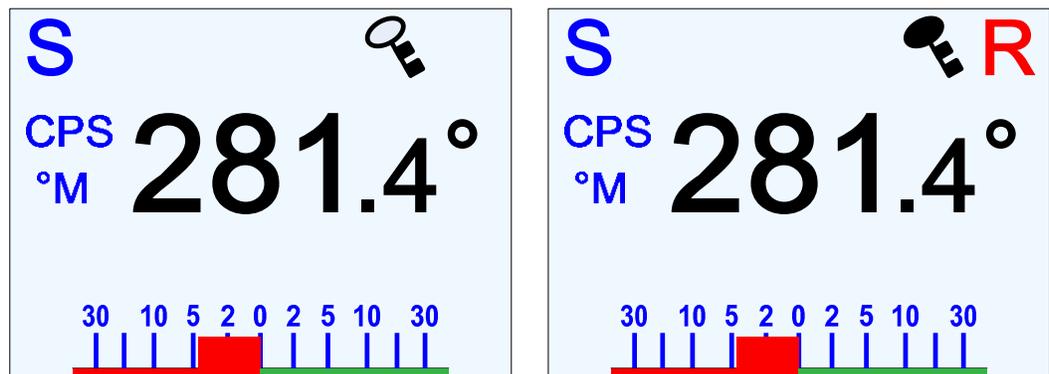


Figure 119 – Station Lock Icon on In-Command (left) and Repeater Auxiliary Control Head (right)

The key icon will either be outlined or filled-in. The unit In-command will display an outlined key icon. Repeater units, except for the main Control head, will display a filled-in key icon, indicating that they are locked out and so cannot take command.

The main Control Head always shows the outlined key icon, even when it is a Repeater, because you can always take command back with the main Control head. The ability to take command unconditionally at the main Control head is an important safety feature.

Important! *If your P Series system is equipped with Jog Steering Controls, you must be aware that they can be activated any time the autopilot is turned on. They can **not** be locked out. Ensure that appropriate measures are taken to ensure that they cannot be activated by accident.*

Watch Alarm & External Alarm

The Watch Alarm is a special timer that is built into the P Series autopilot.

It measures how long it has been since any of the buttons on the Control Head have been pressed. If the time exceeds the amount set for the Watch Alarm parameter in the Standby menu, an alarm is set off, to alert the helmsman & crew.

The External Alarm output from the SPU is meant to be used to drive some type of audible or visual indicator outside the SPU – a buzzer or horn, a red light, etc. – when the SPU detects an error condition that boat’s helmsman &/or crew should be alerted about.

Configuring the Watch Alarm

There are two ways that the Watch Alarm feature can be configured:

- 1) When the Watch Alarm’s timer expires, an alarm message will appear on the Control Head, and the audible alarms on the Control Head & in the SPU will turn on.

To use the Watch Alarm this way, the Alarm O/P parameter in the Dockside Setup menu (see below) must be set to “none”, “Sw’d B+” & “all”, or “Sw’d B-” & “all”.

- 2) The Watch Alarm operates exactly in the same manner as above, but in addition, if the alarm is not reset (by pressing the **Fn** button) within 30 seconds, an external alarm connected to the SPU will be activated. The external alarm can be used to alert the whole ship’s crew that the helm may be unattended.

To use the Watch Alarm this way, the Alarm O/P parameter in the Dockside Setup menu must be set to “Sw’d B+” and “Watch”, or “Sw’d B-” and “Watch”. You must also have a compatible external alarm connected. See **External Alarm Output** on page 76 for more details.

Configuring the External Alarm

The value of the Alarm Output parameter in the Dockside Setup menu controls which outputs from the **J2 – DRIVE OUTPUTS** connector will be used to activate the external alarm.

- 1) In Dockside Setup, highlight the “Alarm O/P” menu line, and use the **COURSE CHANGE** knob to select the Alarm O/P that you want to use.

The screenshot shows a menu with a blue header 'D' and a red 'X' icon. The menu items are listed in two columns. The 'Alarm O/P' item is highlighted with a blue background.

D	
An. Comp Type	Mag
Compass Setup	Fn
Drive Setup	Fn
Exit	Fn
Alarm O/P	Sw'd B-

Figure 120 – External Alarm Configuration

- When set to “None”, the external Alarm Output is deactivated.
- When Set to “Sw’d B-”, the Switched B- output on **J2** will be used to activate the External Alarm (wired per Figure 58 or Figure 60 in the **Installation** chapter).
- When Set to “Sw’d B+”, the Switched B+ output on J2 will be used to activate the External Alarm (wired per Figure 59 or Figure 61).

- 2) Press the **Fn** button. A new screen will appear. This is where you choose whether you want to activate the External Alarm Output for all alarms and error messages, or just when the Watch Alarm has not been answered.

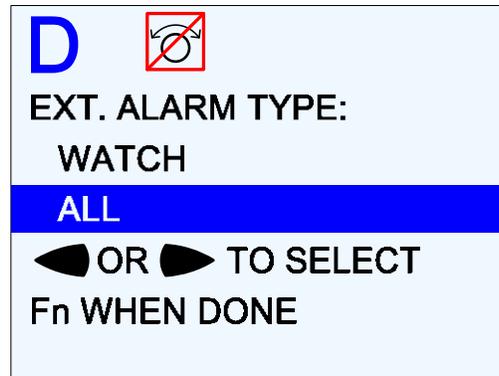


Figure 121 – External Alarm Type Configuration

Note: the autopilot will not allow you to change the Alarm O/P without choosing either "Watch" or "All".

- 3) Press the **Fn** button to get back to the Dockside Setup menu. You can now move the highlight to a different parameter.

Using the Watch Alarm

Once the Watch Alarm occurs, it can only be reset by pressing the **Fn** button.

The Watch Alarm timer is controlled by the Watch Alarm parameter in the Standby menu. The value may be adjusted from "OFF" (Watch Alarm completely inactive) to 30 minutes, in 1-minute increments.

The Watch Alarm parameter is password protected. The autopilot will not allow you to change the Watch Alarm timer without first correctly entering a password.

There are a few key points to remember about passwords:

- 1) For safety reasons, only authorized personnel should be allowed to know or change the Watch Alarm password.
- 2) The password consists of a button sequence entered on the Control Head, from 0 to 10 button presses in length. We recommend choosing a password with at least a 5-button sequence.
- 3) All of the buttons, except the **STANDBY** button, may be used for the password sequence, and a button may be used more than once in the sequence.
- 4) The **STANDBY** button is reserved to signify the end of the sequence (like the ENTER key on a computer).
- 5) The autopilot is shipped from the factory with a null password – just press the **STANDBY** button when prompted for the password.
- 6) Once you have created a password, test it out – to be sure it works. Then write it down on a piece of paper or in a log book, and store the paper/logbook somewhere safe – in case you forget the password!

Changing the Password

As mentioned above, the autopilot is shipped from the factory with a null password – which means that you would simply push the **STANDBY** button, when prompted by the “Password?” query in the box that pops up when you try to change the Watch Alarm Timer (see next page). To prevent unauthorized personnel from tampering with the Watch Alarm, it is recommended that you change the password from the default null password.

You may also wish to change the password on a regular basis, for security reasons.

To change the password, enter the old password when prompted, but instead of pressing the **STANDBY** button to enter/confirm the password, press the **Fn** button at the same time as you press the **STANDBY** button. The autopilot will respond with a “New Password?” query:

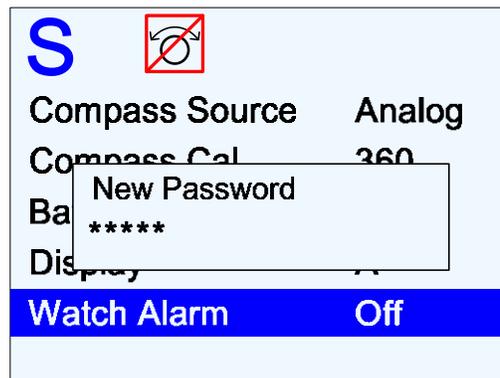


Figure 122 – New Password Pop-Up Window

Now enter a new button sequence, finishing with the **STANDBY** button. Once the **STANDBY** button has been pushed, the autopilot will store the new password sequence in its memory and the pop-up window will disappear.

Important! *Be sure to record the new password sequence in a secure place, in case it is forgotten!*

The password can be changed as often as desired.

- When you are entering a password – either when changing it, or to change the Watch Alarm timer – there is no way to do a “backspace” or “delete”, if you happen to press a wrong button. But you can just press the **STANDBY** button, which will result in a “Password Error” message; you can then enter the correct password.
- If you have forgotten the password, *and* can not find the piece of paper you wrote it down on (... the “safe place” was *too* safe ...), you can reset it back to the factory default null password, as follows:

⇒ In Dockside Setup, move to the Reset menu line, then press & hold the **STANDBY** button, and then press & hold the **Fn** button, then release both.

Unlike the full “factory reset” that the Reset menu line is usually used for (and *only* when absolutely necessary – see below & page 87!), the **STANDBY & Fn** combination resets only the Watch password.

❗ *Be careful not to press the **Fn** button first!*

If you do that, you will reset everything in the autopilot back to the factory defaults – which means that you will have to re-do Compass & Drive Setup, and again change any parameters you have adjusted (Rudder Gain, etc.) from the factory defaults, during Sea Trials & normal operation.

Entering the Password

When you attempt to change the Watch Alarm timer, (highlight “Watch Alarm” in the Standby menu, then turn the COURSE KNOB in either direction), the Control Head responds by showing a special pop-up box on the LCD screen with the query “Password?”

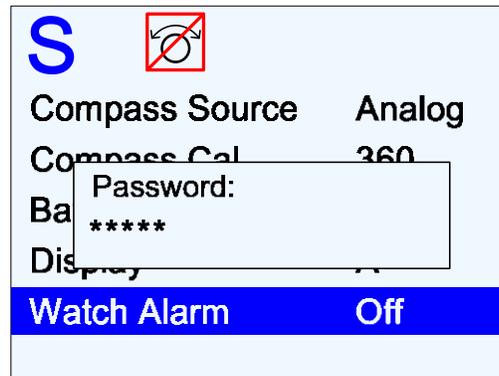


Figure 123 – Password Query Pop-Up Window

Now enter the password by pressing each button in the sequence. An asterisk (*) will appear on the screen as each button is pressed.

Complete the sequence by pressing the **STANDBY** button.

If the sequence is correctly entered, the pop-up box will disappear, and you will be able to use the COURSE KNOB to change the value of the Watch Alarm timer.

If the sequence was not correctly entered, “Password Error” is displayed. Try entering the password sequence – correctly! – again.

- The pop-up box will remain until the correct password sequence is entered, or the Standby menu times out, or you exit it with a double-press of the **STANDBY** button, or you press and hold the **STANDBY** button to shut the autopilot off.

Care & Maintenance

Care & Maintenance

The Commander P2 and Commander P2VS Autopilot Systems have been designed to provide many years of reliable service.

Periodic care and maintenance will help to ensure the longevity of your autopilot.

Cleaning and Appearance

Both the Control Head and SPU should be carefully cleaned with a damp cloth and mild soap. This is particularly important for the LCD screen overlay.

i *Do not use abrasive cleaners or chemicals.*

The Control Head is designed to be weatherproof and splash resistant, but it should not be immersed in water for a prolonged period of time.

Environments exceeding a maximum temperature of 140° F (60° C) or below a minimum temperature of 5° F (-15° C) **MUST BE AVOIDED.**

Exposure to prolonged direct sunlight should be avoided in order to prevent damage to the electronics and housing, and UV-induced fading of the LCD.

Periodic Checks

After the first six months of operation a thorough examination of the entire Autopilot system **MUST BE UNDERTAKEN.**

Electrical & Mechanical Checks

All electrical connections, cables, clamps, mounting brackets, and mechanical connections (e.g., the Rudder Follower Unit's connection to the rudder post) must still be secure.

An ANNUAL inspection should be undertaken thereafter.

Hydraulic Checks

It is unfortunate – but true – that *no hydraulic system is always trouble-free!* Hydraulic oil under even mild pressure can find its way through any weak spot – often holes too small to see with the naked eye.

And so, regular inspection & maintenance is *always* needed.

In particular, all hydraulic pumps, hoses, fittings & joints must be regularly inspected for leakage, cracks or loose mounting, and for correct tightness of all the fittings & joints.

A very good, yet easy, test for leaks is to check the oil level at the reservoir (or the highest helm pump in your steering system). If the level constantly goes down, there are quite probably some leaks in the system; the most likely culprits are the hoses, joints & fittings.

Manual Steering Operation

The most basic check is to see if your manual steering system is working. Be sure to test it at each steering station on the boat, one at a time.

- 1) Check that when turning the helm to Starboard, the rudder actually moves so as to turn the boat to Starboard.
- 2) Check that when the helm is turned to Port, the rudder moves to turn the boat to Port.

Air Trapped in the Hydraulic System

Following the initial installation and bleeding of a hydraulic pump – or after repairing a leaking hose/fitting/etc. – some residual air may remain suspended in the hydraulic oil.

During the first few weeks after installation or repair, this air will gradually bleed out through the header tank or the highest helm pump, and as a result the hydraulic fluid level may go down. Check the fluid level several times during this period, and add more oil as required.

Fuse Replacement

There are two fuses used on the SPU.

Replace fuses only with the same type and rating, as per the table below.

ⓘ *Should a fuse blow, determine the cause before replacing!*

To replace a fuse, the clear plastic cover over the SPU's Diagnostic section must be removed. To do so, gently pry up the center portion of the plastic rivets which fasten the cover to the SPU's case; be careful not to lose any of the plastic pieces.

After the fuse(s) are replaced, the cover must be re-installed, and remain in place during normal operation.

Designator	ComNav Part Number	Generic Description <i>Manufacturer(s) & Part Number(s)</i>
F1	60810012	3.15 A Medium Time Delay, 125V or better, 5 x 20mm (DIN 41571, IEC 127)) <ul style="list-style-type: none"> <i>Bussman GMC 3.15A</i>
F2	60810009	20A, Non-Time Delay, 125V, 1/4" x 1-1/4" <ul style="list-style-type: none"> <i>Bussman ABC-20</i>

Table 10 – Fuse Replacement Guide

Appendices

Appendix 1

Interfacing to a PC

The P Series SPU can be connected to a desktop or laptop Personal Computer, for Navigation control & monitoring purposes, using the **J9 – NAV I/O** connector (see **Navigation Data** on page 79).

The PC would typically be running a Navigation program (e.g., programs from Fugawi™, Jeppesen®/Nobeltec®, Rose Point Navigation, or similar), and/or Hyperterminal® or some other “dumb terminal” program.

For best results, connections to a PC should be done with a suitable RS-422 electrical interface. The interface can be either on a dedicated add-in board, or via an external convertor box; typically, the latter convert between RS-422 and either RS-232, or to USB, so that the signals may be connected to the PC’s standard serial “COM” or USB ports (see the next section for more details on using these types of PC ports).

Various brands of RS-422 interface boards and convertor boxes are available; contact your ComNav Dealer for details.

PC COM Ports

It is also sometimes possible to wire the standard serial I/O ports on a PC directly to the SPU’s **J9 – NAV I/O** connector.

These PC serial ports – commonly referred to as “COM ports” – always use RS-232 signal levels.

Connecting a PC’s COM port directly to **J9** mixes the RS-232 electrical levels of the COM port with the RS-422 levels of the SPU’s NMEA 0183 NAV port. In general, doing this is not recommended – but it does work well in many cases. However, it should be noted that there is some risk of increased electrical noise in the autopilot–PC system, due to the use of the COM port’s Signal Ground as the ‘B’ signal – which may create a partial “ground antenna” effect in the system wiring.

***Note:** should you encounter any problems, RS-422 ⇔ RS-232 convertors are available – or, even better, RS-422 ⇔ USB convertors. Contact your ComNav Dealer for details.*

PC COM ports typically use a DE9⁴² male (a “pin type”, aka DE9-P) connector; older PCs (especially desktops) may use a DB25 (aka DB25-P) connector instead.

- Laptop PCs usually have only one COM port.
- Desktop PCs sometimes have 2 (or more) COM ports, although newer models usually only have one COM port. It is possible to add COM ports to most desktop PCs, by adding a suitable “COM Port Expander” card.
- Many newer PCs – desktops & especially laptops – do not have a real “COM port”. Instead, they only have one or more USB ports.

For such PCs, an external convertor (a USB “COM Port”, aka “USB Serial Adapter”) will be required. These convertors typically have a USB “A size” plug at one end, and a DE9 male connector at the other end. They come with driver software to allow application programs to access the USB ports as “virtual COM ports”

Most brands of these convertors should work fine. A number of different ones have been tried at ComNav, all with success.

⁴² These connectors are often referred to as “DB9”, but that is technically incorrect. The letters “B” & “E” designate the shell sizes; a B shell is much bigger than an E shell – it can hold up to 25 pins, compared to 9 or 15 pins in an E shell.

DE9 Connection

To connect to a PC serial port (or to the DE9-P end of a USB-to-Serial adapter), connect the wires from **J9** to a DE9 female connector (a “socket type”, aka DE9-S) as follows:

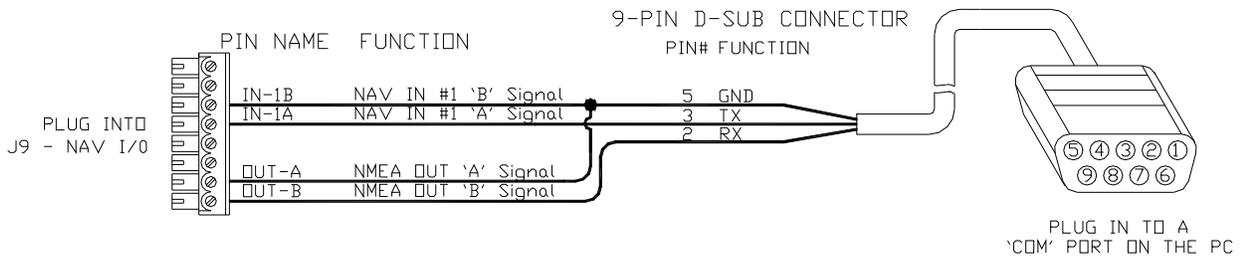


Figure 124 – Connection to a PC with a DE9-S Connector

DB25 Connection

If the PC has a DB25 COM port connector, connect the wires from **J9** to a DB25 female connector (aka DB25-S) as follows:

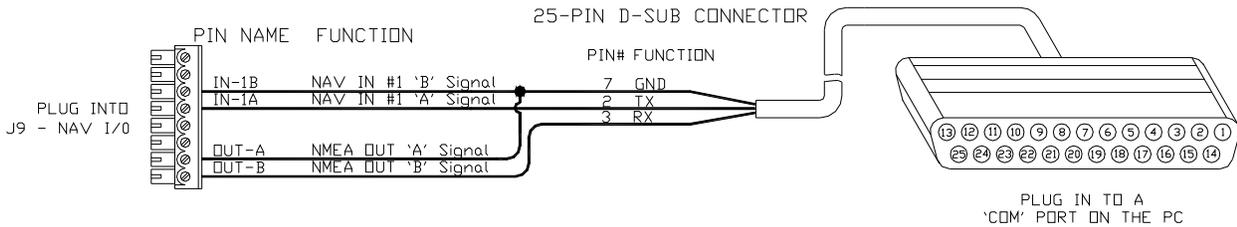


Figure 125 – Connection to a PC with a DB25-S Connector

Note: none of the other RS-232 signals that are normally available on PC COM ports (& sometimes used by the ports &/or equipment connected to them), such as the “status” & “flow control” signals (RTS, CTS, DSR, DCD, etc.), can be connected to the SPU.

You must also set the COM port’s Baud Rate to 4800, and the serial format to 8 data bits, no parity, one Stop bit.

Please also keep in mind the data bandwidth considerations discussed in **Bandwidth of an NMEA Compass Connection** on page 95.

D Connector Pinouts

The figure below shows the pin-numbering scheme for a PC COM port's DE9 & DB25 connectors. This figure can be looked at in two ways:

- It is the view from the outside of the PC, looking at the pins of the male connector (DE9-P or DB25-P) in the PC, typically located somewhere on the back panel of the PC.
- It is also the view of matching female connector (aka a “socket type” – a DE9-S or a DB25-S) when looking at the *back* – i.e., wire side – of that connector, on the cable that plugs into the PC's male connector.

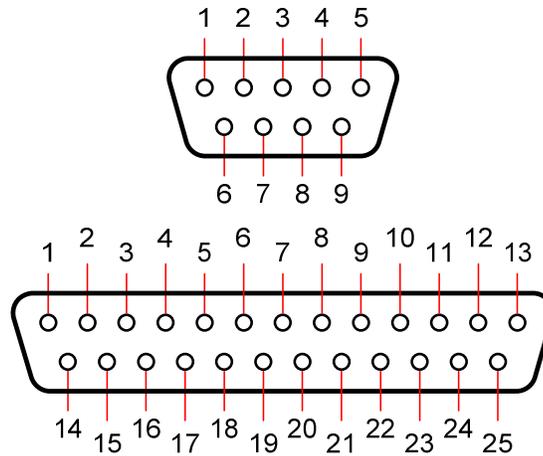


Figure 126 – DE9 & DB25 Pin Numbering

Note: older PCs may have another DB25 connector – but it is a female type (DB25-S), and is the Parallel Printer (aka “LPT”) port.

Appendix 2

NMEA 0183 Sentences Accepted and Transmitted by the Autopilot

P Series Autopilot Systems receive and transmit serial data in NMEA 0183 format, in compliance with Version 3.00 of the NMEA Standard.

Sentences Accepted

The autopilot accepts the following NMEA 0183 sentences, from NMEA *Talkers*:

Sentence	Description	Data Used
*APA	Autopilot Sentence "A"	Cross-Track Error, Arrival Status, Bearing from Origin to Destination, Waypoint ID
*APB	Autopilot Sentence "B"	Cross-Track Error, Bearing from Origin to Destination, Waypoint ID, Course to Steer
*BOD	Bearing – Origin to Destination	Bearing from Origin to Destination, Waypoint ID
*BWC	Bearing & Distance to Waypoint	Range to Destination
*GLL	Geographic Position (Latitude & Longitude)	Latitude, Longitude
*HDG	Heading, Deviation & Variation	Magnetic Heading, Magnetic Variation
*HDM	Heading, Magnetic	Magnetic Heading
*HDT	Heading, True	True Heading
*HSC	Heading Steering Command	Course to Steer
*MWV	Wind Speed & Angle	Wind Angle, Wind Speed
*RMA	Recommended Minimum Specific Loran-C Data	Speed
*RMB	Recommended Minimum Navigation Information	Cross-Track Error, Waypoint ID, Range to Destination, Bearing from Origin to Destination, Arrival Status
*RMC	Recommended Minimum Specific GNSS Data	Speed, Magnetic Variation
*VBW	Dual Ground / Water Speed	Speed
*VHW	Water Speed & Heading	Speed
*VTG	Course Over Ground & Speed	Speed
*VWR	Apparent Wind Speed & Angle	Wind Angle, Wind Speed
*VWT	True Wind Speed & Angle	Wind Angle, Wind Speed
*XTE	Cross-Track Error	Cross-Track Error

Table 11 – NMEA 0183 Sentences Accepted by the Commander P2

- The ``*` in front of the sentences indicates that the Talker Identifier is always ignored.
- All sentences can have checksums, or not. Sentences which have invalid checksums will be ignored.

Sentence & Data Priority

A number of the various data values used by the autopilot can be received in one or more different sentences. For example, Boat Speed can be received in VTG, VHW, VBW, RMA or RMC.

If a particular data value is received in more than one sentence, then the value in the highest-priority sentence will be the one used by the autopilot.

- An item of data will be taken from the sentence without a checksum only if the data is not found in any sentences with a valid checksum – even if the no-checksum sentence is of higher priority, per the table below – than the with-checksum sentence(s).
- In some cases, if the invalid-checksum condition persists long enough, an INVALID CRS DATA, SPEED DATA, &/or HEADING error will occur (see page 196).

It is also worth noting that the names of some sentences reflect the data (or else just the “main data”) in that sentence. For example, the BOD sentence contains “Bearing Origin to Destination” data.

But that does not always mean that those “named” sentences are the only source for that data – for example, BOD data could also come from the APB sentence.

Sentence Priority <i>(higher to lower)</i>	Sentence	Data Used
1	*MWV	True or Apparent Wind Angle & Speed
2	*VWR	Apparent Wind Angle & Speed ①
3	*VWT	True Wind Angle & Speed ①
4	*GLL	Latitude & Longitude
5	*RMC	Latitude & Longitude, Boat Speed, Magnetic Variation
6	*RMA	Latitude & Longitude, Boat Speed ③
7	*APB	Cross-Track Error, Arrival Circle Entered, Bearing Origin to Destination Magnetic or True, Waypoint ID, Bearing Present to Destination Magnetic or True, Heading to Steer Magnetic or True
8	*RMB	Cross-Track Error, Waypoint ID, Range , Bearing Present to Destination True, Arrival Circle Entered or Perpendicular Passed at Waypoint
9	*HSC	Heading to Steer Magnetic and True ②
10	*APA	Cross-Track Error, Arrival Circle Entered, Perpendicular Passed at Waypoint, Bearing Origin to Destination Magnetic, Waypoint ID

Sentence Priority <i>(higher to lower)</i>	Sentence	Data Used
11	*XTE	Cross-Track Error
12	*BOD	Bearing Origin to Destination Magnetic & True, ② Waypoint ID
13	*VBW	Boat Speed ③
14	*VHW	Boat Speed ③
15	*VTG	Boat Speed ③
16	*BWC	Bearing Present to Destination Magnetic & True, ② Distance to Waypoint Nautical Miles, Waypoint ID (Bearing & Distance are on a Great Circle)
17	*HDG	Magnetic Heading, Magnetic Variation ④
18	*HDT	True Heading
19	*HDM	Magnetic Heading

Table 12 - NMEA Sentence Priority

- ① The different units of Wind Speed (Knots, m/s & Km/H) present in these sentences are all used in Wind calculations by the autopilot.
- ② Magnetic Variation (for setting a Course, but not for Heading) is calculated from the True & Magnetic values in these sentences.
- ③ The units of Boat Speed (Knots & Km/H) are present in these sentences, but do not matter to the autopilot, since all displays & functions related to Boat Speed are used without units.

If both Knots & Km/H values are present in the sentence (in the case of VTG, VHW, VBW only, since the speed values in RMA & RMC are always in Knots), the Knots value is used.

If the VBW sentence is being used, the Longitudinal Water Speed value (in Knots) from it is used for Boat Speed.

The Speed values in RMA, RMC & VTG are Speed Over Ground; the others are relative to the water.

- ④ Magnetic Variation from this sentence is used only for Heading, not for Course.

Note: the VWR, VWT, APA & HDM sentences are classified as “not recommended for new designs” in NMEA 0183 Version 3.00. However, they have been included in the P Series “accepted” list to allow use with existing equipment that might still use them.

Sentences Transmitted

Heading & Status

In normal operation, the P Series SPU outputs NMEA 0183 formatted data at 4800 Baud, on the **OUT A & B** pins of the SPU's **J9 – NAV I/O** connector. This data may be used by NMEA 0183 Listeners, or may be used to observe & record the autopilot's operational data for diagnostic purposes, while the system is running.

The sentences output by the P2 are:

- HDG (Heading, Deviation & Variation) – output 9 times per second.
- HDM (Heading, Magnetic) or HDT (Heading, True) – output 9 times per second.
Which one is being put out depends on the type (Magnetic or True) that the autopilot is currently using for the source of Heading. If the source is NAV1 or NAV2, it also depends on the setting of the NMEA Heading Type parameter.
- HTD (Heading/Track Control), or PCMNS (ComNav-proprietary Status sentence, see below) – output once per second.
HTD is output for all Vessel Types, except sailboats; PCMS is output for sailboats only.
- The Talker Identifier is AP, in all cases.
- All sentences have valid checksums.

The P2VS is the same, except that it never outputs HTD – instead, it always puts out PCMNS, for all Vessel Types.

Heading Output

Here is one second of typical Heading output, on a P2VS system equipped with an RFU.

The boat's current Heading is ~347° Magnetic, from an Analog compass.

```
$APHDG,346.5,,,,*5C
$APHDM,346.5,M*37
$APHDG,346.6,,,,*5F
$APHDM,346.6,M*34
$APHDG,347,,,,*46
$APHDM,347,M*2D
$APHDG,347.1,,,,*59
$APHDM,347.1,M*32
$APHDG,346.7,,,,*5E
$APHDM,346.7,M*35
$APHDG,346.9,,,,*50
$APHDM,346.9,M*3B
$APHDG,347,,,,*46
$APHDM,347,M*2D
$APHDG,346.7,,,,*5E
$APHDM,346.7,M*35
$APHDG,346.9,,,,*50
$APHDM,346.9,M*3B
```

Status Output

PCMNS is an NMEA “proprietary” sentence – i.e., a sentence that can be output only by ComNav equipment⁴³. It carries “autopilot status” information, as follows:

Field #	1				2	3	4	5	6	7	8	9	10	11	
	a	b	c	d										e	f
<i>Example</i>	\$	P	CMN	S,	AP,	347,	346.1,	M,	0.6,	0.3,	347,	W,	L	*	03

The fields in this sentence are as follows (fields 1 – 10 are separated by commas, as shown):

- 1) The sentence lead-in:
 - a) \$ is the symbol that starts all NMEA 0183 Proprietary sentences
 - b) P identifies a proprietary sentence
 - c) CMN is the Manufacturer Mnemonic assigned to ComNav Marine Ltd.
 - d) S identifies this as a status sentence
- 2) Mode: SB ⇒ **STANDBY** mode, PS ⇒ **POWER STEER** mode, AP ⇒ **AUTO** mode, NA ⇒ **NAV** mode
- 3) Commanded Heading or Wind Angle, in degrees: 347°
- 4) Actual Heading or Wind Angle, in degrees: 346.1°
- 5) Type of Heading (M ⇒ Magnetic, T ⇒ True) or Type of Wind Angle (A ⇒ Apparent, T ⇒ True)
- 6) Commanded Rudder Angle: 0.6°
- 7) Actual Rudder Angle: 0.3°
- 8) ALC-corrected Heading: 347° (field is blank if ALC is not active)
- 9) W indicates that **WIND** or **WORK** mode is active (field is blank if mode not active)
- 10) L indicates that ALC is active (field is blank if ALC is not active, or if **WIND** mode is active)
- 11) Checksum:
 - e) * is the checksum delimiter
 - f) Checksum, as per NMEA 0183 Standard

Here are some examples of typical PCMNS outputs, on the same P2VS system as above.

- In **AUTO** mode, with ALC on, & a Commanded Heading of 347°:
\$PCMNS,AP,347,346.7,M,5.1,0.3,347,,L*50
- In **WIND** mode (the Vessel Type is set to Sail), with a Commanded Wind Angle of 89° Starboard, and the current wind angle 89° Apparent, Starboard:
\$PCMNS,AP,89,89,A,5.1,0.3,,W,*6F
- In **WORK** mode (the Vessel Type is set to Stern), with ALC On, & a Commanded Heading of 347°:
\$PCMNS,AP,347,347,M,0.3,0.3,347,W,L*18

When the autopilot powers up, a “start up” variant of PCMNS is output (& repeated several times), showing the version number & timestamp of the SPU firmware:

```
$PCMNS,ST,P2VS_SPU 1.00 Aug 27/2009 11:41:11*42
```

When the autopilot is powered up in Dockside Setup, another variant of PCMNS is output, & repeated until Dockside Setup is exited:

```
$PCMNS,FS,,M,0,0.3,,,*2A
```

⁴³ ... in theory ... or at least by equipment which conforms to the NMEA Standard!

Configuration Save & Restore

You can save most of the autopilot's system configuration on an external device – typically a PC running HyperTerminal, set to “capture text to file”. This is done with PCMNC proprietary sentences transmitted on the **OUT A & B** pins of the SPU's **J9 – NAV I/O** connector.

These sentences can also be sent back to the autopilot (via **J9**, on the **In 1A & B** pins) from a PC, using HyperTerminal's “send text file” function. This allows the configuration to be “restored” at any time you want to – for example, if a brand new system is installed for any reason, or if you want to have different configurations for different usage of the boat.

- Not all of the configuration can be restored. For safety reasons, the configuration of the drive system can not be restored – so you will have to repeat the **Drive Setup** procedure.

As well, the file stored on the PC is a plain ASCII text file, and so can be edited with any “plain text” editor, if you wish to change anything in the autopilot's configuration &/or parameters. The full set of configuration sentences is listed in the following table.

The Configuration line in the Dockside Setup menu is how you use the Save/Restore Configuration feature:

- Idle is the default value – no transfer in either direction.
 - Rx begins the Restore process. Then, when you press the **Fn** button, a script will guide you through the steps of sending ComNav configuration sentences to the SPU.
 - Tx begins the Save process. When you then press the **Fn** button, output of the configuration sentences will begin.
- ⇒ A Save can also be initiated from the PC: send a PCMNS with a “START” ID to the SPU, when Configuration is Idle.
- See **Appendix 1** for details on wiring, Baud rates, etc.

All PCMNC sentences are structured in accordance with the NMEA standard format:

- \$PCMNC,id,field,data,field,data,...*<Checksum>

Each sentence starts with \$PCMNC, followed by the sentence's ID, then the associated field names & data values, and then an NMEA checksum; commas separate the ID, fields & values, and the checksum.

All the sentences in the table below are output during a Save sequence, with all fields (in the order listed) and data values. Note that some fields are in pairs – shown as Field 1 & 2 below; if there's only one field for a particular item, then Field 2 is shown as “–”. The table lists all possible values for each field; numerical field values are shown as the range of allowable values, or as “x” or “x.y”, with the implicit units of the value in parentheses where applicable.

In a Restore sequence, the sentences, and their fields & data, can be input in any order; sentences &/or fields can be skipped, if desired.

Here is an example of a PCMNC “save” output, on a P2VS system equipped with an RFU and a 45° Compass Transducer:

```
$PCMNC,CMPS,NV2,0,0,0,0,NAV,DONE*31
$PCMNC,CMPS,NV1,0,0,0,0,NAV,DONE*32
$PCMNC,CMPS,DIG,25,1702,1785,7853,7848,FIX,DONE*6D
$PCMNC,SYS,VER,1.00,2,VSL,STRN,AOP,NONE,TYP,NONE*17
$PCMNC,USR,HS,DIG,TN,1,WT,0,ZG,60*79
$PCMNC,AUTO,LP,8,3,A,8,HP,5,3,A,5*74
$PCMNC,AUTO,TC,2,PD,0,SP,10,*5F
$PCMNC,NAV,NAV1,LMT,0.25,MAX,60,AUTO,BOTH,DIR,N*73
$PCMNC,WIND,FT,0.2,TA,0.50,0.50,PR,100,SR,NAV2,A*58
$PCMNC,WIND,TP,45,60,90,120,160*65
$PCMNC,WORK,TRM,OFF,TPT,2,SCL,1*75
$PCMNC,END*
```

ID	Field 1	Field 2	Description	Notes
CMPS	NON, ANA, DIG, NV1, NV2, NM1, NM2	–	Compass Source	Required
	x.y (degrees)	–	Offset of the selected Compass Source	Required <i>This & the next 5 fields must follow the source field in the same order listed here.</i>
	0 – 255	–	Compass sine gain	Required
	0 – 255	–	Compass cosine gain	“
	0 – 255	–	Compass sine offset	“
	0 – 255	–	Compass cosine offset	“
	NONE, MAG, CNF, FIX, FLT, HRS, NAV	–	Compass Type	“
	NONE, DONE	–	Compass compensation status	Optional
SYS	VER	x.yy	Version number	Output only
	x	–	SPU Model	2 = P2 or P2VS, 3 = P3
	VSL	DSPL, SEMI, PLAN, STRN, SAIL, LRGB	Vessel Type	LRGB is only valid for P3
	AOP	NONE, SWB+, SWB-	External alarm setting	
	EXT	WATCH, ALL	External alarm type	Not present if AOP = NONE
	TYP	NONE, ONOFF, PROP	Thruster Type	
	TPT	x.y (no units)	Thruster Speed Trip Point	Not present if TYP = NONE
	MIN	x (percent)	Minimum thruster output	“
	MAX	x (percent)	Maximum thruster output	“
	SCL	1 – 3	Thruster Gain	“
THRUST	TYP	ONOFF, PROP	Thruster Type	Not present if SYS/TYP = NONE
	TPT	x.y (no units)	Thruster Speed Trip Point	“
	MIN	x (percent)	Minimum thruster output	“
	MAX	x (percent)	Maximum thruster output	“
	SCL	1 – 3	Thruster Gain	“
USR	HS	ANA, DIG, NV1, NV2, NM1, NM2	Heading Source	

ID	Field 1	Field 2	Description	Notes
	TN	1 - 5	Default Turn	0 = Circle 1 = U-Turn 2 = M.O.B. 3 = Dodge (only valid for P3) 4 = Fishzag 5 = Pretack
	WT	xx (seconds)	Watch Alarm Time	
	ZG	xx (minutes)	Fishzag Time	
AUTO	LP	–	Lo Steering Parameters:	
	x	–	Rudder Gain	
	x	–	Counter-Rudder	
	x or A	–	Sea State	
	x.y	–	Turn Rate	
	HP	–	Hi Steering Parameters:	
	x	–	Rudder Gain	
	x	–	Counter-Rudder	
	x or A	–	Sea State	
	x.y	–	Turn Rate	
AUTO	TC	xx	Time const for large boat steering	not valid on P2 or P2VS
	PD	xx	Counter helm for large boat steering	not valid on P2 or P2VS
	SP	NAV1, NAV2, VANE	Speed Source	
	xx.x (no units)	–	Hi-Lo Trip Point	Optional
NAV	NAV1, NAV2	–	NAV Source	
	LMT	x.xx (no units)	XTE Limit	
	MAX	x.yy (degrees)	Maximum XTE course correction	
	HUSH, MANU, AUTO	–	Handling of the waypoint arrival state	
	XTE, CTS, BOTH	–	NAV steering correction method	
	DIR	N, R	XTE Sense	
WIND	FT	0.2 – 20 (minutes)	Wind Alarm Delay	
	TA	–	Tack alarm xte limits	
	x.y (degrees)	–	PORT tack limit	
	x.y (degrees)	–	STBD tack limit	
	PR	x.y (degrees)	Preset Tack Angle	

ID	Field 1	Field 2	Description	Notes
	SR	NAV1[,T], NAV2[,T], VANE	Wind Source	if `T` is omitted, wind is assumed to be Apparent
WIND	TP	–	Wind-tack points:	
	x.y (degrees)	–	Tack	
	x.y (degrees)	–	Close Reach	
	x.y (degrees)	–	Beam Reach	
	x.y (degrees)	–	Broad Reach	
	x.y (degrees)	–	Gybe Hold	
WORK	TRM	OFF, AUTO	Auto-trim configuration for WORK mode	
	TPT	xx.y (no units)	WORK mode speed trip point	
	SCL	–	WORK mode rudder scale	
END	–	–		End of the configuration. When this ID is received during an “Rx” transfer, the Vessel Configuration will return to Idle
START	–	–		Start of the configuration. When this ID is received while in the Dockside Setup menu, if Configuration is not “Rx”, a “Tx” transfer to the NAV1 port will start automatically. <i>This does not ever initiate an “Rx” transfer, however.</i>

Table 13 – Configuration Save & Restore Sentences

Appendix 3

Error Messages

There are a number of different error messages in the P Series autopilot system. These messages are displayed on the Control Head screen, and are usually accompanied by an audible alarm.

Critical Errors

The following messages indicate a serious problem. Operation of the autopilot cannot continue until the problem is resolved.

Message	Description
AUX.STATION ERROR	One or more of the auxiliary Control Heads or Handheld Remotes connected to the SPU can not be used in the P Series system. Typically, this is caused by using Heads or Remotes with firmware versions that are too much older than the SPU's, and hence incompatible with it. ❖ <i>Contact your ComNav Dealer for a Firmware Upgrade.</i>
BATTERY TOO HIGH	Battery voltage has risen above ~40 VDC. ❖ <i>Check all wiring and charger systems.</i>
FAULTY HEAD	The main Control Head is not responding to the SPU. ❖ <i>Check all wiring.</i>
FUSE F2 FAULTY	Fuse F2 on the SPU has blown. This fuse supplies current to the drive outputs. ❖ <i>Check all wiring and verify that all output loads (solenoids, pump motors, etc.) are within the specifications given for the SPU.</i> ❖ <i>Replace the fuse with the same type only.</i>
LOW BATTERY	The autopilot has detected that the battery supply voltage is less than ~10 VDC, which is too low to continue safe operation. ❖ <i>Check all wiring and the battery(ies).</i>
ROM ERROR	The autopilot has detected a problem in its program memory. ❖ <i>Return the unit to your ComNav Dealer for repair.</i>
RFU NOT FOUND	The autopilot cannot detect the presence of a Rudder Follower Unit ⁴⁴ . ❖ <i>Check all RFU wiring.</i> ❖ <i>If no faults are found, the RFU may be defective. Contact your ComNav Dealer for repair advice or replacement.</i>

Table 14 – Critical Error Messages

⁴⁴ This message does not apply to P2VS systems running with the VFRU feature active.

Severe Errors

The following messages are “severe” errors. Typically, these messages describe a condition that prevents normal operation in the current mode, but operation in other modes may still be possible.

These error messages may be temporarily suppressed by pressing the **Fn** button. They are automatically cancelled when the condition that caused them is removed.

Message	Description
COMPASS ERROR	The autopilot cannot read the Analog compass specified in the Standby menu. ❖ <i>Check compass wiring.</i>
FAULTY AUX #1 FAULTY AUX #2	The SPU has detected a problem in communicating with the Control Head connected to J12 – Aux1 (or J13 – Aux 2). ❖ <i>Check all wiring.</i>
HIGH TEMPERATURE	The SPU circuitry has become too hot, typically due to excessive current demands. ❖ <i>Check all wiring and verify that all output loads (solenoids, pump motors, etc.) are within the SPU's specifications.</i> ❖ <i>Check that the SPU has adequate ventilation.</i>
INVALID CRS DATA	Valid NMEA Course data has not been received at NAV1 or NAV2 for ~28 seconds.
INVALID SPEED DATA	Valid NMEA Speed data has not been received at NAV1 or NAV2 for ~28 seconds.
	❖ <i>Check that the Navigation System sending the data is turned on, and configured & functioning properly.</i> ❖ <i>Check the wiring between the system and the SPU.</i>
INVALID HEADING	If an Analog Compass is selected as the Compass Source in the Standby menu, this message indicates that the signals from the compass are faulty. ❖ <i>Check the wiring between the Compass and the SPU.</i>
	If an NMEA 0183 Compass or other source of Heading data (NAV1 or NAV2 in the Standby menu) is selected as the Compass Source, this message indicates that no valid Heading sentences have been received for ~3 seconds. ❖ <i>Check that the device is turned on and functioning properly.</i> ❖ <i>Check the wiring between the device and the SPU.</i>
NO NAV DATA	The SPU has not been able to detect, for ~32 seconds, at the Nav Source specified in the Nav menu, the NMEA 0183 navigation information it needs to operate in NAV mode.
NO SPEED DATA	The SPU has not been able to detect, for ~32 seconds, at the Speed Source specified in the Auto menu, the NMEA 0183 Speed data it needs to operate in AUTO or WORK mode.
	❖ <i>Check that the device sending the data is turned on and functioning properly.</i> ❖ <i>Check the wiring between the device and the SPU.</i>

Table 15 – Severe Error Messages

Warnings

The following errors are warnings. Operation of the autopilot continues normally.

The error messages may be temporarily suppressed by pressing the **Fn** button. Most are automatically cancelled when the condition that caused them is remedied.

Message	Description
COURSE ERROR	The boat is in AUTO , WORK or NAV modes, and has been off the Commanded Heading by more than 20° for more than ~32 seconds. Or, it is in WIND mode, and the angle of the wind has been more than 20° different than the Commanded Wind Angle, for more than ~32 seconds. ❖ <i>Adjust steering parameters to correct this condition.</i>
EEPROM ERROR	The system has detected a non-fatal error in the non-volatile memory in the SPU. ❖ <i>Contact your ComNav Dealer for repair service at your earliest convenience.</i>
NO AUX #1 NO AUX #2	The system previously detected an auxiliary Control Head connected to J12- AUX 1 (or J13- AUX 2), but cannot detect it now. ❖ <i>Check all wiring.</i>
INVALID COMMAND	The button just pressed is not valid at the current time.
SPI ERROR	The Control Head currently plugged in to the Main Head connector (J12- CONTROL HEAD) is running firmware that is older than (although still usable with) the SPU's firmware. ❖ <i>The Head's firmware should be upgraded to match the SPU's, as soon as possible.</i>
TURN RATE HIGH	The measured rate of turn of the boat has exceeded the Turn Rate set in the Auto menu.
TURN RATE LOW	The measured rate of turn of the boat is much lower than the Turn Rate set in the Auto menu.
WATCH ALARM	The watch alarm timer has timed out. ❖ <i>Press the Fn button to reset the timer.</i>
WAYPOINT ARRIVED	The Navigation System used in NAV mode has informed the autopilot that the boat has entered the arrival circle around the active waypoint.
WIND SHIFTED	The autopilot has detected that the wind has shifted by more than the "Wind Shift" value in the Wind menu, for a period of time exceeding the "Wind Shift Delay" set in the Wind menu.
WIND SENSOR ERROR	The Wind Speed is less than about 3 Knots. Or, when using an NMEA source, there has been no wind speed &/or direction data for ~2 seconds.
XTE OVER LIMIT	The Cross-Track Error limit set in the Nav menu has been exceeded. ❖ <i>Adjust the Nav menu parameter, if desired.</i> ❖ <i>Check if "XTE Sense" in the Nav menu is set correctly.</i>
DATABASE CHANGED	The SPU has detected (during power-on) that one of the parameters stored in its non-volatile memory is out of range, and has reset the value to the factory default. ❖ <i>Press the Fn button to clear the warning.</i>

Table 16 – Warning Messages

Appendix 4

Auxiliary Head / Remote Power On

The P Series SPU is shipped from the factory configured so that power can only be turned on or off from the main Control Head. The main Control Head is designated as that which is plugged into the SPU receptacle labelled "**J11 - CONTROL HEAD**". However, the SPU can also be configured so that it can be turned on or off by a Control Head plugged into the receptacles **J12 – AUX 1** or **J13 – AUX 2**.

The following instructions detail how this is accomplished.

- 1) Remove the wiring cover from the SPU and unplug all wiring connectors.
- 2) Remove ten sheet metal screws around the edges of the SPU. These screws secure the top portion of the SPU enclosure.
- 3) Lift the top portion of the SPU enclosure off and set it aside. The top of the printed circuit assembly will be visible.
- 4) On the lower right side of the printed circuit assembly are two right-angle pin headers. They are labelled JP1 and JP2. On each header is a shorting shunt.
- 5) Change the position of the shunts as shown in the pictures below. JP1 determines whether power can be turned on from the Controller attached to **J13 – Aux 2**, while JP2 determines whether power can be turned on from the Controller attached to **J12 – Aux 1**.

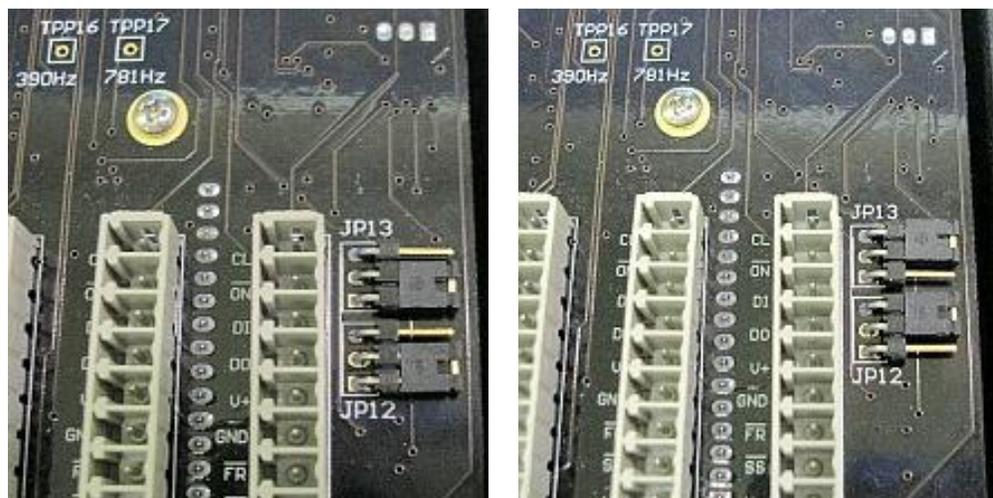


Figure 127 – JP12 & JP13 in Factory Default Position (left) and After Moving Shunts (right)

- 6) Replace the SPU enclosure top and secure it with ten sheet metal screws.
- 7) Replace all wiring plugs and the wiring cover.

You will now be able to turn on power from the auxiliary heads simply by pressing the **STANDBY** button. Note that the SPU always powers on in **STANDBY** mode, with the main Control Head in command, regardless of which station was used to turn the power on. If power was turned on from one of the auxiliary stations, then in order to use that station, you must first take command by pressing the **PORT** and **STARBOARD** buttons.

Note: Power cannot be turned on from a CR-203 or TS-203 Remote.

Appendix 5

Diagnostic LEDs

The Signal Processor Unit is equipped with a number of Light-Emitting Diode (LED) lamps that can assist in trouble-shooting should a problem arise with the autopilot system. To observe the LEDs, remove the metal cover on the Diagnostic section.

LED	Description
ALARM	On whenever there is an alarm condition on the SPU. Lights in conjunction with the audible alarm.
BATT PWR	A general indication of the Battery Power supplied to the SPU. Should be on whenever the autopilot is turned on.
DRV PWR	An indication of the power available for the output Drive. Drive Power should be brightly lit whenever the autopilot is on. If it is off, check fuse F2.
VCC	VCC is the voltage supplying the logic circuits on the SPU. The voltage is nominally 5.25 VDC, and can be measured at testpoint TP3 with respect to ground (GND).
SW'D B+	This indicator will be on whenever the Switched B+ output is turned on.
SW'D GND	This indicator will be on whenever the Switched Ground output is turned on.
M1/PORT	For systems that utilize Solenoid steering valves, this LED will be lit whenever the solenoid is activated. For Reversing Motor systems, this LED will be shut off whenever the motor is activated in one direction (which direction depends on how the reversing motor was plumbed in and wired).
M2/STBD	For systems that utilize Solenoid steering valves, this LED will be lit whenever the solenoid is activated. For Reversing Motor systems, this LED will be shut off whenever the motor is activated in the opposite direction to the M1 output.
NMEA 0183 IN #1	This LED will be lit whenever the autopilot receives serial data on the NAV1 input. Note that this indicator only shows that data was received. It does not mean that the data received is valid. Typically, this LED will flash at a rate of about once per second for regular data from a GPS or Chartplotter; it will flash at a rate of about 10 times per second when connected to a heading source such as an NMEA compass. If the LED does not flash and you are sure the sending device is sending data, try reversing the wires from the device connected to J9 – NAV I/O .
NMEA 0183 IN #2	This LED operates identically to the NMEA 0183 IN #1, but shows the reception of data for the NAV2 input.
NMEA 0183 OUT	This LED flashes whenever NMEA 0183 serial data is sent out of the SPU. During normal operation, this LED will flash at a rate of about ten times per second.
ComNav Network RX	This LED is reserved for possible future use.
ComNav Network TX	This LED is reserved for possible future use.

Table 17 – Diagnostic LEDs

Appendix 6

Upgrading Firmware

The P Series Advanced Autopilot Systems are the result of extensive development and testing programs.

ComNav is constantly doing research and development related to our Autopilot Systems. From time to time, this can result in new features and benefits that can be incorporated into an existing system installation, in the field – by a ComNav Dealer, or even by you, if you have the requisite technical skills.

This is done with a Firmware Upgrade Kit (PN 30110011). The kit contains the required cable, instructions and a CD with the latest firmware & an easy-to-use program to install the Upgrade.

Contact your ComNav Dealer for more information.

Important! *Be sure to read all of the documentation accompanying the Firmware Upgrade Kit, so that you understand all of the operational and performance changes that may occur as a result of the Upgrade.*

Transferring the System Configuration & Parameters

After doing a Firmware Upgrade, it is not necessary to repeat everything you did when you installed the system originally – **Compass & Drive Setup** procedures, parameter adjustments during Sea Trials, and so on.

The full configuration of the system in a Commander P2 SPU running firmware versions 2.00, 2.10, 3.00, or 3.03-3.0A will be automatically converted to work with version 4.00, and so will the current values of all parameters in the operating mode menus.

i *Upgrading versions older than 2.00 will require re-doing the full setup process.*

Appendix 7

General Specifications

Parameter	Specification
Dimensions	
SPU	257 x 184 x 78 mm (10.1 x 7.3 x 3.1")
Bracket Mount Head	157 x 118 x 73 mm (6.2 x 4.6 x 2.9") @ 20° max tilt – add 28 mm (1.1") in width for bracket knobs
Surface Mount Head	156 x 113 x 24 mm (6.1 x 4.4 x 0.9") – add 11 mm (.43") for Control Knob & 29 mm (1.1") behind surface to clear rear of Head (not incl. cable)
Flush-Mount Head	165 x 122 x 12 mm (6.5 x 4.8 x .47") – add 11 mm (.43") for Control Knob & 41 mm (1.6") behind surface to clear rear of Head (not incl. cable)
Display	
Monochrome Head	Sunlight viewable high contrast QVGA (320x240), white LED backlight
Colour Head	Sunlight viewable high resolution QVGA (320x240) TFT display with cold-cathode fluorescent backlight (400 Cd/m ² typ.)
Operating Voltage	11 to 30 VDC
Power Consumption	
SPU	200 mADC (all outputs off)
Control Head	Monochrome: 80 mADC (max), Colour: 350 mADC (max)
Drive Output	20 Amps (max)
Navigational Interface	
NAV1 input	NMEA 0183 compliant, optically isolated, 4800 Baud
NAV2 input	NMEA 0183 compliant, optically isolated, auto-baud detecting, 4800 & 9600 Baud
NMEA 0183 output	Heading (10x per second) & Autopilot status (1x per second), NMEA 0183 compliant, RS-422 compliant, RS-485 compliant, 4800 Baud, 8 data bits, no parity, one stop bit
Course Detection	0.1°
Course Resolution	
AUTO mode	1°
NAV mode	0.1°
External Rudder Angle Indicator	Supports up to five 500µA instruments
Jog Steering Control Input	Yes
Rudder Follower Input	1.0 – 4.0 VDC centered at 2.5 VDC.
Control Head cable length	7.6 metres (25') standard Custom lengths up to 15 metres (50') available

Table 18 – General Specifications

Compass Safe Distances

The following Compass Safe Distances were determined using a UKAS calibrated 23 Axis Magnetometer, for both standard compasses and steering/emergency compasses.

ComNav PN	Description	Standard Compass Limit 5.4%<i>H</i>	Steering Compass Limit 18%<i>H</i>
20110006 20110009	Signal Processing Unit (SPU) P2 & P2VS	28 cm	16.5 cm
20110002 20110003 20110010 20110011	Control Head P2 & P2VS	32 cm	21 cm
20310025	TS-203 Fixed Remote	31 cm	18 cm
20310003	Jog Steering Control with two sets of switches	13 cm	8 cm
20330008	Medium Duty Rotary Rudder Follower Unit	20 cm	8 cm
20330012	Heavy Duty Rotary Rudder Follower Unit	62 cm	40 cm

H = horizontal flux density in μT

Table 19 – Compass Safe Distances

Warranty Information

Limited Warranty Agreement

Congratulations! You have purchased sophisticated and sensitive marine equipment (the "Equipment") manufactured by ComNav Marine Ltd. of #15 - 13511 Crestwood Place, Richmond, British Columbia, Canada, V6V 2G1 ("ComNav").

LIMITED ONE YEAR WARRANTY

ComNav warrants to the Purchaser, provided that the recommended installation and maintenance procedures set forth in the manual that has been provided with the Equipment (the "Manual") have been followed, and subject always to the other provisions of this Agreement, that the Equipment is free from defects in workmanship and materials under normal use and service and will perform substantially in accordance with the specifications set forth in the Manual for a period of one (1) year from the date of purchase of the Equipment by the Purchaser.

EXTENDED THREE YEAR LIMITED WARRANTY

If:

- a) the Equipment is installed:
 - i. by an authorized ComNav Dealer; or
 - ii. by someone other than an authorized ComNav Dealer, and such installation has been inspected by an Authorized ComNav Dealer;

and

- b) the Limited Warranty Registration Card has been returned to ComNav within 14 days of the date of purchase of the Equipment by the Purchaser with Part I thereof having been completed by the Purchaser, and with the Extended Limited Warranty Card having been completed and signed by an authorized ComNav Dealer and returned to ComNav within 14 days of that inspection;

then:

ComNav warrants to the Purchaser that the Equipment is free from defects in workmanship and materials under normal use and service and will perform substantially in accordance with the specifications set forth in the Manual for a period of three (3) years from the date of purchase of the Equipment, subject to the other provisions of this Agreement.

NO OTHER WARRANTIES

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, COMNAV DISCLAIMS ALL OTHER WARRANTIES AND CONDITIONS, EITHER EXPRESSED OR IMPLIED, STATUTORY OR OTHERWISE WITH RESPECT TO THE EQUIPMENT, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR THE ORDINARY PURPOSES FOR WHICH THE EQUIPMENT IS USED OR FITNESS FOR A PARTICULAR PURPOSE AND ANY OTHER OBLIGATIONS ON THE PART OF COMNAV, ITS EMPLOYEES, SUPPLIERS, AGENTS, OR REPRESENTATIVES.

NO LIABILITY FOR CONSEQUENTIAL DAMAGES

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL COMNAV, ITS EMPLOYEES, SUPPLIERS, OR REPRESENTATIVES BE LIABLE FOR ANY DAMAGES WHATSOEVER, INCLUDING WITHOUT LIMITATION DAMAGE FROM COLLISION WITH OTHER BOATS OR OBJECTS, INJURY TO ANY PERSON OR PERSONS, DAMAGE TO PROPERTY, LOSS OF INCOME OR PROFIT, BUSINESS INTERRUPTION, OR ANY OTHER CONSEQUENTIAL, INCIDENTAL, RESULTING PUNITIVE, OR SPECIAL DAMAGES ARISING OUT OF THE USE OF OR INABILITY TO USE THE EQUIPMENT, INCLUDING THE POSSIBLE FAILURE OR MALFUNCTION OF, OR DEFECTS IN THE EQUIPMENT, OR ANY PART THEREOF, EVEN IF COMNAV HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME STATE/JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO THE PURCHASER.

REMEDIES NOT TRANSFERABLE

The Purchaser's remedies under this Agreement only apply to the original end-user of the ComNav Equipment, being the Purchaser, and only apply to the original installation of the Equipment. The Purchaser's remedies under this Agreement are not transferable or assignable by the Purchaser to others in whole or in part.

NOTICE OF DEFECT

The Limited Warranty and the Extended Warranty will not apply with respect to any defective Equipment unless written notice of such defect is given to ComNav, by mail to the address for ComNav set forth above, or by facsimile to ComNav at 604-207-8008, and is received by ComNav within 10 days of the date upon which the defect first became known to the Purchaser. Notices sent by mail will be deemed to be received by ComNav on the seventh (7th) day first following the date of posting in North America and on the tenth (10th) day next following the date of posting anywhere else in the world. Notices sent by facsimile with appropriate answerback confirmation will be deemed to be received by ComNav on the date of transmission.

WARRANTY LIMITATIONS

Reversing Pumps & Motors, Hydraulic Linear Actuators, Watch Alarms & Motor Control boxes which may comprise part of the Equipment are warranted by ComNav for a period of two (2) years under the Extended Limited Warranty described above. All Remote Controls, Remote Cables, Jog Switches, Analog meters (rudder angle indicators), Rudder Angle Indicator Systems & Accessories, Magnetic Compasses & Accessories, Constant Running Pumps, Engine Driven Pumps, Hydraulic Manifolds & Hydraulic Steering are warranted by ComNav for a period of one (1) year under the Limited Warranty described above.

IMPLIED WARRANTIES

Any implied warranties with respect to the Equipment are limited to one (1) year. Some states/jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to the Purchaser.

CUSTOMER REMEDIES

ComNav's entire liability and the Purchaser's exclusive remedy against ComNav for the defective Equipment shall be, at ComNav's option, either: (a) repair or replacement of the defective Equipment under the warranties set forth in this Agreement, or, (b) refund of the purchase price of the defective Equipment, all pursuant to and in accordance with the conditions set forth below:

1. If the Equipment, or any part thereof, proves to be defective within the relevant warranty period, the Purchaser shall do the following:
 - a. contact ComNav by phoning 604-207-1600 to discuss the nature of the problem and obtain shipping instructions (many times a satisfactory solution can be reached without returning the item);
 - and
 - b. prepare a detailed written statement of the nature of the circumstances of the defect, to the best of the Purchaser's knowledge, including the date of purchase of the Equipment, the place of purchase, the name and address of the installer, and the Purchaser's name, address and telephone number to be sent, along with proof of purchase, to ComNav;
2. If upon examination by either ComNav or an authorized ComNav Dealer, the defect is determined to result from defective workmanship or material and if the defect has occurred within the relevant warranty period set forth above, the Equipment or the defective parts thereof shall be repaired or replaced, at ComNav's sole option, without charge, and shall be returned to the Purchaser at ComNav's expense. Return delivery will be by the most economical means. Should the Purchaser require that the Equipment be returned by a faster method, the costs incurred by the expedient delivery will be pre-paid by the Purchaser;
3. No refund of the purchase price for the Equipment will be made to the Purchaser unless ComNav is unable to remedy the defect after having a reasonable number of opportunities to do so. Prior to the refund of the purchase price, the Purchaser must submit a statement in writing from an Authorized ComNav Dealer that the installation instructions in the manual have been complied with in full and that the defect remains;
4. Warranty service shall be performed only by ComNav or an Authorized ComNav Dealer. Any attempts to remedy the defect by anyone else shall render the warranties set forth in this Agreement void;
5. Charges for overtime, standby, holiday and per diem will not be paid by ComNav and are specifically excluded from the warranties set forth in this Agreement. ComNav may, under special circumstances, and with ComNav's PRIOR approval, pay ONE TIME travel costs. Any cost of ferry, boat hire, or other special means of transportation must have prior approval from ComNav. ComNav reserves the right to refuse service charges in excess of one hour if the technician has not contacted ComNav's service department for assistance. Travel cost allowance to service certain Equipment with a suggested retail price of below \$2,500.00 (Canadian funds or equivalent) is not authorized. If repairs are necessary, these products must be forwarded to ComNav or an authorized ComNav Dealer at Purchaser's expenses and will be returned as set out in **CUSTOMER REMEDIES**, Item 2;
6. There shall be no warranty for defects in, or damages to, the Equipment caused by:
 - a. faulty installation or hook-up of the Equipment;
 - b. abuse, misuse or use of the Equipment in violation of the instructions set forth in the Manual;
 - c. shipping, alterations, incorrect and/or unauthorized service;
 - d. accident, exposure of the Equipment to excessive heat, fire, lightning, salt or fresh water spray, or water immersion except for Equipment specifically designed as, and stated in the Manual to be, waterproof. Water damage to the Equipment due to failure to cover unused receptacles is specifically excluded from any warranty set forth in this Agreement; and
 - e. improper or inadequate ancillary or connected equipment;
7. This warranty does not cover routine system checkouts, alignment, or calibration unless the service has been authorized in writing by ComNav PRIOR to its commencement;
- and
8. No Equipment shall be repaired or replaced under warranty if the serial number of that Equipment has been removed, altered or mutilated.

CHOICE OF LAW AND JURISDICTION

This Agreement is governed by the laws of the Province of British Columbia, Canada. If you acquired the Equipment outside of Canada, each of the parties hereto irrevocably attorn to the jurisdiction of the courts of the Province of British Columbia, Canada and further agree to settle any dispute, controversy or claim arising out of or relating to this Limited Warranty, or the breach, termination, or invalidity of it, by arbitration under the rules of the British Columbia International Commercial Arbitration Centre ("BCICAC"). The appointing authority shall be BCICAC [or, if the BCICAC shall cease to exist, the Chief Justice of the Supreme Court of British Columbia]. BCICAC shall administer the case in accordance with BCICAC Rules. There shall be one arbitrator and the place of arbitration shall be Vancouver, British Columbia.

The United Nations Convention on Contracts for the International Sale of Goods Act, S.B.C 1990, c. 20, and any other statutory enactments of the United Nations Convention on Contracts for the International Sale of Goods do not apply to this Agreement.

THIS LIMITED WARRANTY GIVES THE PURCHASER SPECIFIC LEGAL RIGHTS. THE PURCHASER MAY ALSO HAVE OTHERS WHICH VARY FROM STATE/JURISDICTION TO STATE/JURISDICTION.

This Agreement is a legal contract between you (the "Purchaser") and ComNav. By retaining the Equipment for more than thirty (30) days and/or installing and/or using the Equipment, the Purchaser agrees to be bound by the terms of this Agreement. If the Purchaser does not agree to be bound by the terms of this Agreement, the Purchaser may return the Equipment in the same condition in which it was received for a full refund (less shipping and handling costs) within thirty (30) days of purchase.

WARNING

The Equipment is an aid to navigation only. It is not intended or designed to replace the person on watch. A qualified person should always be in a position to monitor the boat's heading, watch for navigational hazards and should be prepared to revert to manual steering immediately if an undesired change of heading occurs, if the heading is not maintained within reasonable limits, or when navigating in a hazardous situation.

ALWAYS REMEMBER:

WHENEVER UNDER WAY, A QUALIFIED PERSON ON WATCH IS REQUIRED BY LAW.

Index

Index

– A –

Adjusting

Rudder Gain	105, 107
Seastate	107
Turn Rate	107

Advanced Operations	88, 114, 119, 122, 149, 151
---------------------------	-----------------------------

Alarm	77, 88, 113, 116, 122, 125, 132, 151, 164, 172, 173, 174, 175, 194, 221
-------------	---

Clear	116
External	76, 77, 88, 172, 173, 221
Output	88, 172

Auto/Nav Limits	124
-----------------------	-----

Automatic Leeway Correction (ALC)	23, 105, 129, 191, 222
---	------------------------

Auxiliary

Controllers	36, 59, 171
Heads	64, 201
Multiple Control Heads	171

– B –

Backlight Level	120, 221
-----------------------	----------

Basic Operation	86, 110, 112
------------------------------	--------------

Battery	46, 62, 63, 76, 83, 122, 197, 203, 221
---------------	--

Buttons

Auto Mode	113, 114, 125, 126, 156
Fn (Function) ..	86, 87, 88, 91, 92, 93, 99, 100, 101, 104, 113, 114, 116, 140, 151, 152, 153, 154, 157, 163, 172, 173, 174, 192, 198, 199, 221

NAV Mode ..	113, 114, 131, 132, 140, 160, 162
-------------	-----------------------------------

Port	93, 100, 113, 115, 160
------------	------------------------

Power On/Off	64
--------------------	----

Power Steer Mode	114, 123, 124
------------------------	---------------

Standby Mode	86, 88, 103, 112, 114, 117, 118, 119, 120, 173, 174, 175, 201
--------------------	---

Starboard	37, 101, 104, 113, 115, 119, 142, 143, 160, 162, 165, 166, 167, 168, 169, 170, 171, 201
----------------	---

Turn	4, 86, 113, 119, 155, 159, 160, 161, 162, 165, 167, 169
------------	---

– C –

Care & Maintenance	177, 179
--------------------------	----------

Compass

45° Transducer	34, 48, 52, 67, 68, 95, 99, 103, 192
----------------------	--------------------------------------

Calibration	120
-------------------	-----

Fluxgate	31, 32, 33, 48, 51, 52, 53, 66, 67, 94, 99, 100, 101, 103
----------------	---

Magnetic	33, 34, 48, 50, 68, 99, 104, 210
----------------	----------------------------------

Magnetic Sensor	33, 48, 50, 99, 104
-----------------------	---------------------

NMEA	96, 98, 101, 184
-------------------	------------------

Other types	34
-------------------	----

Safe Distance	3, 47, 208
---------------------	------------

Setup	88, 93, 99, 100, 101, 104, 221
-------------	--------------------------------

Source ..	67, 97, 103, 119, 120, 129, 193, 198, 221
-----------	---

Counter Rudder ...	105, 106, 107, 108, 127, 152, 222
--------------------	-----------------------------------

Course Change knob ...	103, 106, 113, 115, 116, 120, 122, 123, 125, 127, 128, 133, 152, 154, 155, 156, 157, 158, 160, 164, 172
------------------------	---

Course To Steer (CTS)	133, 134, 135, 138, 141, 144, 184, 194, 222
-----------------------------	---

Cross-Track Error (XTE)	131, 133, 134, 136, 137, 138, 139, 140, 141, 144, 187, 189, 194, 199, 222
-------------------------------	---

Limit	140, 194, 222
-------------	---------------

Sense	133, 141, 194, 199, 222
-------------	-------------------------

Steering	136
----------------	-----

– D –

Direct Bearing	135
----------------------	-----

Drives

A.C. Solenoids	74
----------------------	----

CT7	41, 59, 75, 82, 88, 129, 221
-----------	------------------------------

Drive Boxes	42, 63, 71
-------------------	------------

Linear Actuators or Mechanical Rotary Drives ..	71
---	----

Proportional Solenoid Valves 74
 Reversing DC Motor Hydraulic Systems 71
 Setup 71, 87, 88, 90, 91, 92, 145, 146, 147,
 174, 192, 205, 221
 Shunt-Field Reversing Motors 71

– E –

Exit 88, 104, 105, 221

– F –

Fuse Replacement 180

– G –

General Specifications 3, 207

Gybing 159, 161, 162, 170

– H –

Heading Rate Stabilizer ... 31, 32, 48, 52, 66, 93,
 94, 100

Hydraulic System 179

Bleeding 92

– I –

In-command 171

Installation .. 2, 41, 43, 44, 46, 48, 54, 62, 75, 83,
 103, 172

– J –

Jog Lever 124, 144

– L –

Language 88, 221

LCD Screen 112

LEDs, Diagnostic 203

– M –

Max Correction 137, 138, 141, 222

Menu

Auto .. 105, 107, 125, 126, 127, 151, 153, 167,
 198, 199

Dockside Setup 86, 87, 88, 90, 91, 93, 96,
 100, 101, 104, 151, 154, 164, 170, 172, 173,
 192, 195

Nav 133, 134, 135, 136, 138, 140, 198, 199

Power Steer 123, 124, 125, 132

Standby 118, 119, 221

Wind .. 154, 155, 156, 158, 159, 161, 163, 170,
 199

Work 152, 153

Mode

AUTO 20, 21, 22, 23, 105, 107, 108, 113, 114,
 125, 129, 133, 154, 170, 191, 207

Dockside Setup 86, 87, 88, 90, 91, 93, 96,
 100, 101, 103, 104, 113, 114, 116, 119, 124,
 151, 154, 164, 170, 172, 173, 174, 191, 192,
 195, 221, 222

NAV 22, 23, 37, 72, 78, 105, 113, 114, 120,
 123, 124, 125, 128, 131, 132, 133, 134, 135,
 136, 137, 139, 140, 141, 142, 144, 145, 146,
 151, 152, 191, 198, 199, 207

Highway Display 132

Nav Data Source 140, 198, 222

Waypoints 22, 131, 133, 134, 135, 138,
 139, 140, 141, 194, 199

Arrival 4, 140, 222

Automatic Sequencing 140

Manual Sequencing 140

Silent Sequencing 141

Parameter Set 92, 105, 107, 127, 128, 129,
 222

Speed Trip Point 107, 128, 129, 193

POWER STEER 4, 23, 113, 114, 123, 124,
 144, 151, 152, 191

STANDBY . 72, 86, 88, 99, 103, 104, 105, 112,
 114, 116, 117, 118, 123, 124, 125, 132, 135,
 136, 144, 146, 191, 201

WIND 154

Points of Sail 155, 156, 158, 164

Beam Reach Definition 156, 157, 164,
 195, 223

Broad Reach Definition 156, 157, 159,
 161, 164, 195, 223

Close Haul Definition . 155, 156, 159, 160,
 164, 170, 223

Close Reach Definition 156, 157, 159,
 161, 164, 195, 223

Gybe Hold Point Definition 155, 156, 161,
 162, 164, 195, 223

- Wind Source 154, 155, 163, 195, 223
 WIND-Points 156
 WORK . 78, 113, 114, 142, 144, 147, 151, 152,
 153, 165, 191, 195, 198
 Autotrim 152, 153, 223
 Rudder Bias 152, 153, 223
 Rudder Scale Factor 152, 153
 Trip Point 151, 152, 153
 Work Mode State 152, 153, 223
 Automatic 151
 Manual 152
-
- N –**
- Navigation Data 79, 133, 183
 Navigation System ... 22, 23, 128, 131, 133, 134,
 135, 136, 137, 138, 139, 140, 141, 153, 198,
 199
 NMEA 0183 22, 23, 29, 66, 79, 80, 81, 82, 95,
 98, 128, 129, 131, 141, 154, 163, 183, 187, 189,
 190, 191, 198, 203, 207
-
- P –**
- Power Steer Rudder Limits 124, 144
 Power Supply 46, 61, 62, 63
 Press
 and Hold 4, 86, 117
 and Maintain 4
 double 4, 103, 112, 152
-
- R –**
- Remote Power On 64, 201
 Remotes
 CR-203 37
 Fixed 36, 64, 171
 Handheld 36, 64, 171, 197
 TS-203 38, 64, 201
 Repeaters 171
 Reset 87, 174, 221
 RS-232 79, 82, 183, 184
 RS-422 79, 80, 81, 82, 183, 207
- Rudder Angle Indicator (RAI) 39, 59, 61, 70, 91,
 107, 116, 118, 123, 124, 128, 146, 147, 207,
 210, 222
 Offset 124, 222
 Rudder Follower (RFU) ... 19, 26, 29, 32, 35, 54,
 55, 56, 58, 61, 70, 83, 91, 124, 145, 147, 179,
 197, 207
 Heavy Duty Rotary 35, 55, 208
 Linear 36, 56
 Rotary 35, 54, 208
 Virtual (VFRU) 54, 90, 91, 116, 129, 145, 146,
 197
 Rudder Gain 105, 106, 107, 108, 126, 127, 152,
 153, 174, 194, 222
 Rudder Limits 142, 144, 222
-
- S –**
- Sea Conditions 108
 Sea Trials 18, 48, 87, 105, 106, 108, 174, 205
 Seastate 105, 107, 108, 128, 222
 Set North 93, 104
 Setup Procedures 50, 90
 Special Tools 46, 61
 Speed Source 98, 129, 153, 194, 198, 222
 Station Lock/Unlock 119, 171
 Status Signals
 1PPS 78, 147
 Speed Mode 78, 129
 Steering Parameters . 18, 87, 105, 126, 143, 194
 Steering System 19, 46, 61
-
- T –**
- Tacking 159, 160, 161, 170
 Thruster
 Assist 129, 222
 Gain 129, 193, 222
 Type 193
 Track 18, 20, 22, 23, 99, 105, 107, 123, 125,
 131, 132, 133, 134, 135, 136, 137, 138, 139,
 140, 141, 142, 143, 144, 145, 146, 187, 188,
 189, 190, 199
 Trim 22, 139

Turn Rate 105, 107, 108, 125, 128, 146, 152,
167, 194, 199, 222

Turns

Dodge .. 37, 124, 125, 132, 142, 143, 144, 146

Jog 125, 132, 144

Special Turns 113, 119, 152, 164, 165, 170

Circle Turn 167

Default Turn 113, 119, 165, 194, 221

Fishzag 122, 169, 194, 221

Fishzag Time 122, 169, 194

Man Overboard (M.O.B.) 168

Preset-Tack 164, 170, 194, 223

U-Turn 166, 194, 221

– U –

Upgrading Firmware 205

User Settings 221, 222, 223

– V –

Vector G2 & G2B GPS Compasses ... 29, 30, 48,
82, 95, 96, 97, 98, 101, 103

Vessel Type 87, 90, 114, 154, 190, 191, 193

– W –

Watch Alarm 76, 88, 122, 172, 173, 174, 175,
194, 210, 221

Wire Gauges 61

Settings & Notes

Settings & Notes

Default & User Settings

Once your Commander P2 system has been installed and set up correctly, make a record of all the settings for future reference, in the table below. (*Note: Default Value for P2VS is in bracket*)

Parameter	Range	Default Value	User Settings 1	User Settings 2
Dockside Setup Menu				
Reset	<i>press Fn button to do</i>	<i>n/a</i>		
Vessel type	Displ, Semi, Plane, Stern, Sail	Displ (Stern)		
An. Compass Type	None, Mag, Flux, Fixed, Float, HRS	None		
Compass Setup	<i>press Fn button to do</i>	<i>n/a</i>		
Drive Setup	<i>press Fn button to do</i>	<i>n/a</i>		
Exit	<i>press Fn button to do</i>	<i>n/a</i>		
Alarm O/P	None, SW'D B-, SW'D B+	None		
External Alarm Type	All, Watch	All		
Thrust Type (CT7)	None, On/Off, Prop.	None		
Thrust MIN (CT7)	0 – 70%	0		
Thrust MAX (CT7)	Thrust min to 100%	0		
Language	English, Français, Español, Íslenska, Italiano, Norsk	English		
Standby Menu				
Station Lock	Lock, Unlock	Unlock		
Default Turn	U-Turn, Circle, M.O.B., Fishzag, Pre-Tack	U-Turn		
Compass Source	Analog, Digital, NAV1,NAV2	NAV1		
Compass Cal	0 – 359° (<i>for all types</i>)	<i>Set at Runtime</i>		
Backlight Level	0 – 8	4		
Contrast	0 – 8 (<i>monochrome Control Heads</i>)	4		
Graphics <i>or</i> Display	Norm, Rev (<i>monochrome Control Heads</i>)	Norm		
	A, B, C (<i>colour Control Heads</i>)	A		
Watch Alarm	Off, 1 – 30 sec	Off		
Fishzag time	30 – 300 sec	60		
Battery	<i>Read only value</i>	<i>n/a</i>		

Parameter	Range	Default Value	User Settings 1		User Settings 2	
Power Steer Menu						
P.Str Rudder Limits	Off, or 5° up to physical limits from Dockside Setup	Off				
Auto/Nav Rudder Limits	Off, or 5° up to physical limits from Dockside Setup	Off				
RAI Offset	0° – 15°	0				
Auto Menu						
Rudder Gain	1 – 10	Lo: 8, Hi: 5	Lo:	Hi:	Lo:	Hi:
Counter Rudder	0 – 10	Lo: 3, Hi: 3	Lo:	Hi:	Lo:	Hi:
Seastate	Auto, 1 – 10	Lo: A, Hi: A	Lo:	Hi:	Lo:	Hi:
Turn Rate	0.1 – 10°/sec, or 0.1 – 12°/sec (if Vessel type is Sail)	Lo: 8, Hi: 5	Lo:	Hi:	Lo:	Hi:
Parameter Set	Lo, Hi, Auto	Auto				
Speed Trip Pt.	2 – 20	10				
Speed Source	NAV1, NAV2	NAV1				
ALC	On, Off	Off				
Thruster Assist (only if Thrust Type is not None)	Off, or 0.5 – 7 (in 0.5 steps)	Off				
Thruster Gain (only if Thrust Type is not None)	Low, Med, High	Low				
Nav Menu						
Nav Source	NAV1, NAV2	NAV1				
XTE Limit	0.01 – 3.0 (in 0.01 steps)	0.25				
Waypoint Arrival	Silent, Manual, Auto	Auto				
Correction	XTE, CTS, Both	Both				
XTE Sense	Norm, Rev	Norm				
Max Correction	30° – 90°	60°				

Parameter	Range	Default Value	User Settings 1	User Settings 2
Work Menu				
Rudder Bias	Auto/Nav rudder limit or physical limit	<i>Set at Runtime</i>		
Autotrim	Off, On	Off		
Work Trip Pt.	1 – 10	2		
Rudder Scale	0.25 – 3.00 (in 0.25 steps)	1.00		
Work Mode State	A_Rdy, A_On, M_Rdy, M_On	<i>Set at Runtime</i>		
Wind Menu				
Damping	0.5 – 10 sec	0.5		
Wind Source	Vane, NAV1A, NAV1T, NAV2A, NAV2T	Vane		
Wind Shift (alarm)	Off, 1° – 25°	Off		
Wind Shift Delay	2.0 – 20.0	2.0		
Preset Tack Angle	50° – 120°	90°		
Close Haul Def	30° – 54°	45°		
Close Reach Def	55° – 80°	60°		
Beam Reach Def	81° – 110°	90°		
Broad Reach Def	111° – 159°	120°		
Gybe Hold Point	160° – 170°	165°		

Table 20 – Default & User Settings

ComNav® Commander P2 Autopilot Operation — Quick Reference Guide

POWER ON/OFF

To **Power ON**, press  for 2 seconds.

To **Power OFF**, press  until **RELEASE** appears in display.

MODES

Any of these four primary modes may be entered at any time.

STANDBY — vessel is steered manually

(**S** is shown in upper left of display)

Press  for 2 seconds to switch to **STANDBY** mode.

POWER STEER — operator steers vessel with knob

(**P** is shown in upper left of display)

Press  for 2 seconds to switch to **POWER STEER** mode.

Use  or  or  to move rudder.

AUTO — autopilot steers to heading set by operator

(**A** is shown in upper left of display)

Press  for 2 seconds to switch to **AUTO** mode.

Use  to change course.

Press  for 3 seconds for **WORK** mode [non-sailboats]
or for **AUTO WIND** mode [sailboats only].

Use  or  to dodge obstacles.

NAV — autopilot steers to active GPS waypoint

(**N** is shown in upper left of display)

Press  for 2 seconds to switch to **NAV** mode.

Press  again to toggle to alternative **NAV** display.
(press it again to switch back to regular **NAV** display).

Press  for 3 seconds for **WORK** mode [non-sailboats]
or for **NAV WIND** mode [sailboats only].

Use  or  to dodge obstacles.

(**WORK** and **WIND** modes are described on other side)

MODE MENUS

◆ **Refer to Operation Manual when setting parameters** ◆

To enter or exit a mode's menu, double-press the corresponding mode key (as shown below).

Use  or  to select a parameter.

Use  to change the value of a parameter.

STANDBY menu ► double-press 

- Station Lock [Lock or Unlock]
- Default Turn [choose from any available]
- Compass Source [choose from any available]
- Compass Calibration [see Manual]
- Backlight Level [0 = Off, 8 = maximum]
- Contrast [monochrome only]
- Display [monochrome: Norm, Rev]
[colour: A, B, C]
- Watch Alarm [in minutes]
- Fishzag Time [in seconds]
- Battery [read only]

POWER STEER menu ► double-press 

- Standby/Power Steer Rudder & Remote Tiller Limits
- AUTO/NAV Rudder Limits
- Head's Rudder Angle Indicator Offset

AUTO menu ► double-press 

- (parameters marked with  have LO & HI speed values)
- Rudder Gain  [1 = minimum, 10 = maximum] ◆
 - Counter Rudder  [0 = minimum, 10 = maximum]
 - Seastate (Yaw)  [Automatic, or 1° – 10°]
 - Turn Rate  [degrees per second]
 - (Speed) Parameter Set [Lo, Hi, Auto]
 - Speed Trip Point [in Knots or Km/H, depends on sensor]
 - Speed Source [NAV1, NAV2, N2000, NX2]
 - Automatic Leeway Correction [On, Off]
 - Thruster Assist [Off, or trip speed: 0.5 – 7 (Kn or Km/H)]
 - Thruster Gain [Low, Medium, High]
(Thruster operation requires an enabled CT7 Interface)

NAV menu ► double-press 

- NAV Source [NAV1, NAV2, N2000, NX2]
- XTE (cross-track error) limit [nautical miles]
- Waypoint Arrival Sequencing [Manual, Auto, Silent]
- Correction [CTS, XTE, or Both]
- XTE Sense [Norm, Rev]
- Maximum Correction [30° – 90°]

ALARM CLEAR

Press  to clear an alarm.

ComNav® Commander P2 Autopilot Operation — Quick Reference Guide

WORK mode

(**Aw** or **Nw** is shown in upper left of display)

Caution! WORK mode should only be used by experienced operators who fully understand the operation of this mode.

WORK mode is engaged automatically at a set speed (see Work Trip Point in the Operation Manual), if the mode is activated by the vessel's operator.

WORK mode can also be engaged manually (see Manual).

Note: WORK mode is not available if **Vessel Type** in the DOCKSIDE menu is set to **SAIL**.

To activate WORK mode:

1. Switch to **AUTO** mode or **NAV** mode.
2. Press  for 3 seconds.

To de-activate WORK mode:

1. Press  for 3 seconds.

AUTO or NAV WIND modes

(**Aw** or **Nw** is shown in upper left of display)

Be sure to read the relevant sections of the Operation Manual prior to using a WIND mode.

Note: WIND modes are available only when **Vessel Type** in the DOCKSIDE menu is set to **SAIL** (a compatible wind speed transducer must also be connected to the autopilot).

To enter AUTO or NAV WIND mode:

1. Bring the vessel around so that the wind angle on the bow is between about 45° and 165° (Port or Starboard)
2. Switch to **AUTO** or **NAV** mode
3. Press  for 3 seconds

While in a WIND mode:

Use  to change angle to wind. Range is limited to between CLOSE HAUL and GYBE HOLD POINT settings.

Use  and  or  to TACK or GYBE.

Press  to switch to the alternative **AUTO WIND** mode (press it again to switch back to regular **AUTO WIND** mode).

To exit AUTO or NAV WIND mode:

1. Press  for 3 seconds.

DOCKSIDE menu

◆ Refer to Installation Manual when using this menu ◆

To enter the DOCKSIDE menu:

1. Begin with Power OFF.
2. Press  while holding both  and 
3. Release all buttons once the VERSION numbers are displayed.

Use  or  to select & highlight a parameter.

Use  to change value of selected parameter.

Press  to begin automated Setup Scripts:

- Reset [do not use unless advised by ComNav]
- Vessel Type [sets initial steering parameters]
- Analog Compass Type [choose appropriate one]
- Compass Setup [sets up Compass]
- Drive Setup [sets up rudder limits, etc.]
- Exit
- Alarm Output [sets External Alarm type]
- Thruster Type [choose appropriate one]
- Thruster Minimum [% of max. supply voltage]
- Thruster Maximum [% of max. supply voltage] (Thruster operation requires a CT7 Interface)
- Language [choose appropriate one]

To exit the DOCKSIDE menu:

Highlight **Exit** and press  (go to **STANDBY** mode)

or else press  until **RELEASE** appears in display.

(all settings are automatically saved on exiting)

This sheet contains summary information on how to set up and operate the Commander P2 autopilot.

This information should not be considered as a complete guide to setting up and operating the autopilot.

Be sure to read and understand the important safety and operational information presented in the *Commander P2 Installation & Operation Manual* before using the autopilot.

WARNING

This Autopilot is for navigation assistance only. Whenever underway, your vessel must always be under the control of a qualified and alert person who regularly and consistently ensures that the course and position of the vessel is correct and that the operating area is safe. You must always be in a position to resume manual control if the need to do so arises.